

Altistart 22

Soft start - soft stop unit

User manual

09/2015



The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Schneider Electric.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2013 Schneider Electric. All rights reserved.

Content

| | |
|---|----|
| Important Information | 4 |
| Before you begin | 5 |
| Documentation structure | 6 |
| Steps for setting up the soft starter (also refer to Quick Start guide) | 7 |
| Receiving and handling | 8 |
| Selection | 10 |
| Dimensions and weights | 14 |
| Mounting | 17 |
| Mounting - Fan option | 20 |
| Thermal protection | 22 |
| Wiring | 26 |
| Wiring - power terminals | 32 |
| Wiring - control terminals | 35 |
| Wiring - in line connection - application diagram | 38 |
| Display terminal | 42 |
| Remote keypad display - option | 44 |
| Programming | 45 |
| List of parameters | 48 |
| Parameter settings | 49 |
| Configuration menu (ConF) | 50 |
| Settings menu (SEt) | 51 |
| Advanced adjustments menu (AdJ) | 53 |
| Advanced settings menu (SEt2) | 55 |
| Advanced protections menu (PrO) | 56 |
| Advanced IO menu (IO) | 60 |
| Advanced communication menu (COP) | 62 |
| Advanced monitoring menu (SUP) | 63 |
| Utility menu (UtIL) | 64 |
| Command channel | 65 |
| Modbus Function | 68 |
| Connection to RS485 bus | 73 |
| Maintenance | 74 |
| Diagnostics / Troubleshooting | 75 |
| Parameter Index and Modbus addresses | 77 |
| Annex 1: UL508 schematics | 82 |

Important Information

NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a Danger or Warning safety label indicates that an electrical hazard exists, which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates an imminently hazardous situation, which, if not avoided, **will result** in death or serious injury.

WARNING

WARNING indicates a potentially hazardous situation, which, if not avoided, **can result** in death, serious injury or equipment damage.

CAUTION

CAUTION indicates a potentially hazardous situation, which, if not avoided, **can result** in injury or equipment damage.

NOTICE

NOTICE, used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, **can result** in equipment damage.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this product.

© 2013 Schneider Electric. All Rights Reserved.

Before you begin

Read and understand these instructions before performing any procedure with this soft starter.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Only appropriately trained persons who are familiar with and understand the contents of this manual and all other pertinent product documentation and who have received safety training to recognize and avoid hazards involved are authorized to work on and with this soft starter system. Installation, adjustment, repair, and maintenance must be performed by qualified personnel.
- The system integrator is responsible for compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of all equipment.
- Many components of the product, including the printed circuit boards, operate with mains voltage. Do not touch. Use only electrically insulated tools.
- Do not touch unshielded components or terminals with voltage present.
- AC voltage can couple voltage to unused conductors in the motor cable. Insulate both ends of unused conductors of the motor cable.
- Before performing work on the soft starter system:
 - Disconnect all power, including external control power that may be present.
 - Place a "Do Not Turn On" label on all power switches.
 - Lock all power switches in the open position.
- Install and close all covers before applying power voltage.

Failure to follow these instructions will result in death or serious injury.

DANGER

UNINTENDED EQUIPMENT OPERATION

- Read and understand this manual before installing or operating the Altistart 22.
- Any changes made to the parameter settings must be performed by qualified personnel.

Failure to follow these instructions will result in death or serious injury.

WARNING

DAMAGED SOFT STARTER EQUIPMENT

Do not operate or install any soft starter or soft starter accessory that appears damaged.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

WARNING

LOSS OF CONTROL

- The designer of any control scheme must
 - consider the potential failure modes of control paths and, for certain critical control functions,
 - provide a means to achieve a safe state during and after a path failure.
- Examples of critical control functions are emergency stop and overtravel stop.
- Separate or redundant control paths must be provided for critical control functions.
 - System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link. (1)
 - Each implementation of an ATS22 soft starter must be individually and thoroughly tested for proper operation before being placed into service.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

(1) For additional information, refer to NEMA ICS 1.1 (latest edition), "Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control".

Documentation structure

The following Altistart 22 technical documents are available on the Schneider Electric website (www.schneider-electric.com).

User manual

This manual describes how to install, commission, operate, and program the soft starter.

Quick Start guide

This document (S1A10388) is delivered with the soft starter, and you can download it on www.schneider-electric.com.

Quick Start annex

Annex for UL 508 with SCCR (Short Circuit Current Ratings) and branch circuit protection).

This document (S1A14738) is delivered with the soft starter, and you can download it on www.schneider-electric.com.

Steps 1 to 4 are performed with the power off.



1. Receive and Inspect the soft starter

- Check that the soft starter reference on the nameplate is similar to the purchase order.
- Remove the Altistart 22 from packaging and check that it has not been damaged

2. Check the line voltage compatibility

- Check that the line voltage, and control voltage are compatible with the soft starter (pages [11](#) to [13](#)).

3. Mount the soft starter vertically

- Mount the soft starter in accordance with the instructions in this document (page [17](#)).

4. Wire the soft starter (page [29](#))

- Connect the motor, ensuring that its connections correspond to the voltage.
- Connect the line supply, after making sure that the power is off.
- Check and Connect the control supply on CL1-CL2

5. Configure the soft starter

(page [45](#))

- Power on control, and do not give a start command.
- Adjust **u** **in** line voltage.
- Adjust **in** motor rated current.

6. Start

Receiving and handling

Introduction

The ATS22 offers acceleration and deceleration control of standard three-phase asynchronous induction (squirrel cage) motors. The ATS22 controls the motor performance based on the motor torque rather than simple voltage or current based control. Advanced control algorithms are incorporated to help smooth rotation throughout the starting ramp and reducing mechanical instability at the end of starting.

A digital keypad display is provided for soft starter setup and motor performance display.

The ATS22 is available in 15 rated currents from 17 to 590 A. ATS22 are rated for use from 208 to 600 V motors, and are self-adjusting for a 50 Hz or 60 Hz supply frequency.

This user manual covers the technical characteristics, specifications, installation, wiring, programming, and troubleshooting of ATS22.

Terminology

Some of the terms and acronyms used in this manual are defined in the table below:

| Term | Definition |
|------------------|--|
| Soft starter FLA | Soft starter Full Load Amps This value is on the soft starter nameplate I _{CL} . I_{CL} : Soft starter rated current |
| Motor FLA | Motor Full Load Amps This value is on the motor nameplate. The rated current of an induction motor at rated speed and load. Soft starter in line connection: I_n = rated current of the motor FLA. Soft starter inside delta connection: I_n = rated current of the motor FLA / $\sqrt{3}$. |
| OCPD | Overcurrent protective device. |

Receiving and Preliminary Inspection

Before installing the ATS22 soft starter, read this manual and follow all precautions.

Before removing the ATS22 soft starter from its packing material, verify that the packing carton is not damaged from shipping. Damage to the packing carton usually indicates improper handling. If any damage is found, notify the carrier and your Schneider Electric representative.

After removing the ATS22 soft starter from its packaging, inspect it for damage. If any shipping damage is found, notify the carrier and your sales representative. Verify that the ATS22 soft starter nameplate and label conform to the packing slip and corresponding purchase order.

WARNING

DAMAGED SOFT STARTER EQUIPMENT

Do not operate or install any soft starter that appears damaged.

Failure to follow these instructions can result in death, serious injury, or equipment damage.


Storing and Shipping

If the ATS22 soft starter is not being immediately installed, store it in a clean, dry area where the ambient temperature is between -25 °C and +70 °C (-13 °F and +158 °F).

If the ATS22 soft starter must be shipped to another location, use the original shipping material and carton to help protect it.

Soft starter catalog numbers

Catalog numbers are composed with:

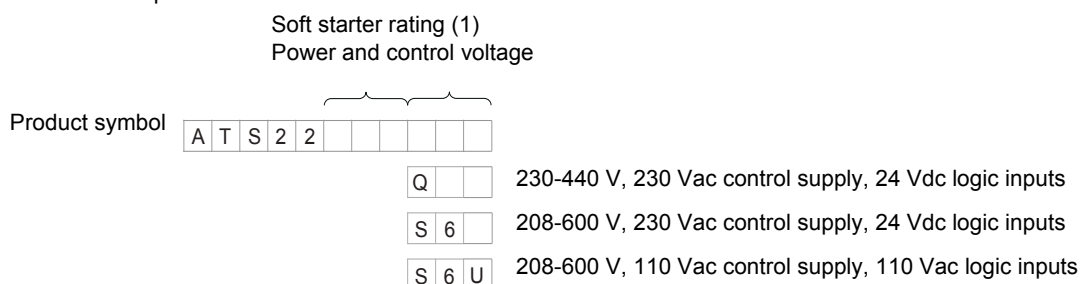

(1) The range is composed of 5 physical frame sizes distributed in 15 ratings from D17 to C59 (see page [11](#)).

Receiving and handling

Handling the soft starter

Hoisting the ATS22

The ATS22 range comprises 5 frame sizes, with various weights and dimensions.


Small soft starters can be removed from their packaging and installed without a handling device. A handling device must be used from ATS22C21●●● to ATS22C59●●●; for this reason they are supplied with lifting holes.

▲ WARNING

HANDLING AND LIFTING HAZARD

Keep the area below any equipment being lifted clear of all personnel and property. Use the lifting method as shown below.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

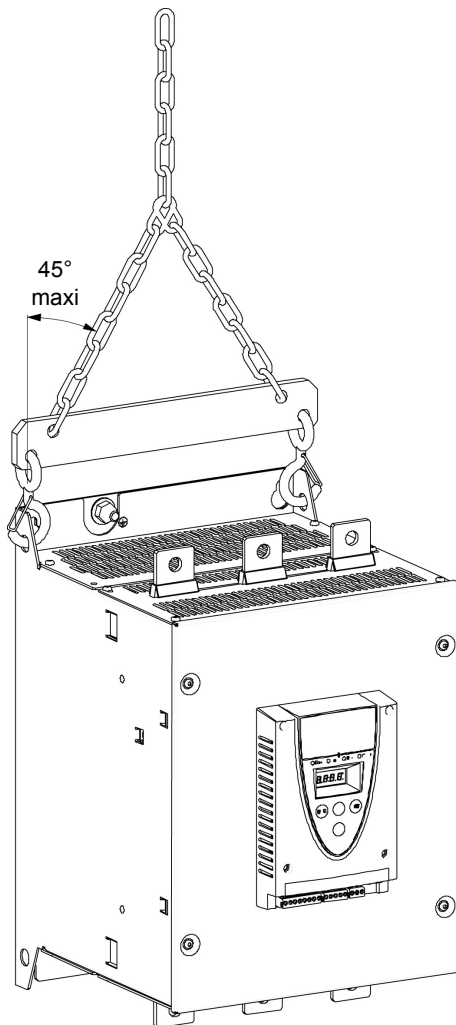

Do not remove the ATS22 from the carton until it is at the final installation site. Handle the soft starter carefully after removing it from the carton to avoid damage to the internal components, frame, or exterior. Once removed from the carton, the soft starter can be handled:


- With a hoist. When hoisting the soft starter, attach a spreader bar to the two lifting holes on top as shown below.
- In a horizontal position, with the back of the soft starter resting on a pallet.

Package content

- Soft starter
- Quick Install guide
- Package of screws for frame sizes C, D, and E
- Allen key, supplied with size B products

Selection

Torque characteristic

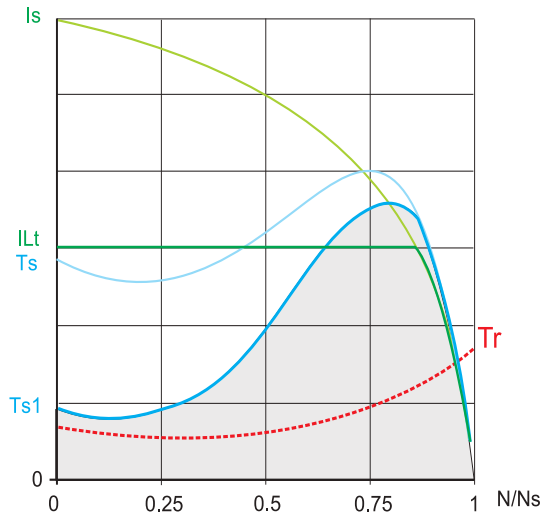

Ts and Is: Direct on line starting of an asynchronous motor.

Ts1: Total torque range available with an Altistart 22, which is dependent on the limiting current I_{Lt} , page 51. The progression of the soft starter is controlled by the motor torque within this range.

Tr: Resistive torque, which must always be less than the Ts1 torque.

Soft starter selection

S1 motor duty corresponds to starting followed by operation at constant load enabling the thermal stability to be reached.

S4 motor duty corresponds to a cycle comprising starting, operation at constant load, and an idle period. This cycle is characterized by a load factor.

The Altistart 22 must be selected depending on the type of application ("standard" or "severe") and the nominal power of the motor. "Standard" or "severe" applications define the limiting values of the current and the cycle for motor duties S1 and S4. These duties are described in the IEC 60034-1.

Standard application

Example: centrifugal pump

In standard application, the Altistart 22 is designed to provide:

- in S1 duty: starting at $3.5 I_n$ for 40 seconds from a cold state.
- in S4 duty: a load factor of 90% and n starts per hour (see table below), with $3.5 I_n$ for 20 seconds or an equivalent thermal cycle. In this case, the motor thermal protection must conform to protection class 10.

:

| Framesize | In S4 duty, number of starts (1) per hour | |
|-----------|---|----------|
| | Standard | With fan |
| A | 6 | 10 |
| B | 6 | 10 |
| C | 4 | 10 |
| D | NA | 4 |
| E | NA | 4 |

(1) Note: in case of both soft starts and soft stops, the number of starts has to be divided by 2.

Severe application

The Altistart 22 rated current is limited to $3.5 I_{cL}$, see table page 19. I_{cL} is the nominal current of the Altistart 22. If the application requires a higher rated starting current ($> 3.5 I_{cL}$), the soft starter must be oversized. See soft starter selection table, page 11.

Soft starter sizing according to thermal protection class

| Starting current max starting time | Protection class | | |
|---------------------------------------|------------------|---------------|----------------|
| | Class 10 | Class 20 | Class 30 |
| $\leq 3.5 I_n$ | Nominal* | Nominal + 1** | Nominal + 2*** |
| | 16 s | 32 s | 48 s |

* Nominal = nominal size of the soft starter according to the nominal motor current (Motor FLA).

** Nominal + 1 = oversize the soft starter by one rating compared to the nominal motor current (Motor FLA).

*** Nominal + 2 = oversize the soft starter by 2 ratings compared to the nominal motor current (Motor FLA).

Selection

Standard application, Altistart 22...Q, 230/440 V supply, soft starter in line connection

| Motor | | | Altistart 22...Q, 230/440 V (+ 10% - 15%) - 50/60 Hz (+/- 10%) | | |
|---------------------|-------|-------|--|--|-----------|
| Nominal motor power | | | Motor nominal current I_n (Motor FLA) | Soft starter rated current I_{cL} (Soft starter FLA) | Reference |
| 230 V | 400 V | 440 V | | | |
| kW | kW | kW | A | A | |
| 4 | 7.5 | 7.5 | 14.8 | 17 | ATS22D17Q |
| 7.5 | 15 | 15 | 28.5 | 32 | ATS22D32Q |
| 11 | 22 | 22 | 42 | 47 | ATS22D47Q |
| 15 | 30 | 30 | 57 | 62 | ATS22D62Q |
| 18.5 | 37 | 37 | 69 | 75 | ATS22D75Q |
| 22 | 45 | 45 | 81 | 88 | ATS22D88Q |
| 30 | 55 | 55 | 100 | 110 | ATS22C11Q |
| 37 | 75 | 75 | 131 | 140 | ATS22C14Q |
| 45 | 90 | 90 | 162 | 170 | ATS22C17Q |
| 55 | 110 | 110 | 195 | 210 | ATS22C21Q |
| 75 | 132 | 132 | 233 | 250 | ATS22C25Q |
| 90 | 160 | 160 | 285 | 320 | ATS22C32Q |
| 110 | 220 | 220 | 388 | 410 | ATS22C41Q |
| 132 | 250 | 250 | 437 | 480 | ATS22C48Q |
| 160 | 315 | 355 | 560 | 590 | ATS22C59Q |

The nominal motor current I_n must not exceed the maximum permanent current in class 10.
See wiring page [30](#).

Maximum surrounding temperature

The information in the table above is based on operation at a maximum ambient temperature of 40 °C (104 °F) and mini. -10 °C (14 °F). The Altistart 22 can be used up to an ambient temperature of 60 °C (140 °F) as long as the max. permanent current in class 10 is derated by 2.2% for each degree above 40 °C (104 °F).

Example: ATS22D32Q at 50 °C (122 °F) derated by $10 \times 2.2\% = 22\%$, 32 A becomes $32 \times (1 - 0.22) = 24.96$ A (max. nominal motor current).

Selection

Standard application, Altistart 22...Q, 230/440 V supply, soft starter inside delta connection

Only the Altistart 22...Q can be installed inside delta connection.

NOTICE

RISK OF DAMAGE TO THE MOTOR

ATS22...S6 and ATS22...S6U must not be installed inside delta connection.

Failure to follow these instructions can result in equipment damage.

| Motor | | | Soft starter 230/440 V (+ 10% - 15%) - 50/60 Hz (+/- 10%) | | | |
|---------------------|-------|-------|---|---------------------------------|---|---------------------------|
| Nominal motor power | | | Line current (Motor FLA) (1) | In setting (Line current/√3) | Soft starter rated current I _{CL} (soft starter FLA) | Soft starter reference |
| 230 V | 400 V | 440 V | | | | |
| kW | kW | kW | A | A | A | |
| 5.5 | 11 | 15 | 25 | 14.4 | 17 | ATS22D17Q |
| 11 | 22 | 22 | 48 | 27.7 | 32 | ATS22D32Q |
| 18.5 | 45 | 45 | 70 | 40.4 | 47 | ATS22D47Q |
| 22 | 55 | 55 | 93 | 53.7 | 62 | ATS22D62Q |
| 30 | 55 | 75 | 112 | 64.7 | 75 | ATS22D75Q |
| 37 | 75 | 75 | 132 | 76.2 | 88 | ATS22D88Q |
| 45 | 90 | 90 | 165 | 95.3 | 110 | ATS22C11Q |
| 55 | 110 | 110 | 210 | 121.2 | 140 | ATS22C14Q |
| 15 | 132 | 132 | 255 | 147.2 | 170 | ATS22C17Q |
| 90 | 160 | 160 | 315 | 181.9 | 210 | ATS22C21Q |
| 110 | 220 | 220 | 375 | 216.5 | 250 | ATS22C25Q |
| 132 | 250 | 250 | 480 | 277.1 | 320 | ATS22C32Q |
| 160 | 315 | 355 | 615 | 355.1 | 410 | ATS22C41Q |
| 220 | 355 | 400 | 720 | 415.7 | 480 | ATS22C48Q |
| 250 | 400 | 500 | 885 | 511.0 | 590 | ATS22C59Q |

(1) Line current is maximum 1.5 I_{CL}. Also, the In setting must not exceed I_{CL}.

Example: for a 400 V - 110 kW motor with a line current of 195 A, the minimum soft starter rated current, I_{CL} = 195/1.5 = 130 A. Thus select ATS22C14Q

The nominal motor current I_n must not exceed the max. permanent current in class 10. See wiring page 26.

Maximum surrounding temperature

The information in the table above is based on operation at a maximum ambient temperature of 40 °C (104 °F) and mini. -10 °C (14 °F). The Altistart 22 can be used up to an ambient temperature of 60 °C (140 °F) as long as the max. permanent current in class 10 is derated by 2.2% for each degree above 40 °C (104 °F).

Example: ATS22D32Q at 50 °C (122 °F) derated by 10 x 2.2% = 22%, 48 A becomes 48 x 0.78 = 37.5 A (max. nominal motor current).

Selection

Standard application, 208/600 V supply, soft starter in line connection

| Motor | | | | | | | | Soft starter 208/600 V (+ 10% - 15%) 50/60 Hz (+/- 10%) | | |
|---------------------|-------|-------|-------|-------|-------|-------|-------|---|--|------------------------|
| Nominal motor power | | | | | | | | Motor nominal current I_n (Motor FLA) | Soft starter rated current I_{cL} (Soft starter FLA) | Soft starter reference |
| 208 V | 230 V | 230 V | 400 V | 440 V | 460 V | 500 V | 575 V | | | |
| HP | HP | kW | kW | kW | HP | kW | HP | A | A | |
| 3 | 5 | 4 | 7.5 | 7.5 | 10 | 9 | 15 | 14 | 17 | ATS22D17S6 or S6U |
| 7.5 | 10 | 7.5 | 15 | 15 | 20 | 18.5 | 25 | 27 | 32 | ATS22D32S6 or S6U |
| (1) | 15 | 11 | 22 | 22 | 30 | 30 | 40 | 40 | 47 | ATS22D47S6 or S6U |
| 15 | 20 | 15 | 30 | 30 | 40 | 37 | 50 | 52 | 62 | ATS22D62S6 or S6U |
| 20 | 25 | 18.5 | 37 | 37 | 50 | 45 | 60 | 65 | 75 | ATS22D75S6 or S6U |
| 25 | 30 | 22 | 45 | 45 | 60 | 55 | 75 | 77 | 88 | ATS22D88S6 or S6U |
| 30 | 40 | 30 | 55 | 55 | 75 | 75 | 100 | 96 | 110 | ATS22C11S6 or S6U |
| 40 | 50 | 37 | 75 | 75 | 100 | 90 | 125 | 124 | 140 | ATS22C14S6 or S6U |
| 50 | 60 | 45 | 90 | 90 | 125 | 110 | 150 | 156 | 170 | ATS22C17S6 or S6U |
| 60 | 75 | 55 | 110 | 110 | 150 | 132 | 200 | 180 | 210 | ATS22C21S6 or S6U |
| 75 | 100 | 75 | 132 | 132 | 200 | 160 | 250 | 240 | 250 | ATS22C25S6 or S6U |
| 100 | 125 | 90 | 160 | 160 | 250 | 220 | 300 | 302 | 320 | ATS22C32S6 or S6U |
| 125 | 150 | 110 | 220 | 220 | 300 | 250 | 350 | 361 | 410 | ATS22C41S6 or S6U |
| 150 | -(1) | 132 | 250 | 250 | 350 | 315 | 400 | 414 | 480 | ATS22C48S6 or S6U |
| (1) | 200 | 160 | 315 | 355 | 400 | 400 | 500 | 477 | 590 | ATS22C59S6 or S6U |

(1) Value not indicated when there is no corresponding standardized motor.

The nominal motor current I_n must not exceed the max. permanent current in class 10.


Maximum surrounding temperature

The information in the table above is based on operation at a maximum ambient temperature of 40 °C (104 °F) and mini. -10 °C (14 °F). The Altistart 22 can be used up to an ambient temperature of 60 °C (140 °F) as long as the max. permanent current in class 10 is derated by 2.2% for each degree above 40 °C (104 °F).

Example: ATS22D32S6 at 50 °C (122 °F) derated by $10 \times 2.2\% = 22\%$, 27 A becomes $27 \times 0.78 = 21.06$ A (max. nominal motor current).

Dimensions and weights

ATS22D17 to D88

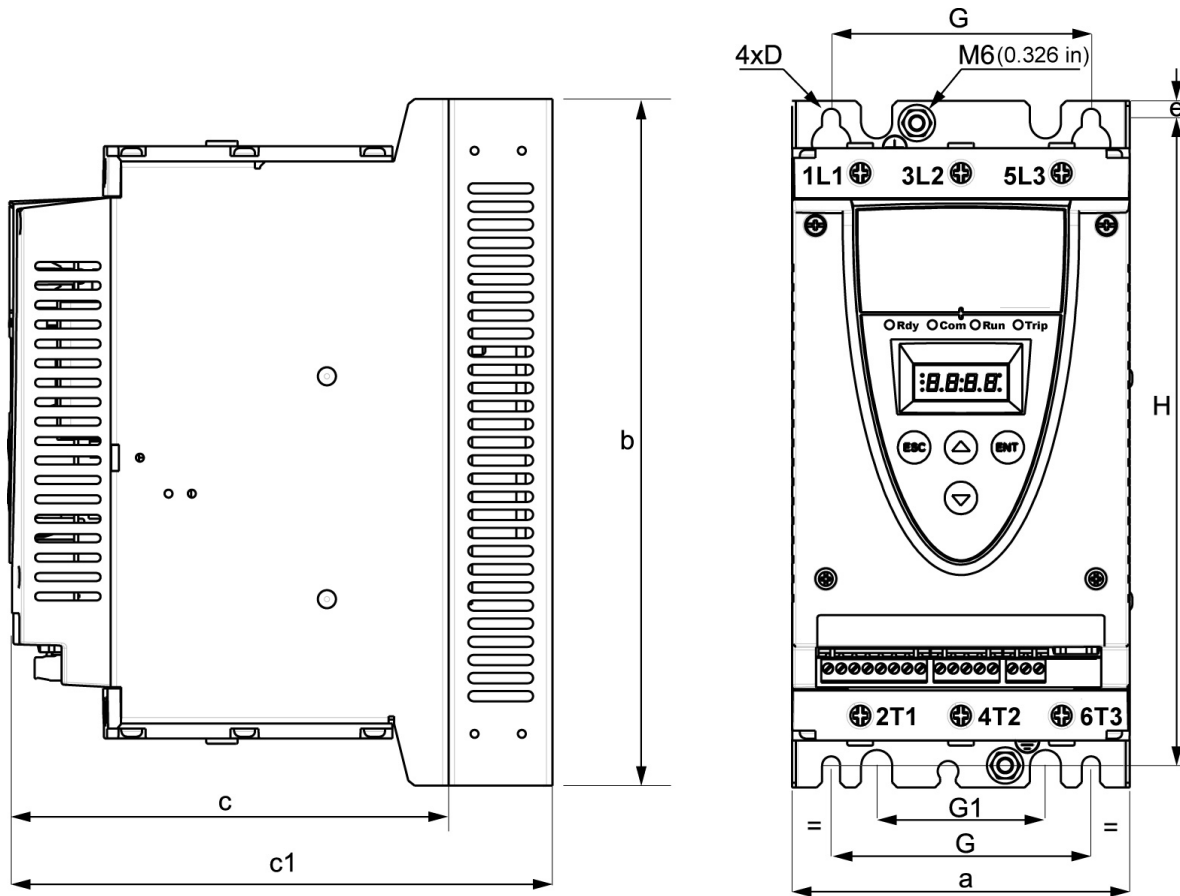

For frame sizes D17 to D88, the fan is sold separately. (1)

| ATS22 | Frame size | a | b | c | c1 | e | H | Standard G | With fan G1 | D mm | Weight |
|-------|------------|--------------|---------------|--------------|--------------|---------------|---------------|--------------|--------------|-------------|---------------|
| | | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | kg (lb) |
| D17 | A | 130 (5.1) | 265 (10.4) | 169 (6.6) | 209 (8.2) | 6.5 (0.3) | 250 (9.8) | 100 (3.9) | 65 (2.6) | 7 (0.28) | 5.5 (12.1) |
| D32 | A | | | | | | | | | | |
| D47 | A | | | | | | | | | | |
| D62 | B | 145 (5.7) | 295 (11.6) | 207 (8.1) | 247 (9.7) | 10.5 (0.4) | 276 (10.9) | 115 (4.5) | 80 (3.15) | 7 (0.28) | 7.8 (17.2) |
| D75 | B | | | | | | | | | | |
| D88 | B | | | | | | | | | | |

c: dimension of the product alone.

c1: dimension of the product with its fan.


(1) The voltage of the fan has to match the control voltage of the soft starter:

ATS22●●●Q or ATS22●●●S6 Fan 230 V (VW3G22●●●, ●●● = 400 for size A, 401 for size B or 402 for size C)

ATS22●●●S6U Fan 110 V (VW3G22U●●●, ●●● = 400 for size A, 401 for size B or 402 for size C)

Dimensions and weights

ATS22C11 to C17

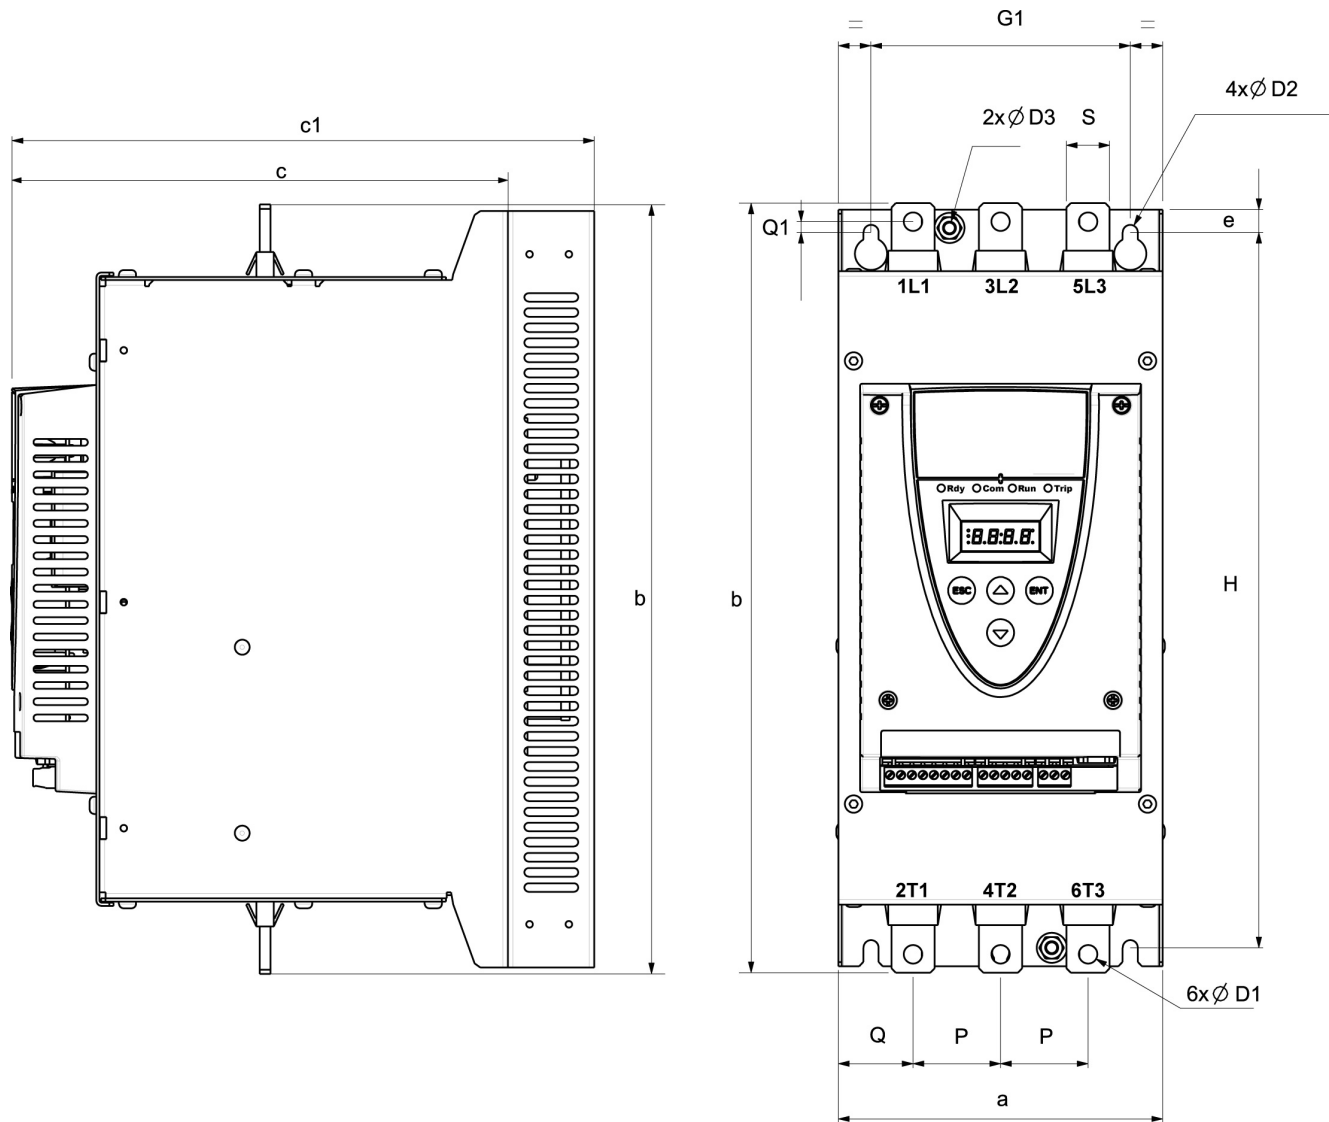

For frame sizes C11 to C17, the fan is sold separately. (1)

| ATS22 Frame size C | a | b | c | c1 | e | H | G1 | P | Q | Q1 | S | D1 | D2 | D3 | Weight |
|--------------------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|------------|
| | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | kg (lb) |
| C11 | 150 | 356 | 229.5 | 269.5 | 10.5 | 331 | 120 | 40.5 | 34.5 | 5 | 20 | 9 | 7 | 6 | 12.2 |
| C14 | (5.9) | (14) | (9) | (10.6) | (0.41) | (13) | (4.7) | (1.6) | (1.3) | (0.2) | (0.8) | (0.35) | (0.28) | (0.23) | (26.9) |
| C17 | | | | | | | | | | | | | | | |

c: dimension of the product alone.

c1: dimension of the product with its fan.


(1) The voltage of the fan has to match the control voltage of the soft starter:

ATS22●●●Q or ATS22●●●S6 Fan 230 V (VW3G22●●●, ●●● = 400 for size A, 401 for size B or 402 for size C)

ATS22●●●S6U Fan 110 V (VW3G22U●●●, ●●● = 400 for size A, 401 for size B or 402 for size C)

Dimensions and weights

ATS22C21 to C59

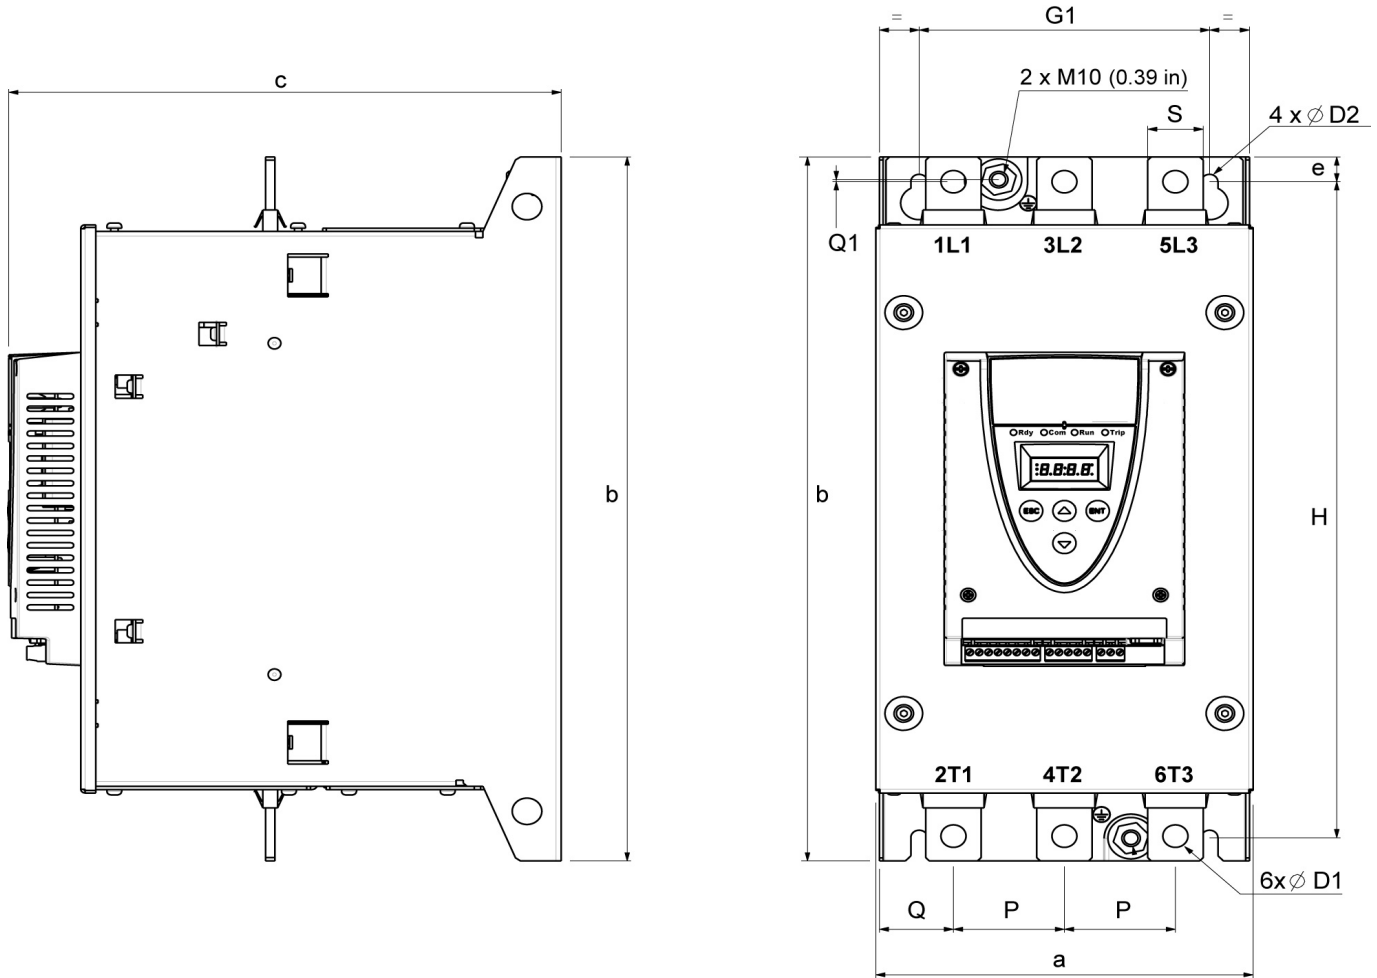

For frame sizes C21 to C59, the fan is integrated.

| ATS22 | Frame size | a | b | c | e | H | G1 | P | Q | Q1 | S | D1 | D2 | Weight |
|-------|------------|---------------|---------------|-----------------|--------------|---------------|---------------|-------------|-------------|---------------|-------------|----------------|-------------|----------------|
| | | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | kg (lb) |
| C21 | D | 206 (8.1) | 425 (16.7) | 299 (11.8) | 15 (0.59) | 396 (15.6) | 157 (6.2) | 60 (2.4) | 40 (1.6) | 1.3 (0.05) | 30 (1.2) | 13.5 (0.53) | 9 (0.35) | 20.5 (45.2) |
| C25 | D | | | | | | | | | | | | | |
| C32 | D | | | | | | | | | | | | | |
| C41 | D | | | | | | | | | | | | | |
| C48 | E | 304 (11.9) | 455 (17.9) | 339.7 (13.4) | 15 (0.59) | 426 (16.8) | 264 (10.4) | 94 (3.7) | 55 (2.2) | 1 (0.04) | 40 (1.6) | 13.5 (0.53) | 9 (0.35) | 33 (73.3) |
| C59 | E | | | | | | | | | | | | | |

Mounting

Mounting Precautions

Follow these precautions when mounting the ATS22 soft starter:

- The soft starter is compliant with pollution Degree 2 as defined in NEMA ICS1-1 or IEC 60664-1.
- For environment pollution degree 3 install the product inside a cabinet type 12 or IP54.


DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

ATS22 soft starters are open devices and must be mounted in a suitable enclosure.

Failure to follow these instructions will result in death or serious injury.

- The ATS22 soft starter generates heat and must be properly ventilated. Refer to "Thermal considerations for sizing enclosures" page [19](#) to determine power dissipated.
- When several soft starters are installed in a control panel, arrange them in a row. Do not stack soft starters. Heat generated from the bottom soft starter can adversely affect the ambient temperature around the top soft starter.
- Install the ATS22 vertically, within $\pm 10^\circ$ (other positions are not allowed).
- Do not place it close to heating elements. Leave sufficient free space so that the air required for cooling purposes can circulate from the bottom to the top of the unit.
- Electrical current through the ATS22 will result in heat losses that must be dissipated into the ambient air immediately surrounding the soft starter. To help prevent a thermal fault, provide sufficient enclosure cooling and/or ventilation to limit the ambient temperature around the soft starter.

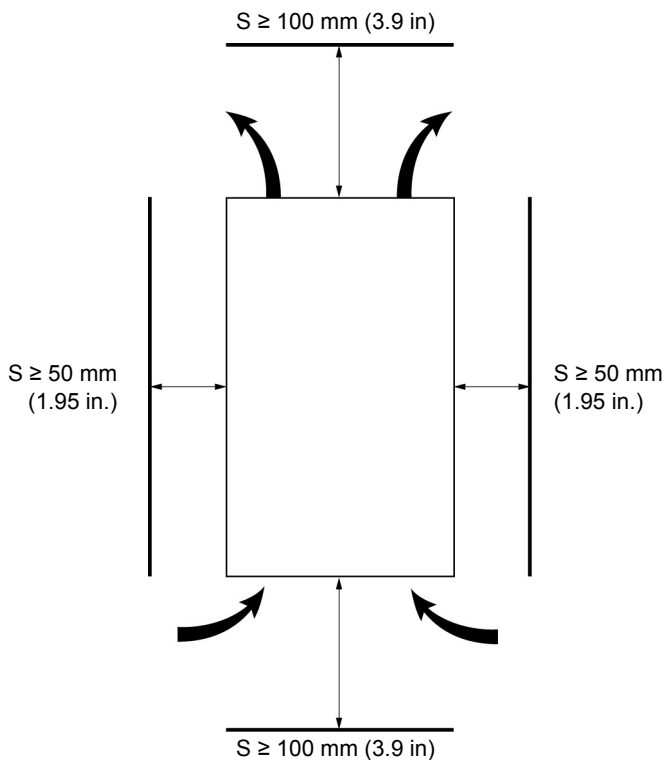

Note: For the soft starters mounted side-by-side, the free space must be ≥ 50 mm (1.95 in.)

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Check that no liquid, dust or conductive object can fall into the soft starter (degree of protection IP00 from above).

Failure to follow these instructions will result in death or serious injury.

Mounting

Soft starter ventilation

On soft starters installed with a cooling fan, the fan is factory set to switch on automatically as soon as the heatsink temperature reaches 46 °C (114.8 °F).

It is switched off when the heatsink temperature falls back to 43 °C (109.4 °F). This behavior can be modified by adjusting the **FAn** parameter in **io** menu on page [61](#).

Fan flow rates

| Reference | Frame size | Unit | Standard | | With optional fan kit | |
|--------------------------|------------|----------------------|----------|-------|-----------------------|-------|
| | | | 110 V | 230 V | 110 V | 230 V |
| ATS22 D17, D32, D47 | A | m ³ /hour | - | - | 28 | 31 |
| | | CFM (1) | - | - | 16 | 18 |
| ATS22 D62, D75, D88 | B | m ³ /hour | - | - | 28 | 31 |
| | | CFM (1) | - | - | 16 | 18 |
| ATS22 C11, C14, C17 | C | m ³ /hour | - | - | 108 | 108 |
| | | CFM (1) | - | - | 64 | 64 |
| ATS22 C21, C25, C32, C41 | D | m ³ /hour | 148 | 148 | - | - |
| | | CFM (1) | 87 | 87 | - | - |
| ATS22 C48, C59 | E | m ³ /hour | 148 | 148 | - | - |
| | | CFM (1) | 87 | 87 | - | - |

(1) Cubic Feet / Minute


Mounting in a General Purpose Metal Enclosure

Observe the mounting recommendations on the previous page.

To help proper air circulation in the soft starter:

- Install ventilation grilles.
- Verify that ventilation is adequate: if not install a forced ventilation unit, with a filter if necessary.


Derate the soft starter current **ICL** by 2.2% per °C for temperatures above 40 °C up to 60 °C (104 °F up to 140 °F).

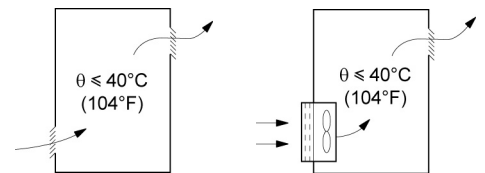

Mounting

Mounting in a dust and damp-proof metal enclosure

Ventilation for dust and damp- proof enclosure

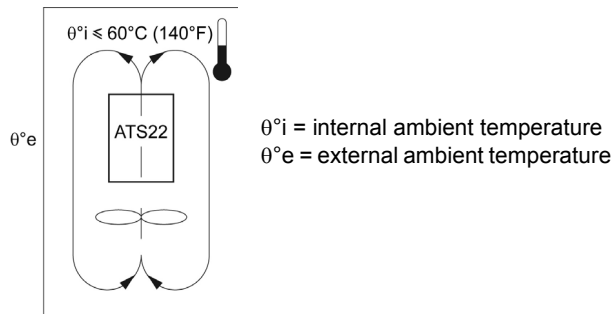

Follow the instructions in this section in order to meet NEMA Type 12 (IP54) degree of protection.

Do not use insulated or non-metallic enclosures as they have poor thermal conduction. Provide a stirring fan to circulate air inside the enclosure and to help prevent hot spots in the soft starter. This allows operation of the soft starter in an enclosure with a maximum internal temperature of 60 °C (140 °F). Ensure that the ambient temperature around the soft starters does not exceed this limit.

Derate the soft starter current I_{cL} by 2.2% per °C for temperatures above 40 °C up to 60 °C (104 °F up to 140 °F).

Thermal considerations for sizing enclosures

When mounting the ATS22 soft starter in an enclosure, use the enclosure manufacturers' recommendations for proper sizing based on thermal considerations. For this, it is necessary to sum the power dissipated by each device in the enclosure. Table hereafter lists the steady state and starting power dissipations for the ATS22 soft starter, operating at rated current.

Power dissipated by the soft starters, at their nominal current

| Soft starter reference | Power | | | | Control supply | | |
|------------------------|------------|----------|---|---------------------------------|----------------|-------------------------|--------|
| | Frame size | I_{cL} | During starting total power at 3.5 I_{cL} | Steady state total power bypass | Electronics | Shorting contactors (1) | Fans |
| | | A | W | W | W | W | W |
| ATS22D17 | A | 17 | 208 | 5 | 20 | - | 14 (2) |
| ATS22D32 | A | 32 | 404 | 10 | | | |
| ATS22D47 | A | 47 | 562 | 14 | | | |
| ATS22D62 | B | 62 | 781 | 19 | 20 | - | 20 (2) |
| ATS22D75 | B | 75 | 1016 | 23 | | | |
| ATS22D88 | B | 88 | 1060 | 26 | | | |
| ATS22C11 | C | 110 | 1345 | 33 | 20 | - | 20 (2) |
| ATS22C14 | C | 140 | 1548 | 42 | | | |
| ATS22C17 | C | 170 | 1922 | 51 | | | |
| ATS22C21 | D | 210 | 2596 | 63 | 20 | 14 | 20 |
| ATS22C25 | D | 250 | 3275 | 75 | | | |
| ATS22C32 | D | 320 | 3699 | 96 | | | |
| ATS22C41 | D | 410 | 5147 | 123 | | | |
| ATS22C48 | E | 480 | 6396 | 144 | 20 | 14 | 40 |
| ATS22C59 | E | 590 | 7599 | 177 | | | |

(1) For ATS22●●●Q, ATS22●●●S6 and ATS22●●●S6U, frame sizes A, B and C the shorting contactor power is included in the electronics.

(2) Optional fan kit

Example: for an ATS22D47

Power dissipated during starting: 562 W

Power dissipated in steady state: 14 W

Power for Control supply: 20 W without fan, 34 W with fan

Example: for an ATS22C48


Power dissipated during starting: 6396 W

Power dissipated in steady state: 144 W


Power for Control supply: 74 W

Mounting - Fan option

Fan for frame sizes A, B and C

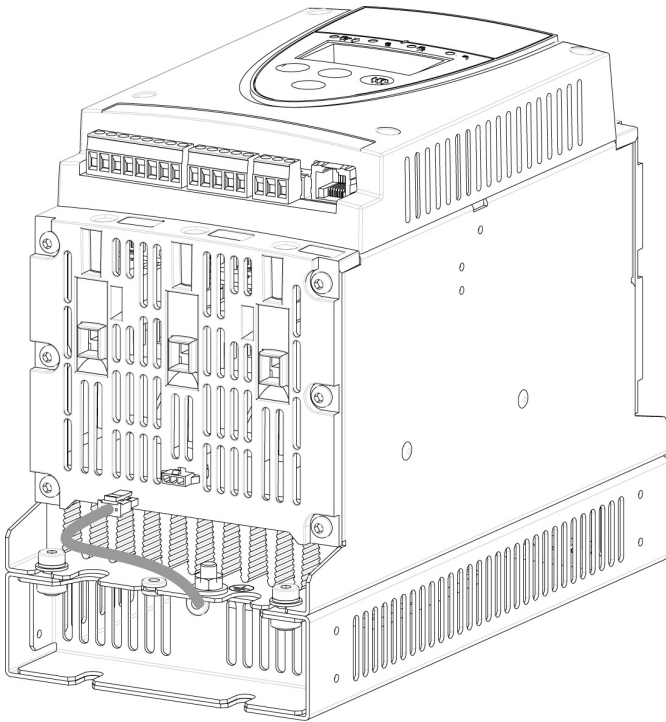

Connections between the fan and the ATS22

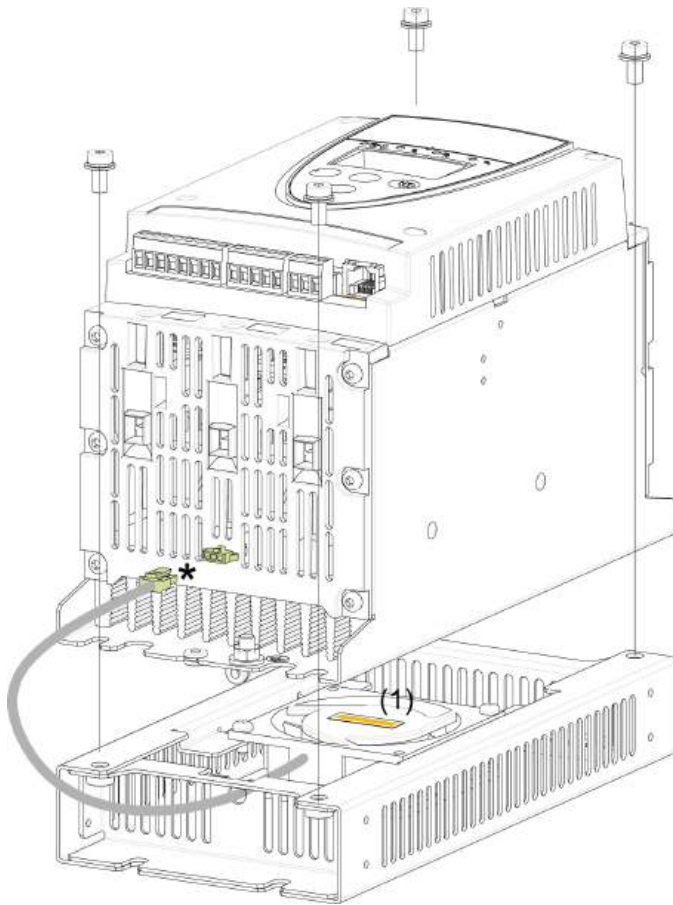

Tightening torque: 3.5 N·m (31 lb.in)


* As 2 different fan options could be connected to the ATS22 according to the fan voltage (matching the ATS22 control voltage), the connector is different according to the voltage, to help avoid wrong assembly and misuse.

(1) The voltage of the fan has to match the control voltage of the soft starter:

ATS22●●●Q or ATS22●●●S6 Fan 230 V
ATS22●●●S6U Fan 110 V

Mounting - Fan option

Fan dimensions for frame sizes ATS22D17 to C17

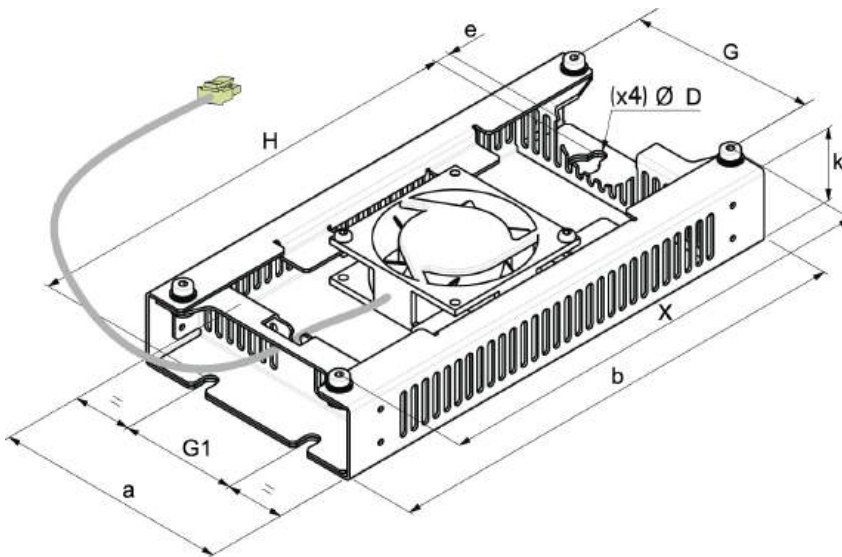

For frame sizes D17 to D88, the fan is sold separately. (1)

| Fan kit | ATS22 | a | b | k | e | H | G | G1 | X | D | Weight |
|---------|-------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|
| | | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) | mm (in.) |
| A | D17 | 130 | 265 | 40 | 8.5 | 248 | 100 | 65 | 250 | 7 | 1.2 |
| | D32 | (5.1) | (10.4) | (1.6) | (0.33) | (9.8) | (3.9) | (2.6) | (9.8) | (0.28) | (2.6) |
| | D47 | | | | | | | | | | |
| B | D62 | 145 | 295 | 40 | 8.5 | 278 | 115 | 80 | 276 | 7 | 1.4 |
| | D75 | (5.7) | (11.6) | (1.6) | (0.33) | (10.9) | (4.5) | (3.1) | (10.9) | (0.28) | (3.1) |
| | D88 | | | | | | | | | | |
| C | C11 | 150 | 350 | 40 | 8.5 | 333 | 120 | 85 | 331 | 7 | 1.6 |
| | C14 | (5.9) | (13.8) | (1.6) | (0.33) | (13.1) | (4.7) | (3.3) | (13) | (0.28) | (3.5) |
| | C17 | | | | | | | | | | |

(1) The voltage of the fan has to match the control voltage of the soft starter.

ATS22●●●Q or ATS22●●●S6 Fan 230 V (VW3G22●●●, ●●● = 400 for size A, 401 for size B or 402 for size C)

ATS22●●●S6U Fan 110 V (VW3G22U●●●, ●●● = 400 for size A, 401 for size B or 402 for size C)

Thermal protection

Soft starter thermal protection

The thermal protection is provided by the temperature sensor installed on the heatsink.

Motor thermal protection

Standard IEC 60947-4-2 defines the protection classes giving the starting capacities of the motor (warm or cold start) without thermal faults. Different protection classes are given for a COLD state (corresponding to a stabilized motor thermal state, switched off) and for a WARM state (corresponding to a stabilized motor thermal state, at nominal power).

- The soft starter is factory set to protection class 10.
- This protection class can be modified using **LHP** parameter in **SEL** menu.
- The motor thermal state is stored in memory. No estimate of motor cooling is calculated while power of the control part is off.
- An overload alarm is activated if motor thermal state exceeds 110%.
- A thermal trip **OLF?** stops the motor if motor thermal state exceeds 125%.
- If the thermal protection has not been disabled, the thermal trip can be indicated by a relay depending on output assignment.
- After the motor has stopped or the soft starter has been switched off, the thermal state is saved. At next start or switch-on, the thermal protection value is restored.
- If a special motor is used (explosion proof, submersible, etc.), the thermal protection should be provided by PTC probes.

NOTICE

RISK OF DAMAGE TO THE MOTOR

The use of external overload protection is required under the following conditions:


- Running multiple motors
- Running motors rated at less than 40% of the nominal soft starter current
- Using motor switching
- Using special motor (explosion proof, submersible, etc...)

Failure to follow these instructions can result in equipment damage.

See Motor thermal protection with PTC probes, page [25](#).

Thermal protection


Cold curves

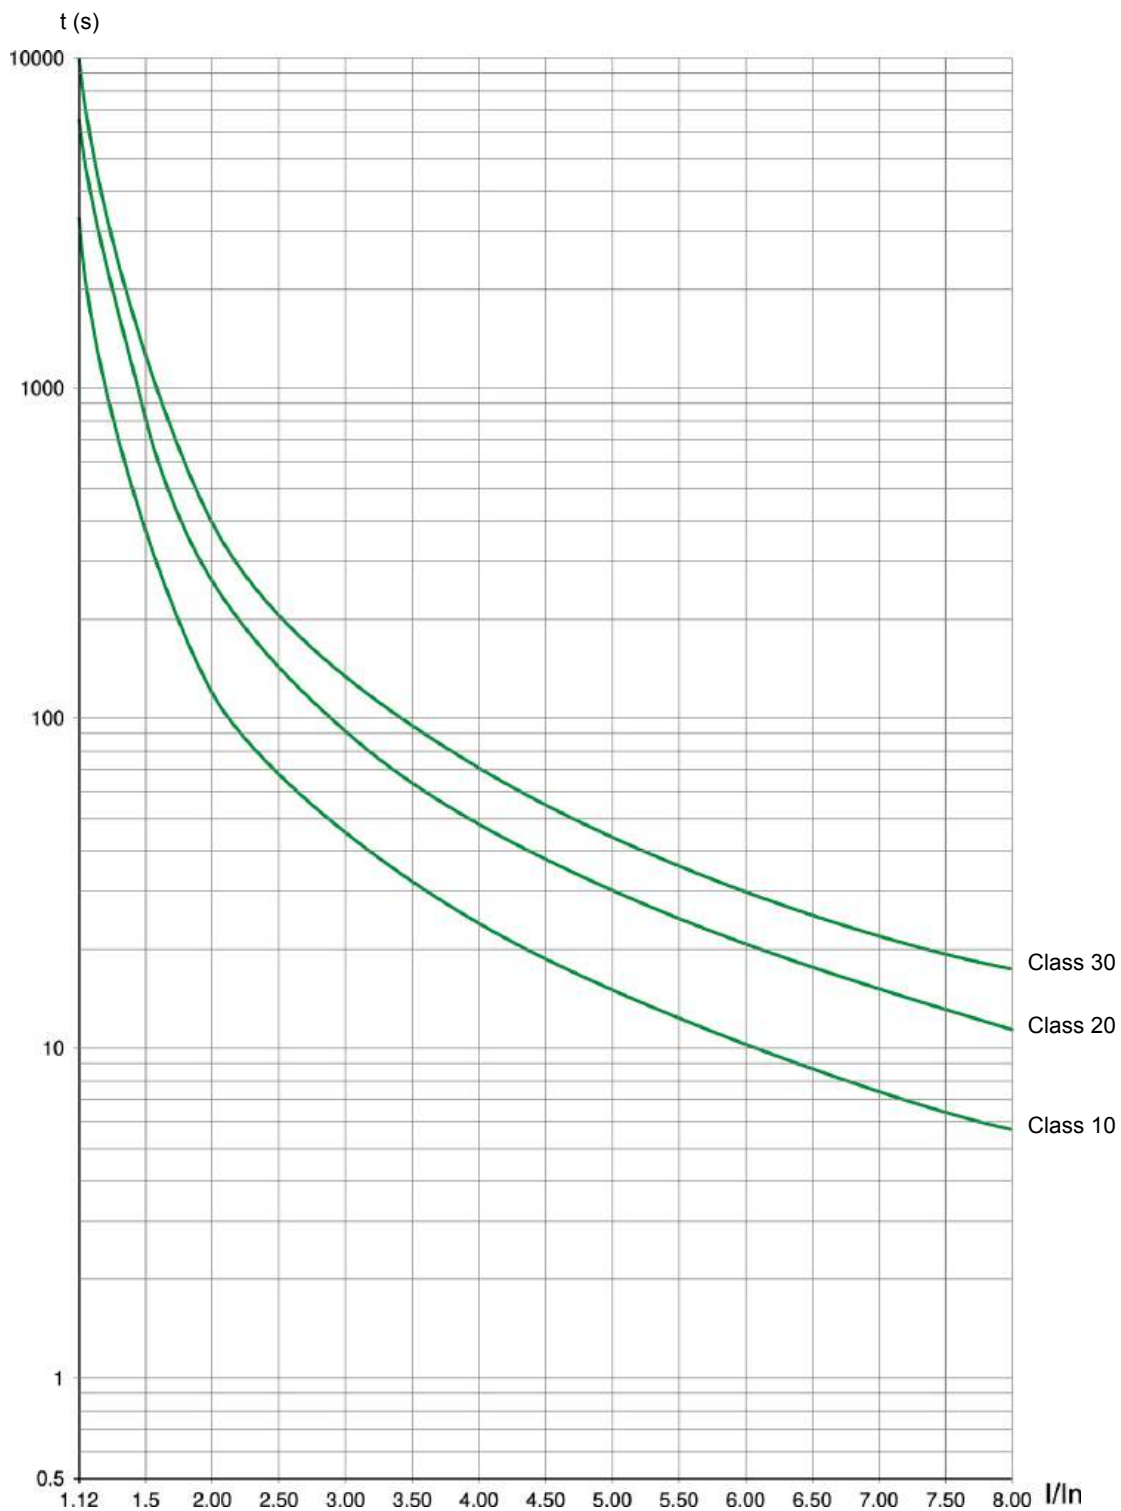

| Trip time for a standard application (class 10) | Trip time for a severe application (class 20) | Trip time for a severe application (class 30) |
|---|---|---|
| 3.5 ln | 3.5 ln | 3.5 ln |
| 32 s | 63 s | 95 s |

Thermal protection

Warm curves

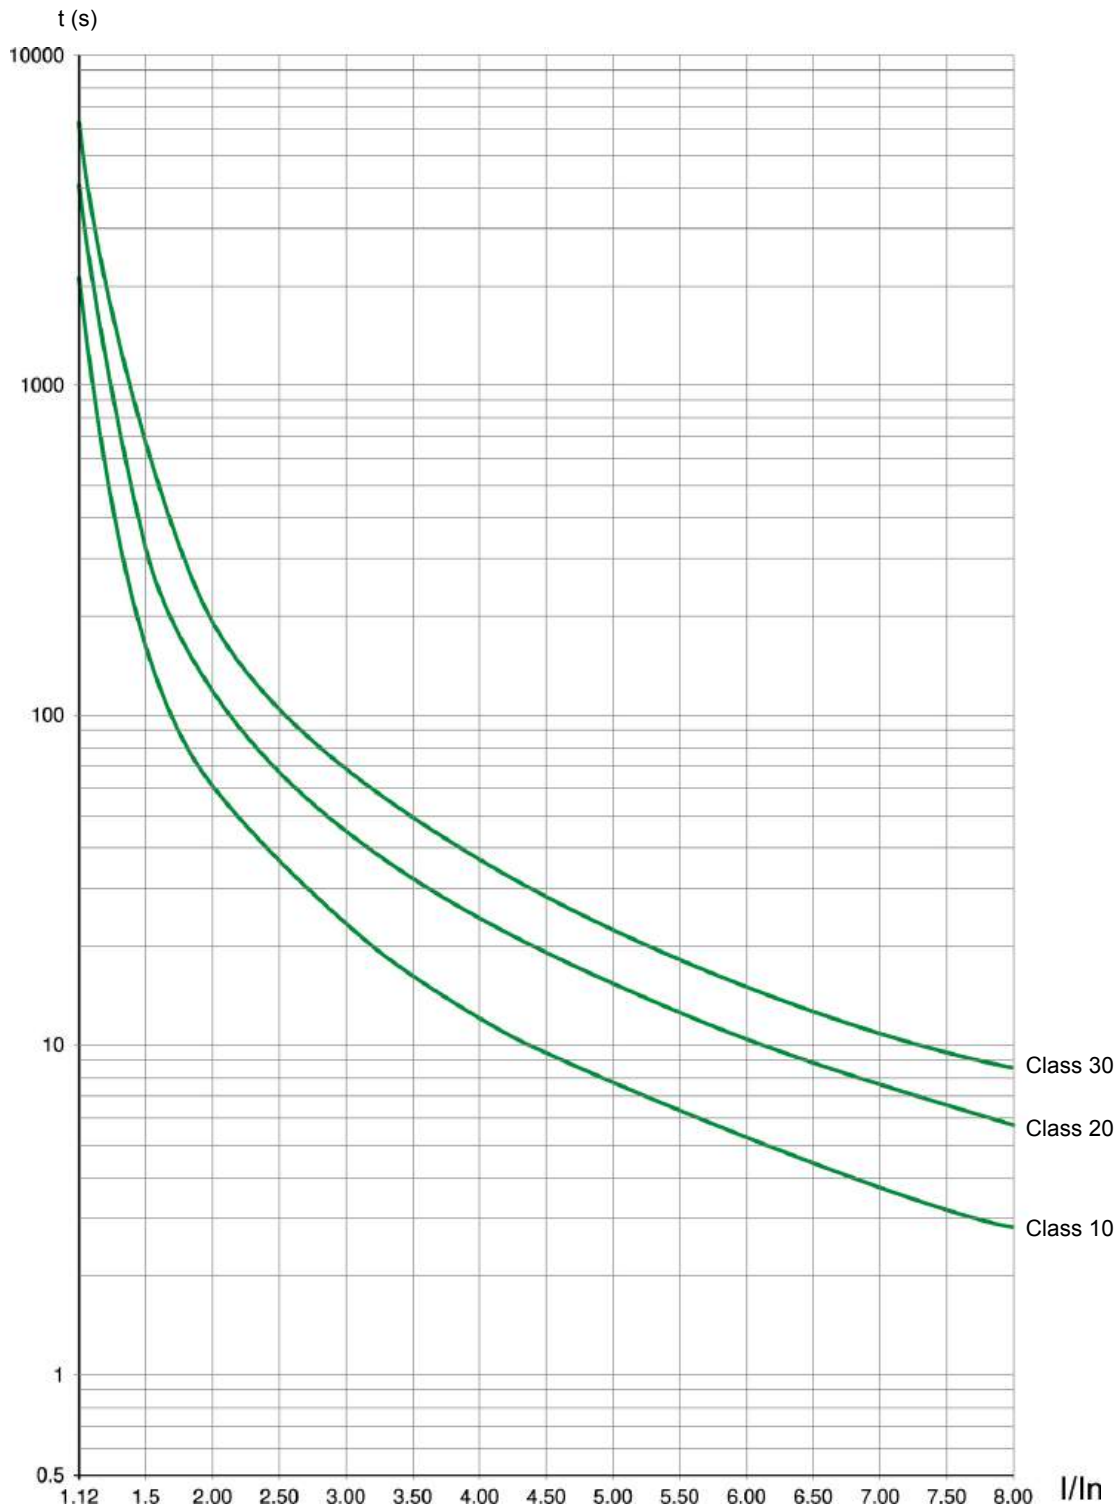

| Trip time for a standard application (class 10) | Trip time for a severe application (class 20) | Trip time for a severe application (class 30) |
|--|--|--|
| 3.5 In | 3.5 In | 3.5 In |
| 16 s | 32 s | 48 s |

Thermal protection


Motor thermal protection with PTC probes

PTC probes integrated in the motor to measure its temperature can be connected to the control card terminals.

Note:

PTC probe protection does not deactivate the motor thermal protection provided by the soft starter calculation. Both types of protection can operate in parallel.

PTC wiring

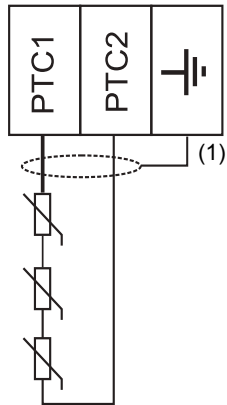

(1) Shielded cable is optional.

Characteristics

Total resistance of the probe circuit: 750 Ω at 25 °C (77 °F).

Tripping: between 2700 Ω and 3100 Ω .

Installation Precautions

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Read and understand this manual before installing or operating the Altistart 22. Installation, adjustment, repair, and maintenance must be performed by qualified personnel.
- The user is responsible for compliance with all international and national electrical code requirements with respect to grounding of all equipment.
- Many parts of this soft starter, including the printed circuit boards, operate at the line voltage. **DO NOT TOUCH**. Use only electrically insulated tools.
- **DO NOT** touch unshielded components or terminal strip screw connections with voltage present.
- Before servicing the soft starter:
 - Disconnect all power, including external control power that may be present.
 - Place a "DO NOT TURN ON" label on all power disconnects.
 - Lock all power disconnects in the open position.
- Install and close all covers before applying power or starting and stopping the soft starter.

Failure to follow these instructions will result in death or serious injury.

Good wiring practice requires the separation of control circuit wiring from all power (line and load) wiring. Power wiring to the motor must have the maximum possible separation from all other power wiring. Do not run them in the same conduit. This separation reduces the possibility of coupling electrical noise between circuits.

Follow these precautions when installing the ATS22 soft starter:

- Voltage and frequency specifications for the input line must match the soft starter configuration.
- A disconnect switch must be installed between the input line and the soft starter.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- The solid state switches of the ATS22 soft starter's power circuit do not provide complete isolation from the AC line. Due to leakage currents through the solid-state switches, hazardous voltages can be present on the soft starter load-side power circuit whenever power is applied to the line side of the soft starter.
- Disconnect all power before servicing the soft starter or motor.

Failure to follow these instructions will result in death or serious injury.

- When using an isolation contactor, the contactor must close before or at the same time as the application of the soft starter run command. If line power is not detected at the L1, L2, and L3 terminals of the soft starter within 500 ms of this run command, a Phase Failure trip will occur.
- External overcurrent protection devices (OCPD), either fuses or a circuit breaker, must be installed on the line-side connections of the ATS22 soft starter. The maximum recommended OCPD rating, along with the associated soft starter short circuit withstand rating, is listed on the Quickstart S1A14738.

WARNING

INADEQUATE OVERCURRENT PROTECTION

- An overcurrent protective device must be installed on the line-side of the ATS22 to achieve published short-circuit withstand ratings.
- Do not exceed the maximum overcurrent protective device ratings shown on the Quickstart annex (S1A14738).
- Do not connect the soft starter to a power feeder whose short circuit capacity exceeds the soft starter short circuit withstand rating shown on the Quickstart annex (S1A14738).

Failure to follow these instructions can result in death, serious injury, or equipment damage.

- Power factor correction capacitors should not be connected to a motor controlled by an ATS22 soft starter. If power factor correction is required, the capacitors must be located on the line-side of the soft starter. A separate contactor should be used to switch the capacitors off when the motor is off, or during acceleration and deceleration. Refer to bulletin No 8638PD9603.

NOTICE

RISK OF DAMAGE TO THE SOFT STARTER

- Do not connect power factor correction capacitors to the load-side power circuit of the ATS22.
- Do not connect loads other than motors (for example transformers and resistors are forbidden).

Failure to follow these instructions can result in equipment damage.

- The ATS22 uses solid-state power switches to control motor power. When checking the condition of conductor or motor insulation, do not connect the high potential dielectric test equipment or insulation resistance tester to the soft starter since the test voltages used may damage the soft starter. Always disconnect the soft starter from the conductors or motor before performing such tests.

NOTICE

RISK OF DAMAGE TO THE SOFT STARTER

- Do not perform high potential dielectric tests on circuits while the circuits are connected to the ATS22 soft starter.
- Any circuit requiring high potential dielectric tests must be disconnected from the soft starter prior to performing the test.

Failure to follow these instructions can result in equipment damage.

- The ATS22 contains electronic circuitry to detect and signal when the solid-state switches have become inoperable.
- Since the solid-state switches may be incapable of completely blocking the motor power should the soft starter detect a fault, auxiliary isolation on the line side of the soft starter is required. Use either a circuit breaker equipped with a shunt trip coil or an electromagnetic contactor. Connect the isolation device to the detected fault relay of the soft starter so that it opens the soft starter power circuit in the event of a soft starter trip. The isolation device must be capable of interrupting motor locked rotor current.

Wiring

Refer to application diagrams that display the logic controlling the isolation device via the detected fault relay.

CAUTION

MOTOR OVERHEATING HAZARD

If the solid-state switches on the ATS22 become inoperable, single-phase operation of the motor can result.

- Use an isolation device consisting of either a circuit breaker equipped with a shunt trip coil or an electromagnetic contactor to open the line-side of the soft starter.
- The isolation device must be capable of interrupting the motor locked rotor current.
- Connect the detected fault relay of the soft starter to open the isolation device in the event of a soft starter trip.

Failure to follow these instructions can result in injury or equipment damage.

WARNING

INADEQUATE SYSTEM GROUNDING- BRANCH CIRCUIT CONDUCTOR HAZARD

If system grounding is not adequate for ground fault levels, use properly coordinated external ground fault protection. Possible solutions include:

- Time delay fuses coordinated to 125% of motor FLA.
- A properly coordinated external overload relay.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

System Grounding

If system grounding is not adequate to handle ground trip levels which can exceed 1300% of motor full load amps (Motor FLA), then this device may not protect the branch circuit conductors. In this case, external ground trip protection must be properly coordinated. Recommended solutions include:

- Time delay fuses coordinated to 125% of motor FLA. The fuses listed in the chapter Branch circuit protection are sized to provide proper coordination and may be used for applications that do not require start times longer than 50 seconds at 300% current limit or 20 seconds at 500% current limit.
- External overload relay. For multi-motor applications, applications in which motor does not match the soft starter size, or applications that use a full voltage bypass scheme, an external overload relay can be coordinated to protect conductors from a high-impedance ground trip.

General wiring practices

When wiring ATS22 soft starter, follow the wiring practices required by national and local electrical codes. In addition, follow these guidelines:

- Use metallic conduit for all soft starter wiring. Do not run control and power wiring in the same conduit.
- Separate metallic conduits carrying power wiring or low-level control wiring by at least 80 mm (3 in).
- Separate non-metallic conduits or cable trays used to carry power wiring from metallic conduit carrying low-level control wiring by at least 305 mm (12 in).
- Always cross power and control wiring at right angles.
- Keep the control circuits away from the power cables.

Adaptation to line input

The control circuit is completely independent of the power circuit. To apply control voltage, follow the instructions on the label located on the soft starter terminal strip. Connect single phase voltage of 110 Vac or 230 Vac supply to terminals CL1 and CL2.

The power circuit adapts automatically to the input line voltage and frequency over a range of 230 to 440 V for ATS22●●●Q soft starters, and over a range of 208 to 600 V for ATS22●●●S6 and ATS22●●●S6U soft starters.

Wiring

Power Requirements

Connect the control supply (CL1-CL2), ensuring that it is off, according to the model number of the soft starter.

| | | |
|--------------------------------|-------|-------|
| ATS22●●●Q and ATS22●●●S6 | 230 V | +10 % |
| | 220 V | -15 % |
| ATS22●●●S6U | 115 V | +10 % |
| | 110 V | -15 % |

Connect the power line supply (1/L1-3/L2-5/L3), ensuring that it is off, according to the model number of the soft starter.

| | | |
|-----------|---------------------------------|----------------|
| ATS22●●●Q | 230 V 440 V | +10 % -15 % |
| | ATS22●●●S6 or ATS22●●●S6U | 208 V 600 V |

Connect the motor (2/T1 - 4/T2 - 6/T3), ensuring that its coupling corresponds to the supply voltage.

Note: If the ATS22●●●Q is used inside delta connection, follow the recommendations on page [12](#), and the diagrams on page [30](#).

Bypass contactor

NOTICE

DAMAGE TO THE EQUIPMENT

If a downstream contactor is used between the soft starter and the motor, verify the following:

- The contacts between the motor and the soft starter must be closed before a Run command is executed.
- The contacts between the motor and the soft starter must remain closed while the demagnetization of the motor is in progress.
- The power stage must not be enabled when the contacts between the motor and the soft starter open.

Failure to follow these instructions can result in equipment damage.

An internal bypass contactor is integrated into all ATS22 soft starters.

The bypass contactor is activated when:


I motor < 120% I_n

AND


U motor = 100% input line voltage

Block diagram of the power part of the Altistart 22

ATS22●●●Q range

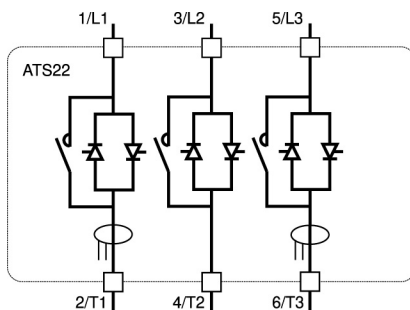

ATS22●●●S6 and ATS22●●●S6U ranges

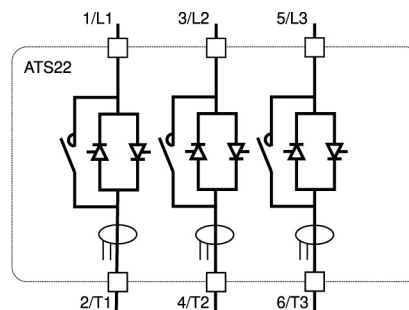


Wiring


The ATS22●●●Q range (230-440 V) can be connected in the motor supply line or inside delta connection of the motor.

The Altistart 22 in line connection

The motor connection depends on the supply voltage. Two possibilities are shown below: star connection and delta connection.

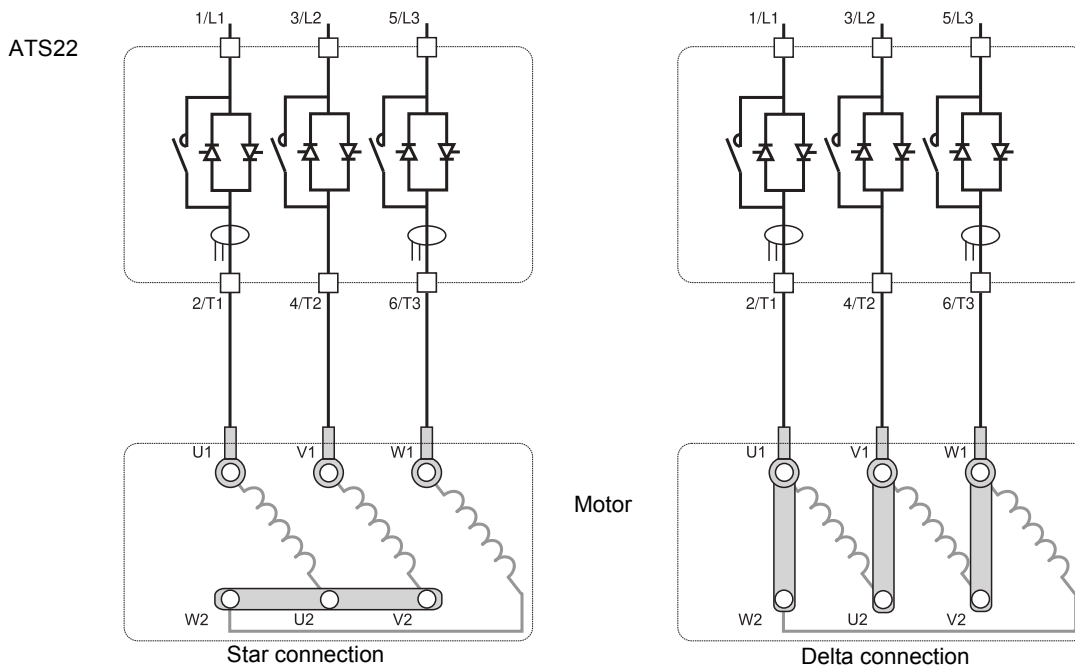

The Altistart 22 connected inside delta connection

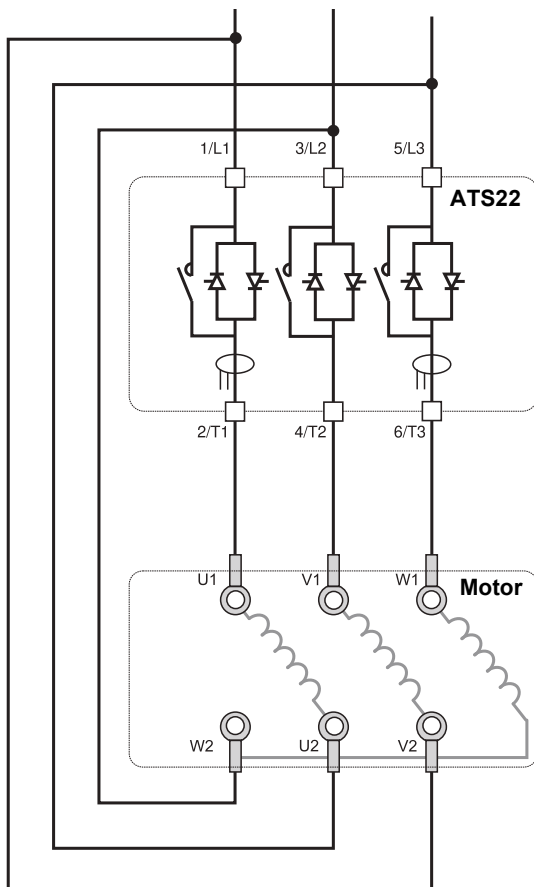

NOTICE

RISK OF DAMAGE TO THE SOFT STARTER

- Only the ATS22●●●Q range can be installed inside delta connection.
- Ensure connection exactly as shown on the example.
- Line voltage should not exceed 440 V.
- The parameter **dL t A** must be set to **dL t**.

Failure to follow these instructions can result in equipment damage.


Note: Phase sequence must be 1 - 2 - 3

The ATS22...Q connected inside delta connection

ATS22...Q soft starters can be inserted inside delta connection of the motor.

Only the ATS22...Q range can be installed inside delta connection. Set the parameter **dL E A** to **dL E**.

See the tables on page [12](#) for more information about soft starter-motor combinations.

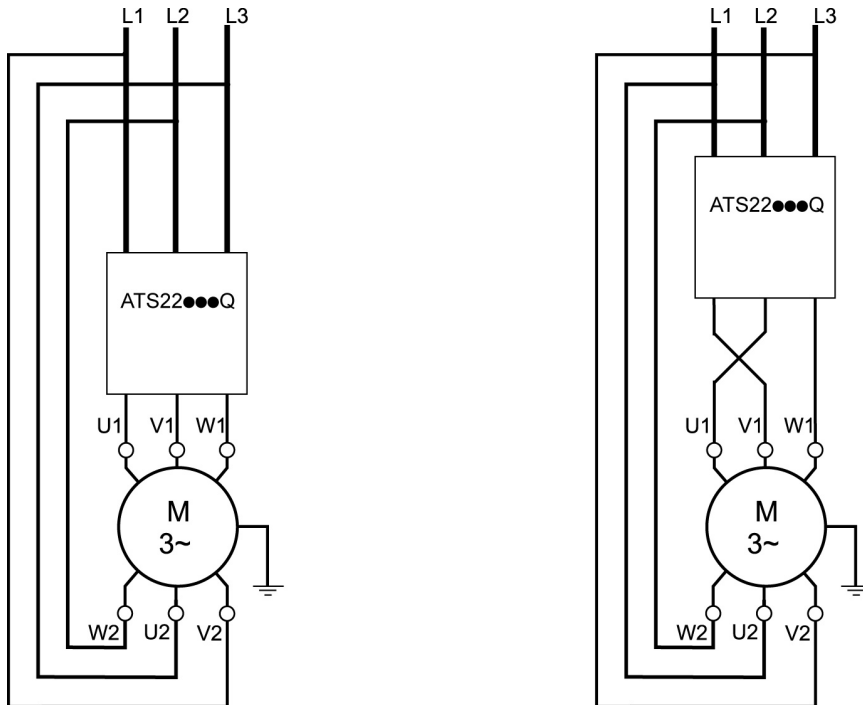

Note: To reverse the direction of the motor as shown on the figure:

- reverse the two outputs U1 and V1,
- reverse the two inputs L1 and L3.

Wiring - power terminals


Power

Observe the cable cross-sectional areas recommended in the standards.

The soft starter must be grounded to conform to the regulations concerning leakage currents. If the installation involves several soft starters on the same line, each soft starter must be grounded separately.

Keep the power cables separate from circuits in the installation with low-level signals (sensors, PLCs, measuring devices, video, telephone).

Cage style connectors for frame sizes A and B

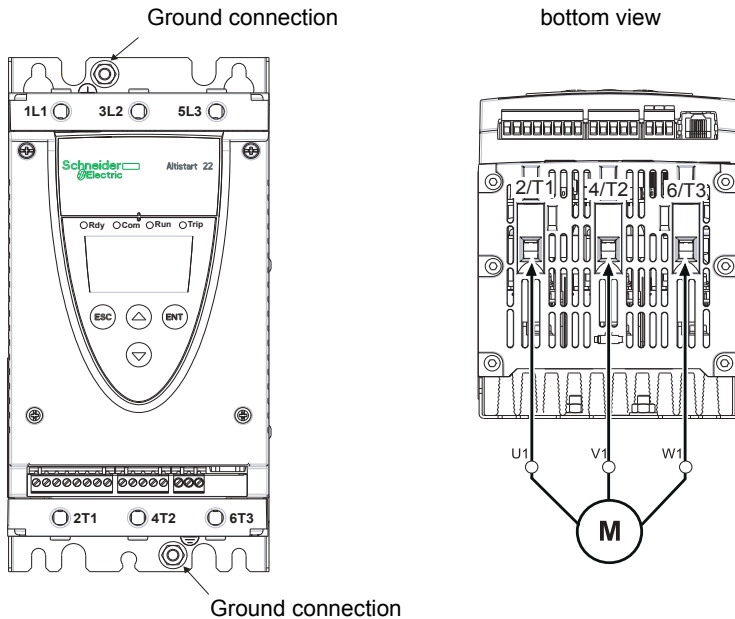

Ground connections, screw size

| Frame size | Screw |
|------------|-------|
| A | M6 |
| B | M6 |
| C | M6 |
| D | M10 |
| E | M10 |

Power connections, minimum and maximum wiring capabilities, tightening torque

| Frame size | ATS22 | IEC cable | | | | | UL cable | | | | |
|-----------------|-----------------|--|------|-------------------|------|--------------|--|-------|-------------------|------|--------------|
| | | 1/L1 3/L2 5/L3 and 2/T1 4/T2 6/T3 power supply and output to motor | | | | | 1/L1 3/L2 5/L3 and 2/T1 4/T2 6/T3 power supply and output to motor | | | | |
| | | Size | | Tightening torque | | Strip length | Gauge | | Tightening torque | | Strip length |
| | | min. | max. | min. | max. | | min. | max. | min. | max. | |
| mm ² | mm ² | N·m | N·m | mm | AWG | AWG | lb·in | lb·in | in. | | |
| A | D17, D32, D47 | 2.5 | 16 | 3 | 3 | 10 | 12 | 4 | 26 | 26 | 0.4 |
| B | D62, D75, D88 | 4 (a) | 50 | 10 | 10 | 15 | 10 (a) | 1/0 | 89 | 89 | 0.6 |

(a) The cable gauge affects the IP protection of the soft starter. To keep IP20 value with a connected cable on frame B, the minimum cable gauge is: 16 mm² or 4 AWG.

Allen key, supplied with size B products

⚠ DANGER


FIRE HAZARD DUE TO LACK OF TIGHTENING TORQUE

- Ensure correct connector tightening torque for power terminals.
- For size B, use the Allen key provided with the product.

Failure to follow these instructions will result in death or serious injury.

Wiring - power terminals

Bus bar connections for frame sizes C to E

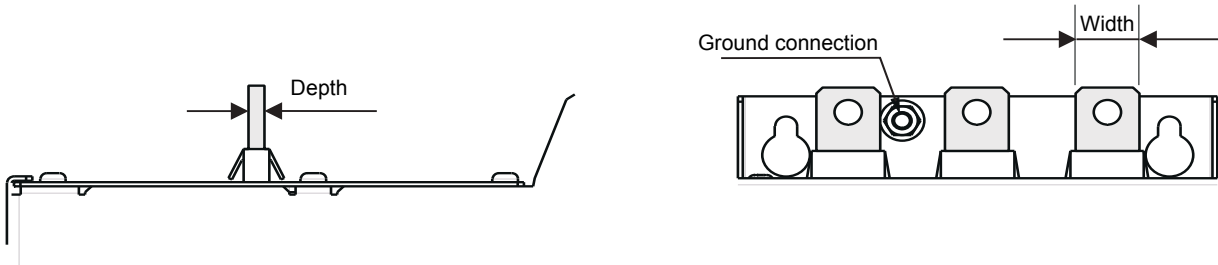

| Frame Size | ATS22 | 1/L1 3/L2 5/L3 and 2/T1 4/T2 6/T3 power supply and output to motor | | | | | | | |
|------------|---------------------------|---|----------|-----------|-----------------|-------|---------|-------------------|-------|
| | | Bar | | | Cable and cover | | | | |
| | | Width | Depth | Bolt | Size | Gauge | Cover | Tightening torque | |
| | | mm (in.) | mm (in.) | M | mm ² | MCM | Ref | N·m | lb·in |
| C | C11, C14, C17 | 20 (0.79) | 5 (0.2) | 8 (0.31) | 95 | 250 | LA9F702 | 18 | 159 |
| D | C21, C25, C32, C41 | 30 (1.18) | 5 (0.2) | 12 (0.47) | 2x150 | 2x250 | LA9F703 | 57 | 503 |
| E | C48, C59 | 40 (1.57) | 5 (0.2) | 12 (0.47) | 2x240 | 2x500 | LA9F703 | 57 | 503 |

For more details, see Dimensions and weights paragraph page [14](#).

Wiring - power terminals

Power connections, minimum required wiring section

| Frame Size | ATS22 | IEC cable mm ² (Cu 70 °C/158 °F) (1) | UL cable AWG (Cu 75 °C/167 °F) (1) |
|------------|-------|--|---------------------------------------|
| A | D17 | 2.5 | 10 |
| | D32 | 6 | 8 |
| | D47 | 10 | 6 |
| B | D62 | 16 | 4 |
| | D75 | 25 | 3 |
| | D88 | 35 | 2 |
| C | C11 | 35 | 1/0 |
| | C14 | 50 | 2/0 |
| | C17 | 70 | 4/0 |
| D | C21 | 95 | 300 MCM |
| | C25 | 120 | 350 MCM |
| | C32 | 185 | 2 x 3/0 |
| | C41 | 2 x 150 | 2 x 250 MCM |
| E | C48 | 2 x 150 | 2 x 350 MCM |
| | C59 | 2 x 185 | 2 x 500 MCM |


(1)at max ambient temperature of 40 °C (104 °F)

Wiring - control terminals

Electrical characteristics for ATS22●●●S6 and ATS22●●●Q ranges (230 Vac with 24 Vdc logic input)

| Terminal | Function | Characteristics |
|-------------|----------------------------|---|
| CL1 | ATS22 control power supply | 230 Vac +10 % |
| CL2 | | 220 Vac -15 % |
| R1B | Relay1 normally closed | Max switching capability: 5 A- 250 Vac or 30 Vdc on resistive load (p.f. =1) 2 A-250 Vac or 30 Vdc on inductive load (p.f.=0.4) Minimal commutation capability: 100 mA 12 Vdc |
| R1C | Relay1 common | |
| R1A | Relay1 normally open | |
| R2B | Relay2 normally closed | |
| R2C | Relay2 common | |
| R2A | Relay2 normally open | |
| LI1 | Logic input 1 | 3 x 24 V logic inputs with 4.3 kΩ impedance U _{max} = 30 V, I _{max} = 8 mA state 1: U>11 V - I>5 mA state 0: U<5 V - I<2 mA |
| LI2 | Logic input 2 | |
| LI3 | Logic input 3 | |
| +24 Vdc | Float 24 Vdc(+) (1) | The 24 V power supply is limited to 42 mA (for both internal and external use). 24 Vdc accuracy: 24 V ±6 Vdc Turn on/off time delay: • Hardware: <15 ms • Software: <70-85 ms (anti bounce) |
| COM | Float 24 Vdc(-) | |
| PTC1 | PTC (+) | PTC probe connection: Total resistance of the probe circuit: 750 Ω at 25 °C (77 °F). |
| PTC2 | PTC (-) | |
| ⊕ | Ground (shield) | RJ45 Modbus connector for <ul style="list-style-type: none"> • Remote terminal • SoMove software • Communication bus |
| RJ45 pin 1 | Not connected | |
| RJ45 pin 2 | Not connected | |
| RJ45 pin 3 | Common | |
| RJ45 pin 4 | D1 | |
| RJ45 pin 5 | D0 | |
| RJ45 pin 6 | Not connected | |
| RJ45 pin 7 | 12 ±0.5 Vdc (2) | |
| RJ45 pin 8 | Common | |
| RJ45 shield | Signal ground (SNG) | |


Modbus RJ45
1 2 3 4 5 6 7 8

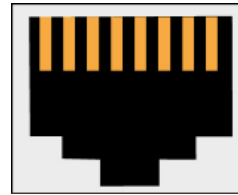

(1) 24 Vdc current is limited to 42 mA ±10 %.

(2) The voltage is 11.8 V ±0.5 V when the communication is running, but not loaded externally. Maximum output current is 100 mA.

Layout of control terminals

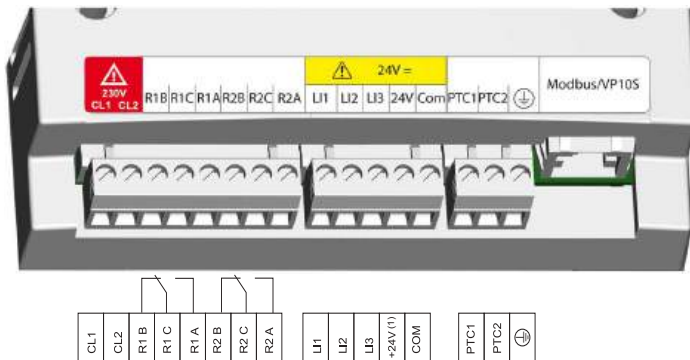

The control terminals are installed with one-way plug-in connectors.

Maximum connection capacity: 2.5 mm² (12 AWG)

Maximum tightening torque: 0.5 N·m (4.5 lb·in)

⚠ DANGER

UNINTENDED EQUIPMENT OPERATION

It is mandatory that:


- One of the relay (R1 or R2) must be set to **tr i P**.
- Relay R1 or R2 set to **tr i P** must be wired in order to command a line contactor as shown on page 38 through 41.

Failure to follow these instructions will result in death or serious injury.

Wiring - control terminals


Electrical characteristics for ATS22...S6U range (110 Vac with 110 Vac logic inputs)

| Terminal | Function | Characteristics |
|-------------|----------------------------|---|
| CL1 | ATS22 control power supply | 110 Vac -15 % |
| CL2 | | 115 Vac +10 % |
| R1B | Relay1 normally closed | Max switching capability: 5 A- 250 Vac or 30 Vdc on resistive load (p.f. =1) 2 A-250 Vac or 30 Vdc on inductive load (p.f.=0.4) Minimal commutation capability: 100 mA 12 Vdc |
| R1C | Relay1 common | |
| R1A | Relay1 normally open | |
| R2B | Relay2 normally closed | |
| R2C | Relay2 common | |
| R2A | Relay2 normally open | |
| LI1 | Logic input 1 | 3 x 110 V logic inputs with 20 kΩ impedance U _{max} = 126,5 Vac, I _{max} = 5 mA state 1: U>79 V - I>2 mA state 0: U<20 V - I<15 mA Turn on/off time delay: • Hardware: <15 ms • Software: <70-85 ms (anti bounce) |
| LI2 | Logic input 2 | |
| LI3 | Logic input 3 | |
| NC | Not connected | |
| COM | Common 110 Vac | |
| PTC1 | PTC (+) | PTC probe connection: Total resistance of the probe circuit: 750 Ω at 25 °C (77 °F). |
| PTC2 | PTC (-) | |
| | Ground (shield) | |
| RJ45 pin 1 | Not connected | RJ45 Modbus connector for • Remote terminal • So Move software • Communication bus |
| RJ45 pin 2 | Not connected | |
| RJ45 pin 3 | Common | |
| RJ45 pin 4 | D1 | |
| RJ45 pin 5 | D0 | |
| RJ45 pin 6 | Not connected | |
| RJ45 pin 7 | 12 ±0.5 Vdc (1) | |
| RJ45 pin 8 | Common | |
| RJ45 shield | Signal ground (SNG) | |
| | | |

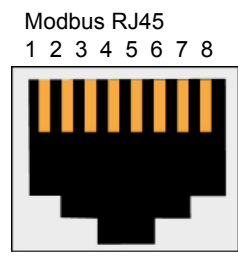

(1) The voltage is 11.8 V ±0.5 V when the communication is running, but not loaded externally. Maximum output current is 100 mA.

Layout of control terminals

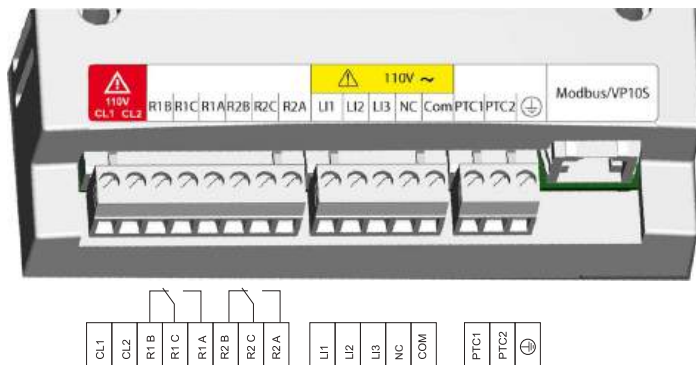

The control terminals are installed with one-way plug-in connectors.
Maximum connection capacity: 2.5 mm² (12 AWG)
Maximum tightening torque: 0.5 N·m (4.5 lb·in)

⚠ DANGER

UNINTENDED EQUIPMENT OPERATION

It is mandatory that:

- One of the relay (R1 or R2) must be set to **Er, IP**.
- Relay R1 or R2 set to **Er, IP** must be wired in order to command a line contactor as shown on page [38](#) through [41](#).

Failure to follow these instructions will result in death or serious injury.

Wiring - control terminals

Types of command

L11 stop behavior

L11 assignment is stop and cannot be changed by HMI or serial link.


This input is active on level (Low level (0) = stop).

RUN and START management

RUN and START can only be assigned to LI2 (not LI3).

In 2-wire control


On power-up or on manual trip reset, the motor will restart if the RUN command is present.

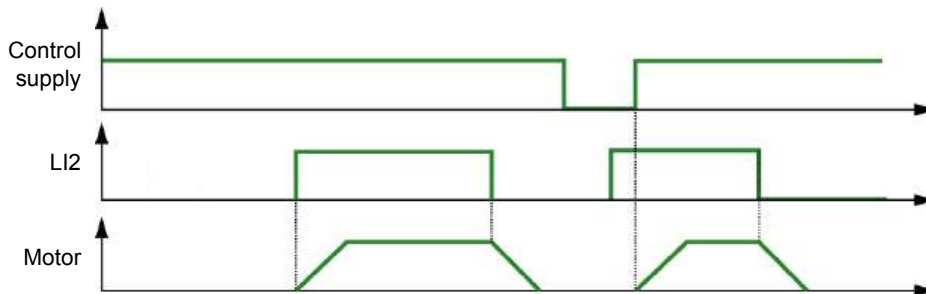

In 3-wire control


On power-up or a manual trip reset or after a stop command, or a change of assignment, the motor can only be powered once the START input has been opened (state 0) followed by a new pulse (state 1).

When switching from remote command to local command, with Run order present on the terminal control, the motor doesn't start in 3-wire control: need to remove Run order and apply it again.

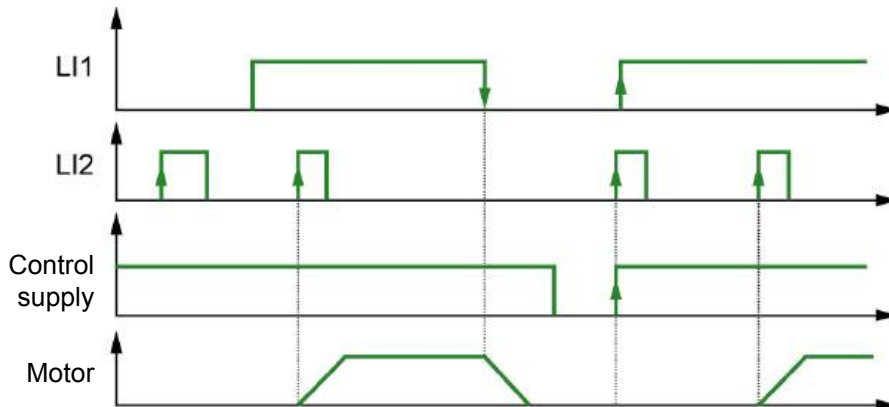

Wiring - in line connection - application diagram

ATS22...Q and ATS22...S6: 230 Vac control, logic Inputs (LI) 24 Vdc, 3-wire control

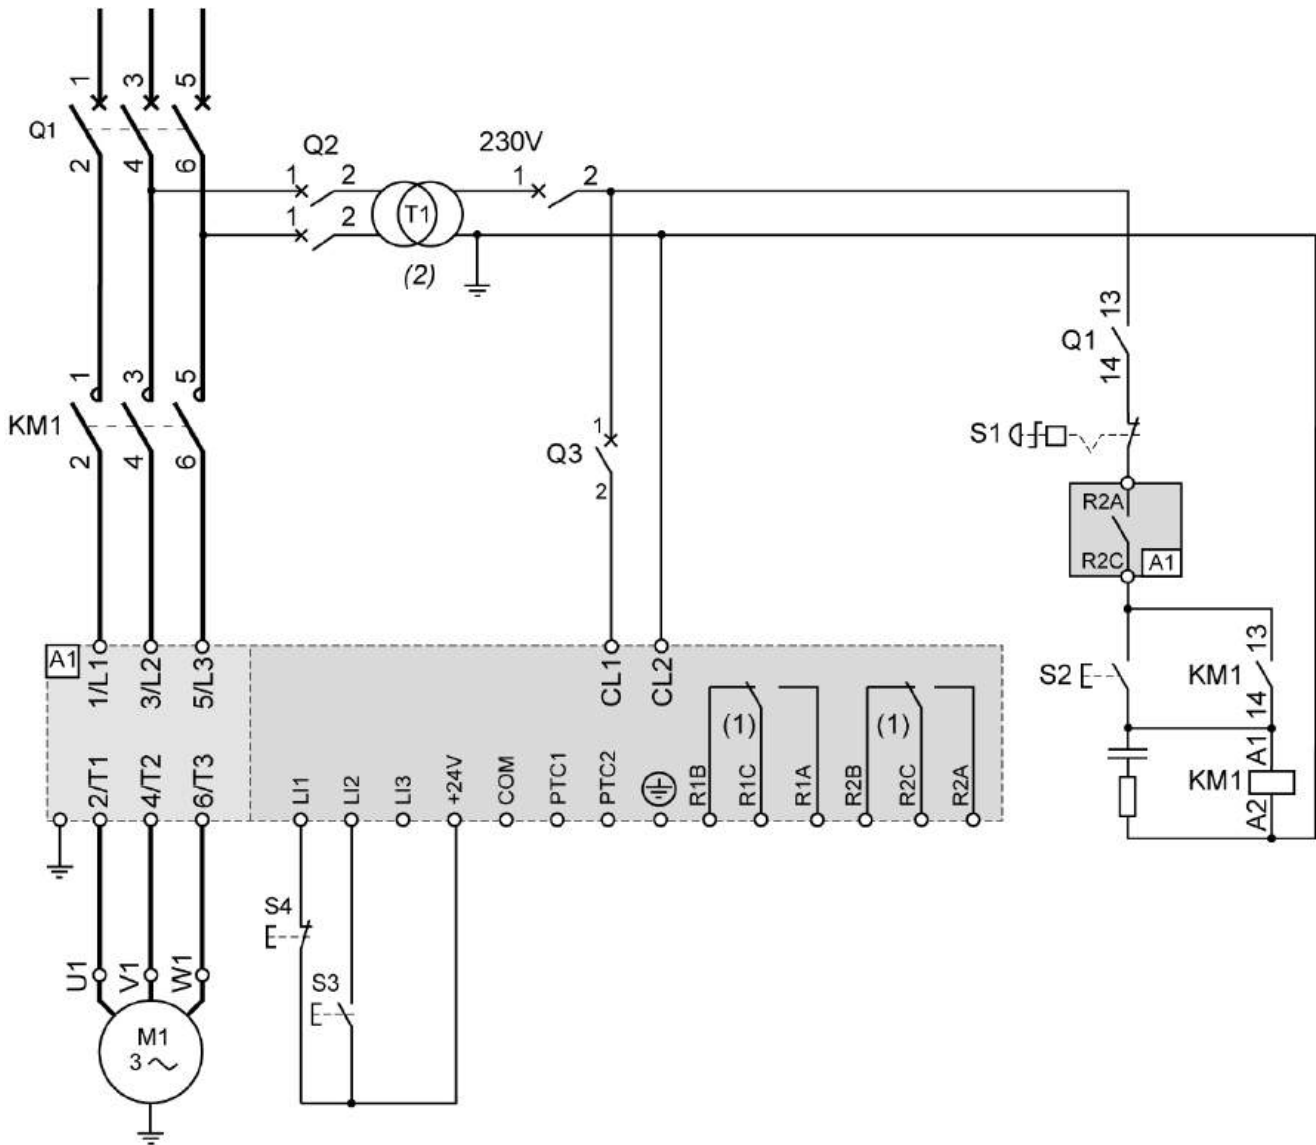

- (1) Check the operating limits of the contact, for example when connecting to high rating contactors. See "Electrical characteristics" page [35](#).
- (2) Select a voltage transformer in accordance with the mains voltage.


3-wire control setting

In the menu Advanced I/O **io**, set the following parameters:

| Parameter | Value | Description |
|-------------|--------------|--------------------------------------|
| L 12 | Start | Logic Input 2 is set to start |
| r 2 | TRIP | Trip relay is de-energized upon trip |

Wiring - in line connection - application diagram

ATS22...Q and ATS22...S6: 230 Vac control, logic Inputs (LI) 24 Vdc, 2-wire control, freewheel stop

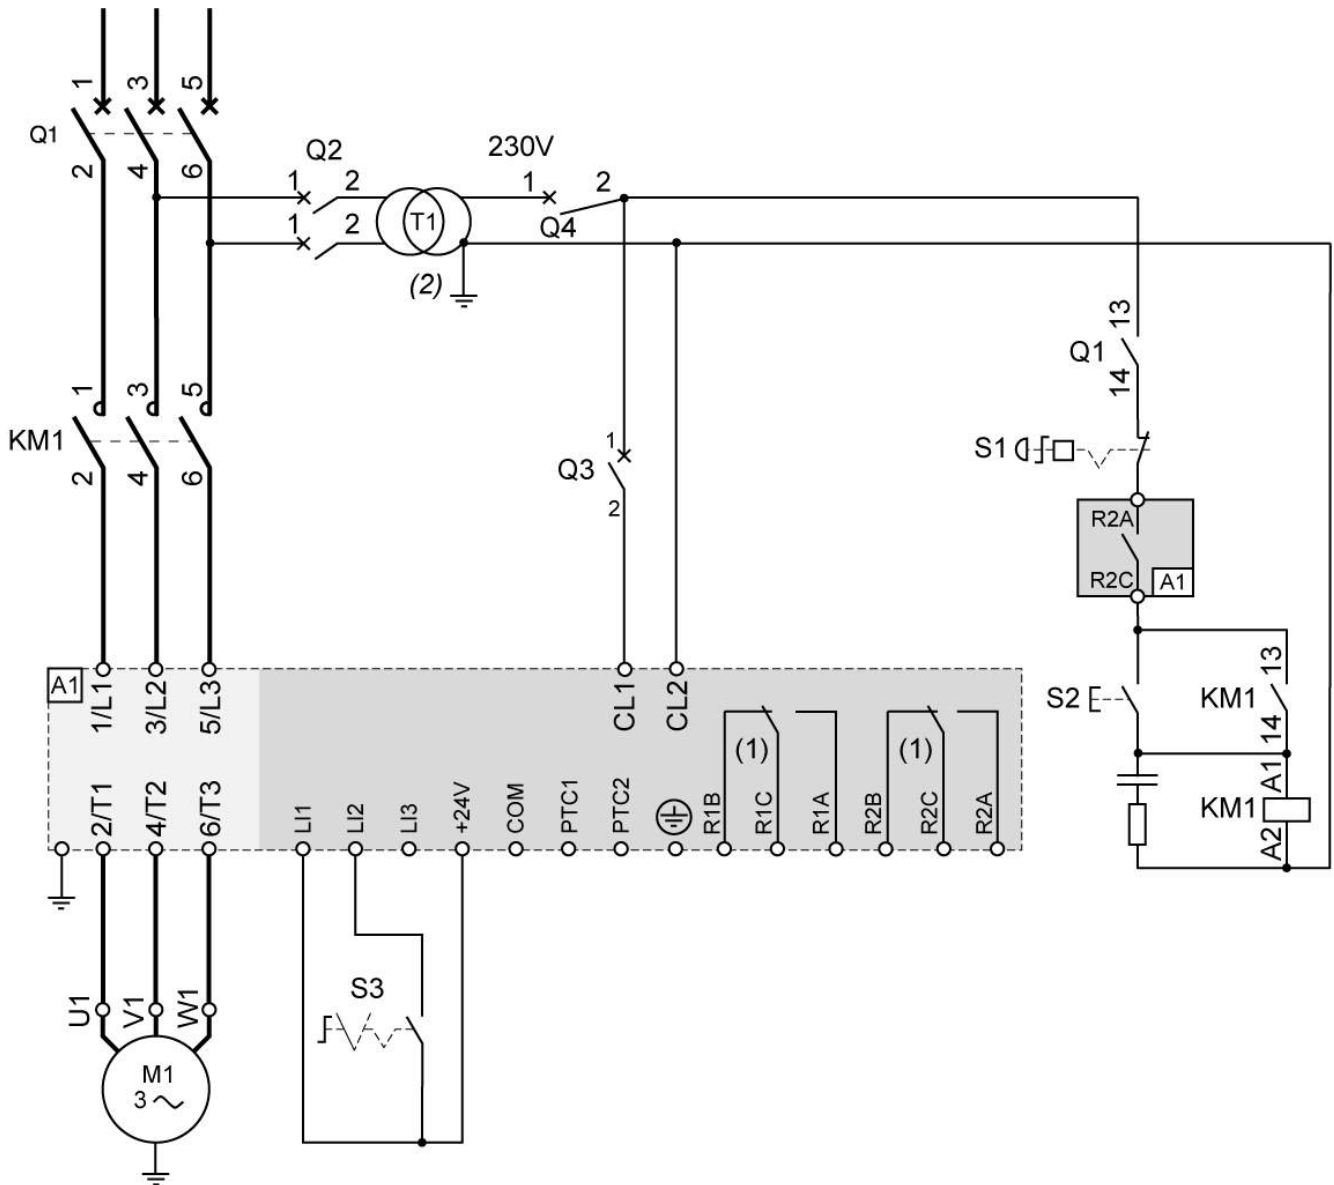

- (1) Check the operating limits of the contact, for example when connecting to high rating contactors. See "Electrical characteristics" page [35](#).
- (2) Insert a voltage transformer if the power voltage is higher than the Altistart 22 acceptable value. Characteristics: min 100 VA page [13](#).

2-wire control setting


In the menu Advanced I/O [10](#), set the following parameters:

| Parameter | Value | Description |
|-------------|-------------|--------------------------------------|
| <i>L 12</i> | <i>run</i> | Logic Input 2 is set to Run |
| <i>r 2</i> | <i>trLP</i> | Trip relay is de-energized upon trip |

Note: For UL508 schematics, see page [82](#).

Wiring - in line connection - application diagram

ATS22...S6U: 110 Vac control, Logic Inputs (LI) 110 Vac, 3-wire control

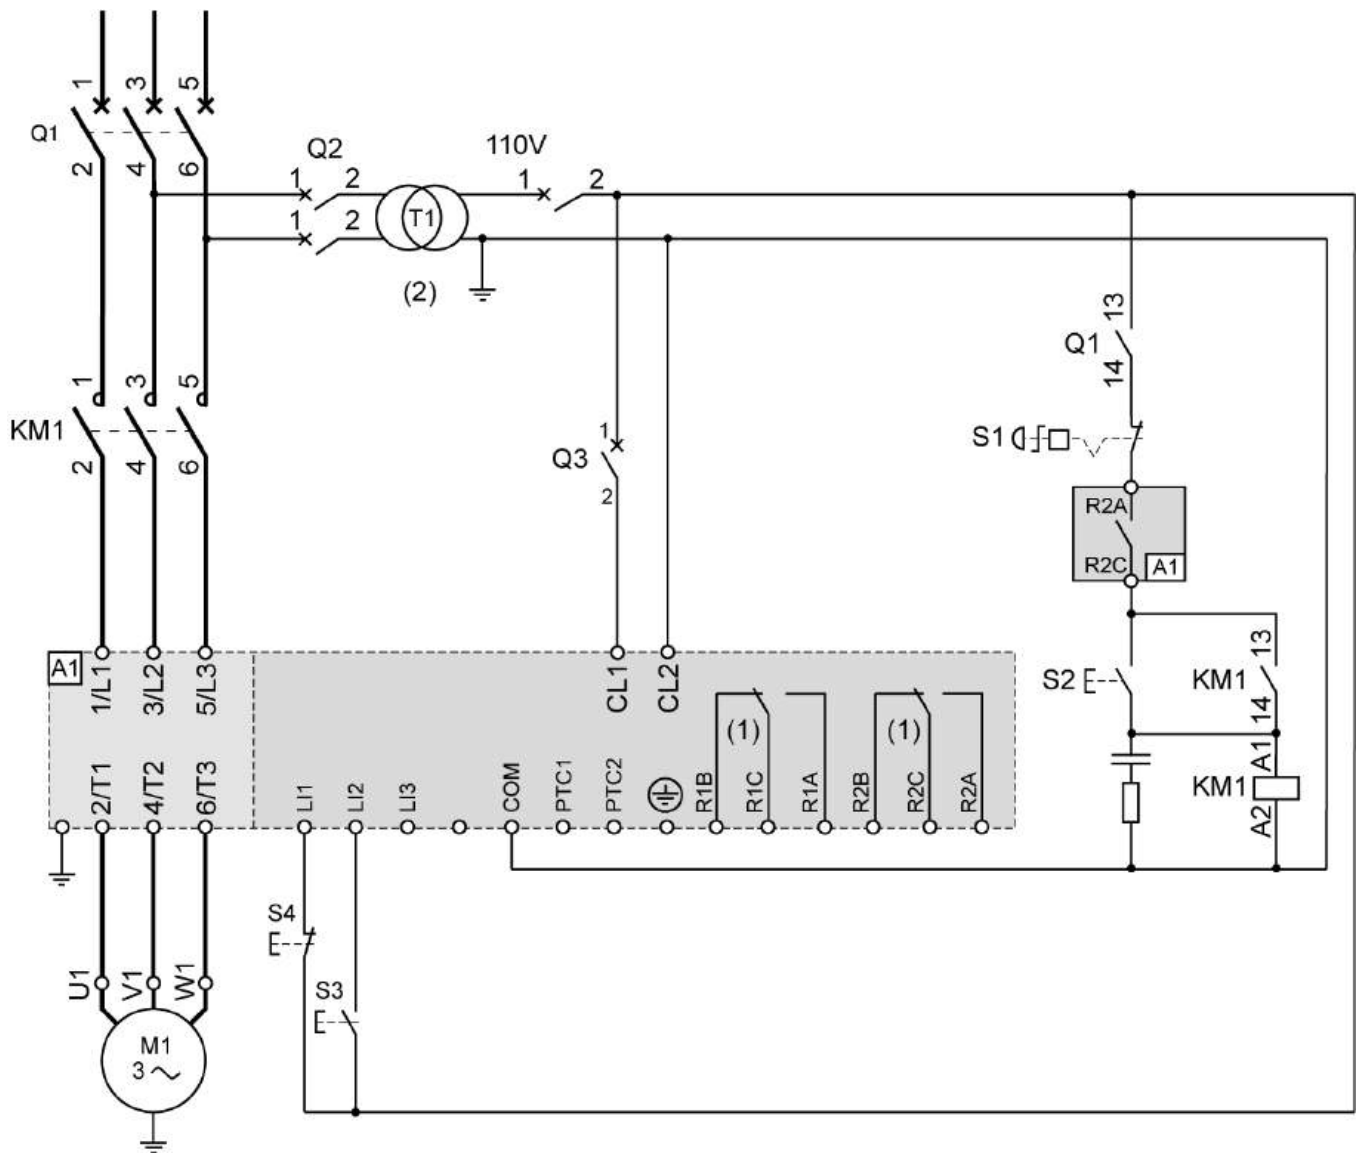

- (1) Check the operating limits of the contact, for example when connecting to high rating contactors. See "Electrical characteristics" page [36](#).
 (2) Insert a voltage transformer if the power voltage is higher than the Altistart 22 acceptable value. Characteristics: min 100 VA page [13](#).


3-wire control setting

In the menu Advanced I/O , set the following parameters:

| Parameter | Value | Description |
|--------------|------------------|--------------------------------------|
| <i>L 1 2</i> | <i>S t a r t</i> | Logic Input 2 is set to start |
| <i>r 2</i> | <i>t r i p</i> | Trip relay is de-energized upon trip |

Wiring - in line connection - application diagram

ATS22...S6U: 110 Vac control, Logic Inputs (LI) 110 Vac, 2-wire control, freewheel stop

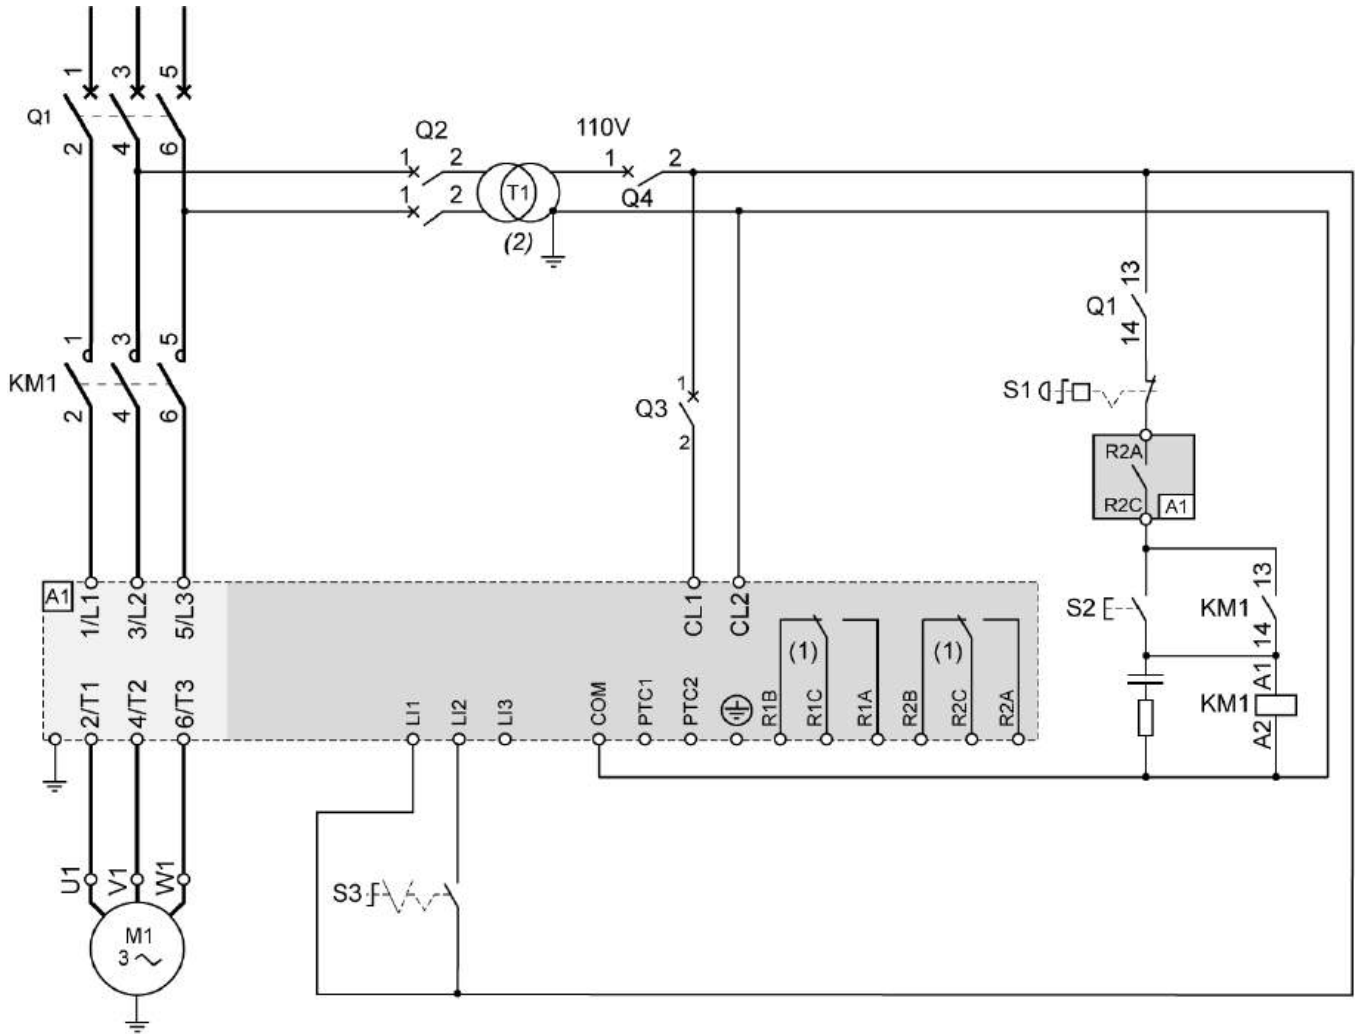

- (1) Check the operating limits of the contact, for example when connecting to high rating contactors. See "Electrical characteristics" page [36](#).
- (2) Insert a voltage transformer if the power voltage is higher than the Altistart 22 acceptable value. Characteristics: min 100 VA page [13](#).

2-wire control setting


In the menu Advanced I/O [10](#), set the following parameters:

| Parameter | Value | Description |
|-------------|--------------|--------------------------------------|
| <i>L 12</i> | <i>run</i> | Logic Input 2 is set to Run |
| <i>r 2</i> | <i>tr-LP</i> | Trip relay is de-energized upon trip |

Note: For UL508 schematics, see page [83](#).

Display terminal

Functions of the keys and the display

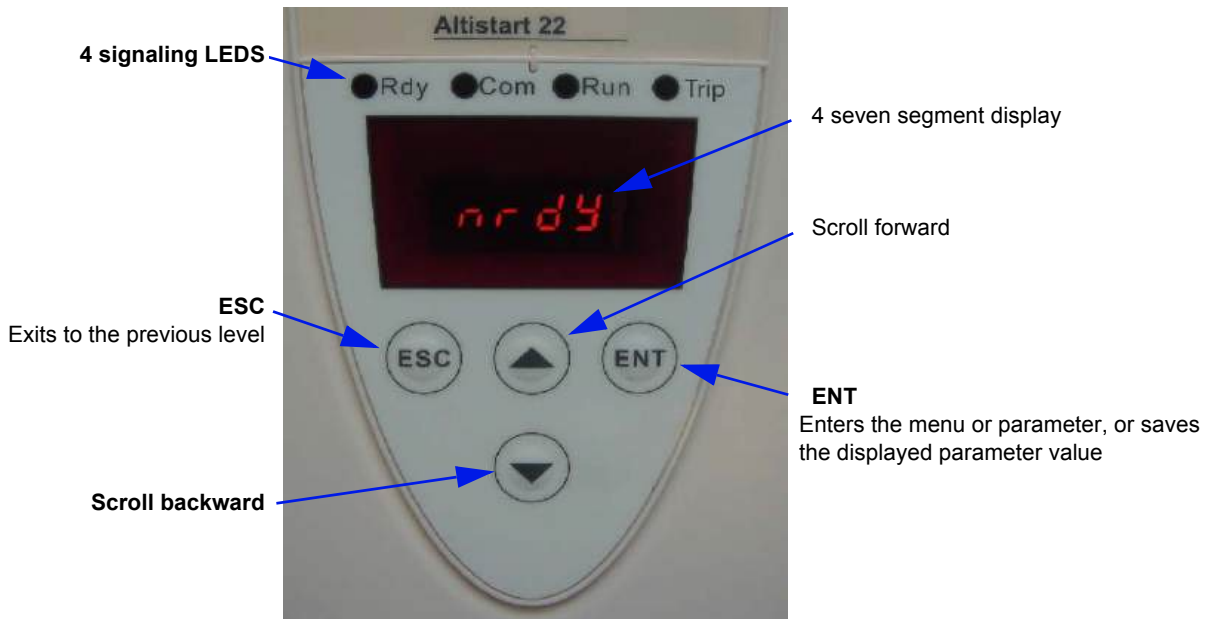

Selection process


The selection process takes you through three levels:

1-Scroll to a parameter menu and press the ENT key.

2-Scroll to a specific parameter and press the ENT key.

3-Scroll to a value and press the ENT key to save the value. A parameter value becomes valid and takes effect immediately, before you press the ENT key.

This means that, if for example you increase the current limit during the start process, the motor current will increase immediately (until 15 seconds maximum). Once you find the correct value, you can either decide to store it (press the ENT key) or return the Altistart 22 to its previous value (press the ESC key), or wait 15 seconds.

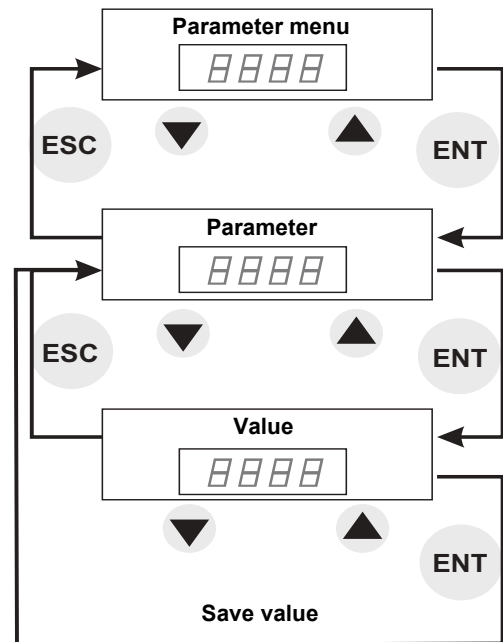

Special key combinations

Special keys combinations are used as shortcuts, see below.

| Key combination | Description |
|-----------------|--|
| ESC + ▲ | Displays u t i L menu (Utility) |
| ENT + ▲ + ▼ | Clear the trip message and reset the soft starter |
| ESC + ▲ + ▼ | Soft starter not locked (see L o d parameter) |

Display terminal

LED's display

The front cover of the control board contains four LEDs above the seven segment display that display the Altistart 22 status and activity.

| Name | Location | Description |
|------|----------------------|---|
| Rdy | Green - front cover | ON = line and control supplied OFF = no voltage on control Flashing = control supplied but no power line <i>n r d y</i> or <i>S n b</i> reached |
| Com | Green - front cover | ON = Modbus status OK; Communication present. OFF = Modbus status not OK |
| Run | Yellow - front cover | ON = motor runs at full voltage and bypass contactor on OFF = motor stopped Flashing = ACC or DEC phase |
| Trip | Red - front cover | ON = trip with immediate stop OFF = no problem Flashing = alarm warning - no stop |

NOTE: see LED parameter, page [78](#).

| LEDs included inside the seven segment display | | |
|--|----------------------------|-------------------------|
| Name | Location | Description |
| <i>L C r 1</i> | Led upper left 7 segments | Current phase 1 display |
| <i>L C r 2</i> | Led middle left 7 segments | Current phase 2 display |
| <i>L C r 3</i> | Led down left 7 segments | Current phase 3 display |

Example: *L C r 1* = 88 A

LCr1 • 
 LCr2 ◦
 LCr3 ◦

Note1: When the soft starter is inside delta connection, LCr1, LCr2, LCr3 values are current inside the windings. The line current = $L C r \times \sqrt{3}$.


Note:2 For ATS22●●●Q, *L C r 2* displays " - - " because there is no current sensor on phase 2.

Remote keypad display - option

The VW3G22101 remote keypad IP54 or VW3G22102 remote keypad IP65 can be mounted on the door of the wall-mounted or floor-standing enclosure with a seal which offers IP65 protection. Any display restrictions applied to the soft starter by the remote terminal switch will still be in force once the soft starter has been disconnected and even after it has been switched off.

Note: Set the remote keypad with

- Modbus rate = 19.2 Kbps, (see *E b r*)
- Modbus format = 8E1, 8 bit, even parity, 1 stop bit (see *F o r*)

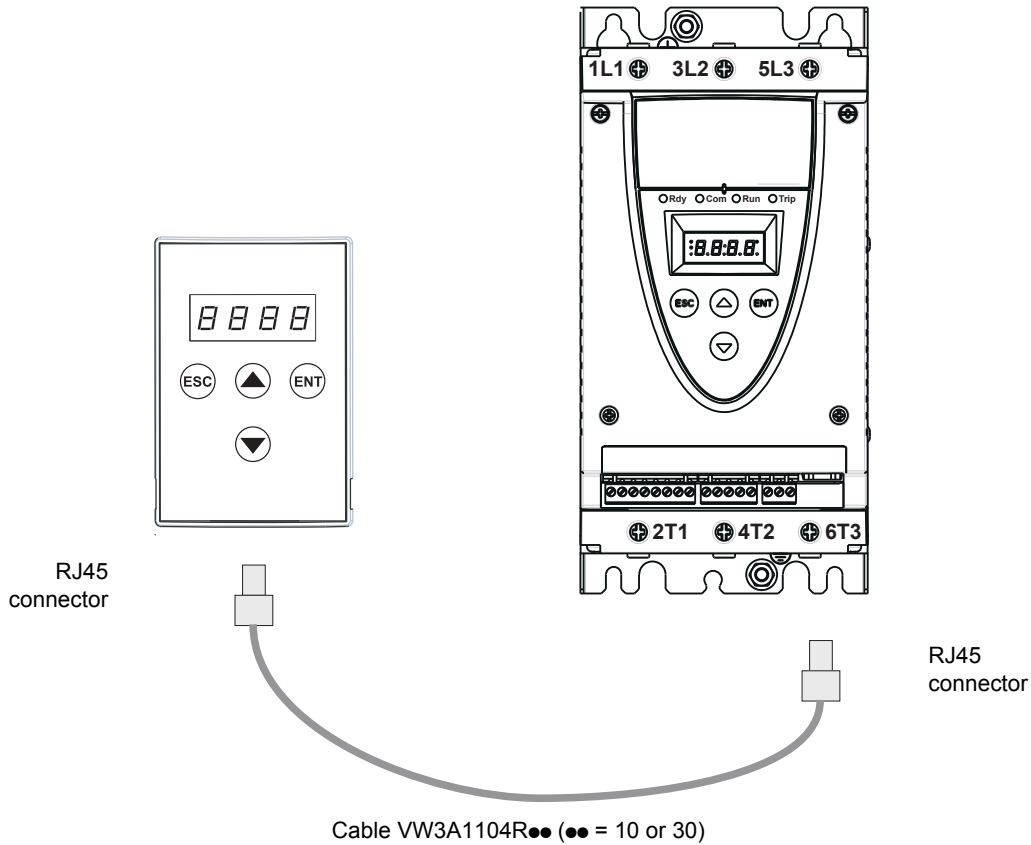

Programming and setup

Preliminary recommendations

WARNING

LOSS OF CONTROL

- The designer of any control scheme must
 - consider the potential failure modes of control paths and, for certain critical control functions,
 - provide a means to achieve a safe state during and after a path failure.
- Examples of critical control functions are emergency stop and overtravel stop.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link. (1)
- Each implementation of an ATS22 soft starter must be individually and thoroughly tested for proper operation before being placed into service.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

(1) For additional information, refer to NEMA ICS 1.1 (latest edition), "Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control".

When changing the factory configuration, record your parameter settings in the Parameter Index and Modbus addresses table, starting page [77](#).

Programming

Menu structure

Two menu levels are provided.

"Easy start up" level - factory setting

Access to basic parameters which define the characteristics of the application to manage: acceleration ramp, boost level.

"Advanced level"

Access to dedicated parameters which define the characteristics of the motor protections, interface, communication,...


This selection will add some menus and, in the particular case of Monitoring menu, it will add some parameters.

Menu selection: "Easy start up" level or "Advanced" level

1. Scroll up or down using the forward and backward keys until you reach *CONF* menu and press the ENT key. This enters Configuration menu.
2. Scroll up or down using the forward and backward keys until you reach *LAC* setting in *CONF* menu and press the ENT key.
3. Select the desired parameter (*OFF* for the easy start up level or *ON* for the advanced level) then press the ENT key. Repeat for each level of submenus and parameters until you reach the desired parameter and value.
4. Press the ENT key to save the value.

Note: A parameter value becomes valid and takes effect immediately upon changing its value. If ESC is pressed, the value previously stored in the EEPROM is restored.


Menu description

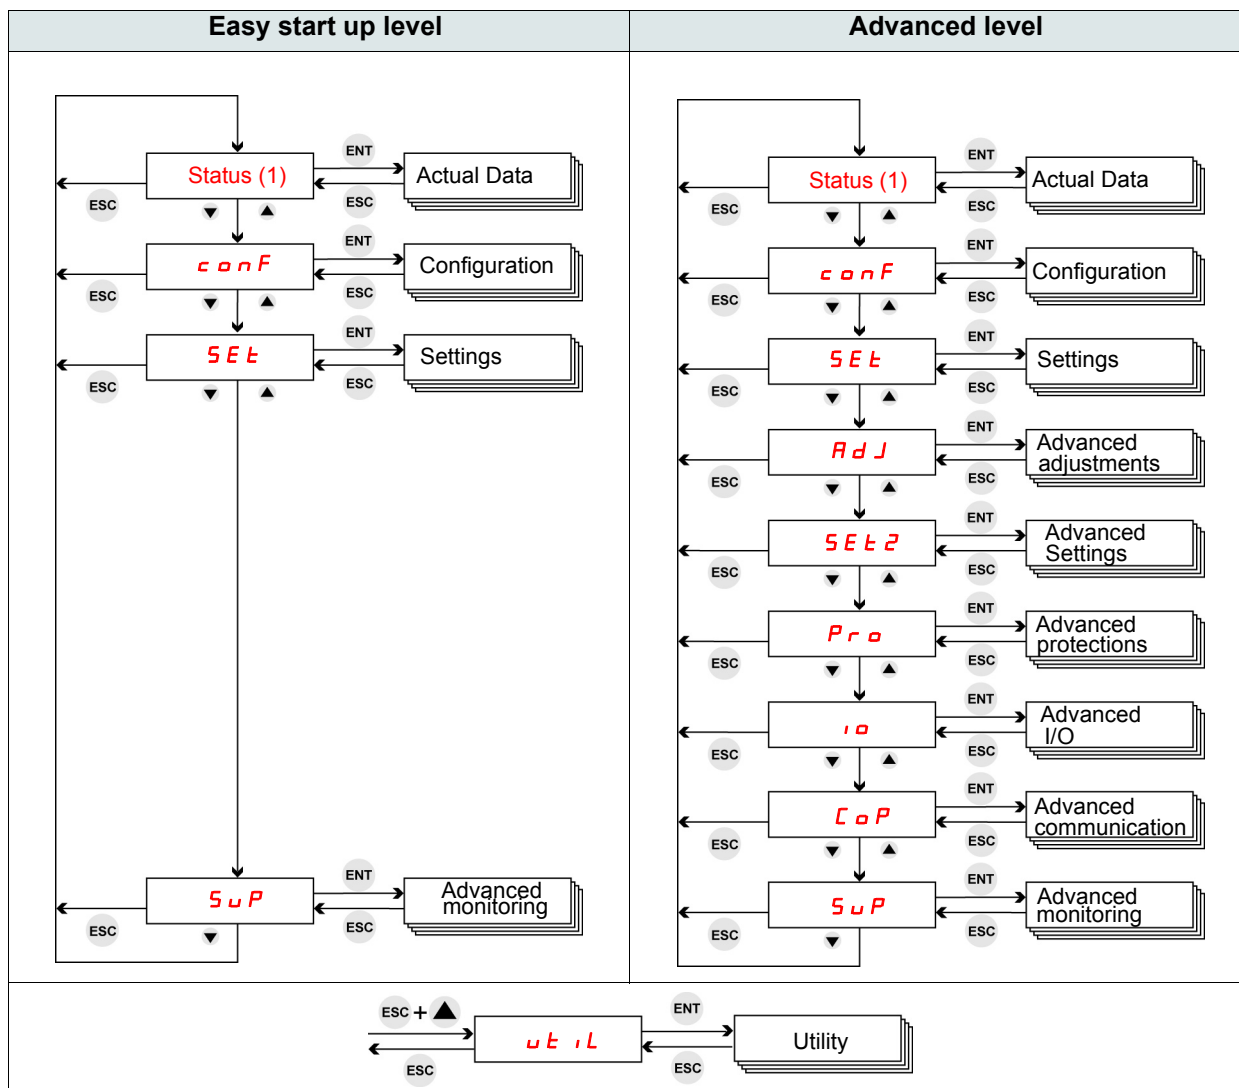

(1) Status displays the state of the soft starter: *rdy nrdy run*.
See next page for Status menu.

Programming

Status and actual data monitoring

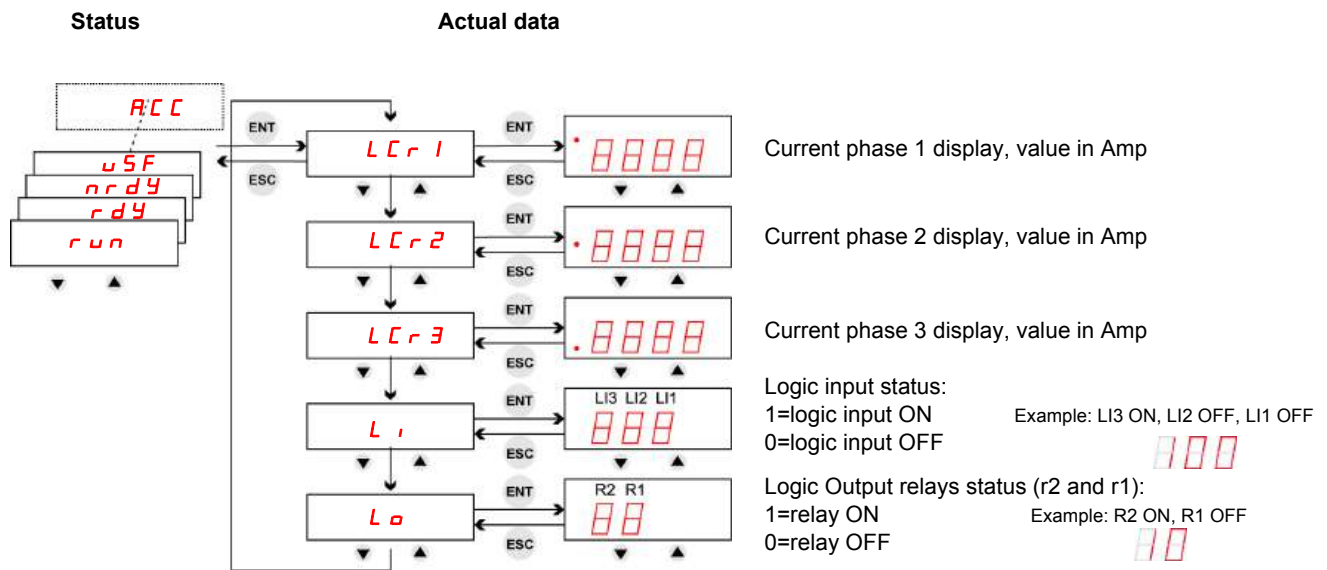

Note: When the soft starter is inside delta connection, LCr1, LCr2, LCr3 values are current inside the windings.
 The line current = $LCr \times \sqrt{3}$.

| Status | Description |
|--------|--|
| ACC | During acceleration |
| t b S | The soft starter has tripped in <i>S n b F</i> , too many starts, see Diagnostics/Troubleshooting page 76 . |
| d E C | During deceleration |
| nrDY | A stop command is present, with line and control power-on LI1 = 0 and LI2 = 1 in 2-wire control LI1 = 1 and LI2 = 1 at power up in 3-wire control Or main power is switched off |
| rDY | Soft starter is ready to start |
| run | Steady state, the bypass contactor is closed |

For the trip codes, see chapter Diagnostics / Troubleshooting page [75](#).

List of parameters

Parameters access control

- R (Read): parameter value on read ONLY.
- R/W (Read/Write): Parameter value can be changed when motor is running (except during soft start and soft stop when command is given by Modbus).
- R/W* (Read/Write): parameter value can be changed only when the soft starter is stopped.

| Code | Description | R/W |
|--------------------|------------------------------------|-----|
| Actual data | | |
| <i>LCr1</i> | Current phase 1 display (p. 47) | R |
| <i>LCr2</i> | Current phase 2 display (p. 47) | R |
| <i>LCr3</i> | Current phase 3 display (p. 47) | R |
| <i>L i</i> | Logic input status (p. 47) | R |
| <i>Lo</i> | Logic Output relays status (p. 47) | R |

| CONF Configuration | | |
|---------------------------|---|------|
| <i>icL</i> | Soft starter rated current (p. 50) | R |
| <i>dLkA</i> | Connection type (line or delta) (p. 50) | R/W* |
| <i>uLn</i> | Line voltage (p. 50) | R/W |
| <i>in</i> | Motor rated current (p. 50) | R/W* |
| <i>Cod</i> | Setting lock (p. 50) | R/W |
| <i>LAC</i> | Advanced mode (p. 50) | R/W |

| SEt Settings | | |
|---------------------|----------------------------------|-----|
| <i>t9D</i> | Initial voltage (p. 51) | R/W |
| <i>iLl</i> | Current limit (p. 51) | R/W |
| <i>tL5</i> | Max start time (p. 51) | R/W |
| <i>ACC</i> | Acceleration time (p. 52) | R/W |
| <i>dEC</i> | Deceleration time (p. 52) | R/W |
| <i>EdC</i> | End of deceleration (p. 52) | R/W |
| <i>tHP</i> | Motor thermal protection (p. 52) | R/W |

| AdJ Advanced adjustments (1) | | |
|-------------------------------------|--|------|
| <i>Snb</i> | Number of starts (p. 53) | R/W |
| <i>SLG</i> | Starts period (p. 53) | R/W |
| <i>bSt</i> | Boost time (p. 53) | R/W |
| <i>SSC</i> | Start-stop control (p. 54) | R/W* |
| <i>SFCu</i> | Start-stop profile control voltage (p. 54) | R/W* |

| SEt2 Advanced settings (1) | | |
|-----------------------------------|---------------------------------|------|
| <i>t92</i> | 2nd initial voltage (p. 55) | R/W |
| <i>iL2</i> | 2nd current limit (p. 55) | R/W |
| <i>ACC2</i> | 2nd acceleration time (p. 55) | R/W |
| <i>dEC2</i> | 2nd deceleration time (p. 55) | R/W |
| <i>in2</i> | 2nd motor rated Current (p. 55) | R/W* |

| Pro Advanced Protections (1) | | |
|-------------------------------------|---|-----|
| <i>u id</i> | Under current threshold (p. 56) | R/W |
| <i>u it</i> | Under current time delay (p. 56) | R/W |
| <i>o id</i> | Overcurrent threshold (p. 56) | R/W |
| <i>o it</i> | Overcurrent time delay (p. 57) | R/W |
| <i>ubd</i> | Unbalance threshold (p. 57) | R/W |
| <i>ubt</i> | Unbalance time delay (p. 57) | R/W |
| <i>Grdd</i> | Ground leakage current threshold (p. 57) | R/W |
| <i>Grdt</i> | Ground leakage current time delay (p. 57) | R/W |

(1) Only available when **Advanced mode LAC** page 50 is set to **on**

| Code | Description | R/W |
|---|-------------------------------------|------|
| Pro Advanced Protections (continued) (1) | | |
| <i>PHr</i> | Phase sequence (p. 57) | R/W* |
| <i>PHL</i> | Phase loss detection (p. 58) | R/W |
| <i>uSd</i> | Under voltage threshold (p. 58) | R/W |
| <i>uSt</i> | Under voltage time delay (p. 58) | R/W |
| <i>oSt</i> | Over voltage threshold (p. 59) | R/W |
| <i>oSt</i> | Over voltage time delay (p. 59) | R/W |
| <i>PEc</i> | PTC probes motor monitoring (p. 59) | R/W |
| <i>iLH</i> | Overload protection (p. 59) | R/W* |

| io Advanced IO (1) | | |
|---------------------------|------------------------|------|
| <i>L i2</i> | Logic input 2 (p. 60) | R/W* |
| <i>L i3</i> | Logic input 3 (p. 60) | R/W* |
| <i>r 1</i> | Relay 1 (p. 61) | R/W* |
| <i>r 2</i> | Relay 2 (p. 61) | R/W* |
| <i>FAn</i> | Fan management (p. 61) | R/W |

| COP Advanced communication (1) | | |
|---------------------------------------|-------------------------|------|
| <i>Add</i> | Modbus address (p. 62) | R/W* |
| <i>tbr</i> | Modbus baudrate (p. 62) | R/W* |
| <i>For</i> | Modbus format (p. 62) | R/W* |
| <i>tto</i> | Modbus time out (p. 62) | R/W* |
| <i>CtrL</i> | Command channel (p. 62) | R/W* |

| SUP Advanced monitoring | | |
|--------------------------------|------------------------------------|---|
| <i>StPr</i> | Last starting time (p. 63) | R |
| <i>StCL</i> | Last start maximum current (p. 63) | R |
| <i>LtE</i> | Last trip (p. 63) | R |
| <i>d iCL</i> | Trip current (p. 63) | R |
| <i>rne</i> | Total run time (p. 63) | R |
| <i>Stnb</i> | Total number of starts (p. 63) | R |
| <i>dEFt</i> | Total number of trips (p. 63) | R |
| <i>dEF1</i> | Trip history 1 (p. 63) | R |
| <i>dEF2</i> | Trip history 2 (1) (p. 63) | R |
| <i>dEF3</i> | Trip history 3 (1) (p. 63) | R |
| <i>dEF4</i> | Trip history 4 (1) (p. 63) | R |
| <i>dEF5</i> | Trip history 5 (1) (p. 63) | R |
| <i>dEF6</i> | Trip history 6 (1) (p. 63) | R |
| <i>dEF7</i> | Trip history 7 (1) (p. 63) | R |
| <i>dEF8</i> | Trip history 8 (1) (p. 63) | R |
| <i>dEF9</i> | Trip history 9 (1) (p. 63) | R |

| uLiL Utility (2) | | |
|-------------------------|--|------|
| <i>LESk</i> | Soft starter self test (p. 64) | R/W* |
| <i>uDP</i> | Soft starter software version (p. 64) | R |
| <i>FCS</i> | Back to factory settings (p. 64) | R/W* |
| <i>rPr</i> | Reset of trip history and counters (p. 64) | R/W* |

(2) Accessible, except motor in run state, using the key shortcut



Parameter settings

Structure of parameter tables

Parameter tables contain the descriptions of the various menus and are exploitable as well with the remote terminal and with the integrated terminal.

Example:

| Code | Name/Description | R/W | Adjustment range | Factory setting |
|-----------------------------|---|--------|-----------------------------|----------------------|
| <i>conf</i> 2 | Configuration menu 1 | | | |
| <i>dLEA</i> | <input type="checkbox"/> Connection type | R/W* 6 | | Line |
| 5 <i>LINE</i> <i>dLE</i> | <input type="checkbox"/> In line connection <input type="checkbox"/> Inside delta connection | | | |
| <i>uLn</i> | <input type="checkbox"/> Line voltage 3 | R/W | Q range: 200 to 440 V 7 | Q range: 400 V 8 |
| 4 | Set to the nominal voltage of the mains. | | S6-S6U ranges: 200 to 600 V | S6-S6U ranges: 480 V |



1. Menu name
2. Menu code on display
3. Description of the parameter and complementary information
4. Parameter code on display
5. Parameter value code(s) on display
6. Access control:
 - R (Read): parameter value on read ONLY
 - R/W (Read/Write): parameter value can be changed when motor is running (except during soft start and soft stop when command is given by Modbus).
 - R/W* (Read/Write): parameter value can be changed only when the soft starter is stopped.
 - Write (R/W): parameter value can be changed when the soft starter is running
7. If any, adjustment range of the parameter
8. Factory setting of the parameter, if write is possible the parameter can be modified by the user.

Configuration menu (ConF)





| Code | Name/Description | R/W | Adjustment range | Factory setting | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|--|---|---|--|--|----------------|-----------|-------------|------------|----------|-------------------------|------------|------------|---------------------------------|-------------|----------|---|------------|------------|-----------------------------|------------|----------|----------------------------------|
| conf | Configuration menu | | | | | | | | | | | | | | | | | | | | | | | | |
| icL | <input type="checkbox"/> Soft starter rated current Maximum rated continuous current of the soft starter (see pages 11 and on the Quickstart annex (S1A14738)). icL value is on the soft starter nameplate (Soft starter FLA). Read only parameter between 17 A and 590 A. | R | | According to the soft starter rating | | | | | | | | | | | | | | | | | | | | | |
| dLEA | <input type="checkbox"/> Connection type | R/W* | | LinE | | | | | | | | | | | | | | | | | | | | | |
| Line dLE | <div style="text-align: center;">NOTICE</div> <p>RISK OF DAMAGE TO THE SOFT STARTER</p> <ul style="list-style-type: none"> This parameter must be set in accordance with the wiring type, see page 30. When dLEA is set to dLE: <ul style="list-style-type: none"> Only the ATS22●●●Q range can be installed inside delta connection. Ensure connection exactly as shown page 30. Line voltage should not exceed 440 V. <p>Failure to follow these instructions can result in equipment damage.</p> <ul style="list-style-type: none"> <input type="checkbox"/> Line: in line connection <input type="checkbox"/> Inside delta connection of the motor. <table border="1"> <thead> <tr> <th colspan="3">Parameters automatically set when dLEA = dLE</th> </tr> <tr> <th>Parameter code</th> <th>Set value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>bSt</td> <td>0</td> <td>Boost time, see page 53</td> </tr> <tr> <td>SSC</td> <td>oFF</td> <td>Start-stop control, see page 54</td> </tr> <tr> <td>SPCv</td> <td>0</td> <td>Start-stop profile control voltage, see page 54</td> </tr> <tr> <td>PHr</td> <td>123</td> <td>Phase sequence, see page 57</td> </tr> <tr> <td>EdC</td> <td>Inactive</td> <td>End of deceleration, see page 52</td> </tr> </tbody> </table> | | | | Parameters automatically set when dLEA = dLE | | | Parameter code | Set value | Description | bSt | 0 | Boost time, see page 53 | SSC | oFF | Start-stop control, see page 54 | SPCv | 0 | Start-stop profile control voltage, see page 54 | PHr | 123 | Phase sequence, see page 57 | EdC | Inactive | End of deceleration, see page 52 |
| Parameters automatically set when dLEA = dLE | | | | | | | | | | | | | | | | | | | | | | | | | |
| Parameter code | Set value | Description | | | | | | | | | | | | | | | | | | | | | | | |
| bSt | 0 | Boost time, see page 53 | | | | | | | | | | | | | | | | | | | | | | | |
| SSC | oFF | Start-stop control, see page 54 | | | | | | | | | | | | | | | | | | | | | | | |
| SPCv | 0 | Start-stop profile control voltage, see page 54 | | | | | | | | | | | | | | | | | | | | | | | |
| PHr | 123 | Phase sequence, see page 57 | | | | | | | | | | | | | | | | | | | | | | | |
| EdC | Inactive | End of deceleration, see page 52 | | | | | | | | | | | | | | | | | | | | | | | |
| uLn | <input type="checkbox"/> Line voltage Set to the nominal voltage of the mains. Note: Improper setting may cause unnecessary tripping, because Uln is the reference for over voltage and under voltage protections. | R/W | Q range: 200 to 440 V S6-S6U ranges: 200 to 600 V | Q range: 400 V S6-S6U ranges: 480 V | | | | | | | | | | | | | | | | | | | | | |
| in | <input type="checkbox"/> Motor rated current <ul style="list-style-type: none"> Soft starter in line connection: in = rated current of the motor. Soft starter inside delta connection: in = rated current of the motor / $\sqrt{3}$. | R/W* | 0.4 icL up to icL | According to the soft starter rating (pages 11 to 22) | | | | | | | | | | | | | | | | | | | | | |
| cod nLoC LoC | <input type="checkbox"/> Setting lock Used to enable or disable parameters modification on the displays. <ul style="list-style-type: none"> <input type="checkbox"/> not locked: all R/W parameters can be modified. Also accessible with key combination ENT + ▲ + ▼ <input type="checkbox"/> locked: all parameters are read only on local display or remote keypad display (the parameters can be still modified by serial link and SoMove software). | R/W | | nLOC | | | | | | | | | | | | | | | | | | | | | |
| LAC oFF oN | <input type="checkbox"/> Advanced mode Allows you to access to the Advanced level, see page 46 for detailed description. <ul style="list-style-type: none"> <input type="checkbox"/> off: Easy start up level <input type="checkbox"/> on: Advanced level Note: It also allows to display a longer trip history list: LAC set to oFF : Total number of trips dEFt and Trip history 1 dEF1 , page 63. LAC set to oN : Total number of trips dEFt and Trip history 1 dEF1 to Trip history 9 dEF9 , page 63. | R/W | | oFF | | | | | | | | | | | | | | | | | | | | | |

*: Write only when the soft starter is stopped


Settings menu (SEt)
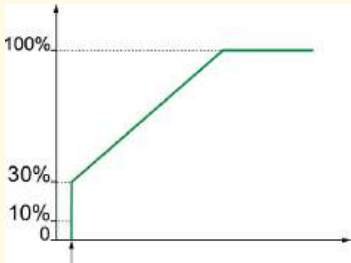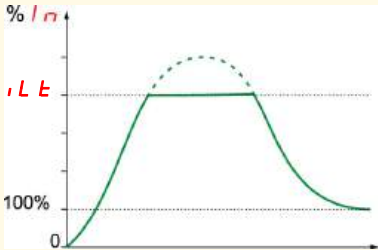
| Code | Name/Description | R/W | Adjustment range | Factory setting |
|---|---|-----|--|-----------------|
| SEt | Settings menu | | | |
| t90 | <input type="checkbox"/> Initial voltage Sets the motor's initial starting voltage. Initial voltage should be set in order to produce motor rotation as soon as the voltage is applied to the motor. If set too low, the motor will rotate later after the "Run" signal. Voltage%  | R/W | 10..50 % of full voltage, by increment of 5 | 30 % |
| | <p>t90 is set by increment of 5 with the HMI. t90 is set by increment of 1 only with the communication network.</p> | | | |
| ILt | <input type="checkbox"/> Current limit Set the motor current limit applied during the soft start. With the maximum load, the ILt should be set to a high enough value to allow motor start. Current limit is not operating during Run and Soft stop.  | R/W | 200..700 % of In with max 350 % of ICL | 350 % |
| | <p>If the application requires more 350% ICL, the soft starter must be oversized.</p> | | | |
| NOTICE | | | | |
| RISK OF DAMAGE TO THE SOFT STARTER | | | | |
| By communication network, do not set ILt above 350 % of ICL . | | | | |
| Failure to follow these instructions can result in equipment damage. | | | | |
| tLS | <input type="checkbox"/> Max start time Set the maximum start time. The time calculation is between the "start" order and "Run" Led light on (motor runs at full voltage and bypass contactor on). Used to prevent a longer start time than expected. Note: Check that ACC is lower than tLS. Example: jammed motor If the starting time exceeds the value of tLS , the Soft starter displays SEF "Too Long StartTime" trip, page 76 . | R/W | 1..250 s | 15 s |

Settings menu (SEt)
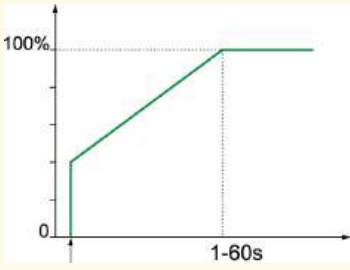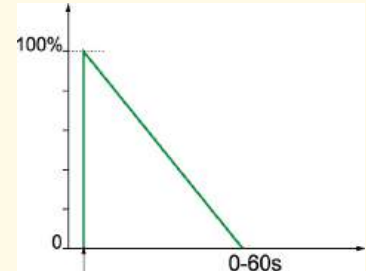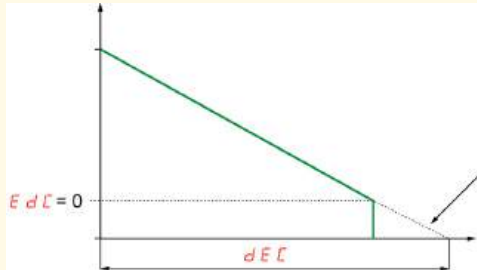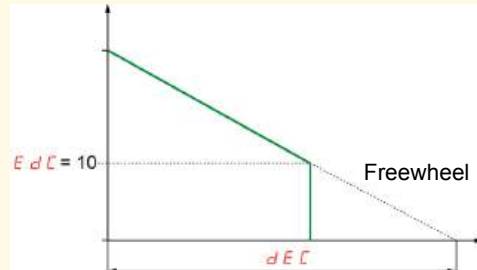
| Code | Name/Description | R/W | Adjustment range | Factory setting |
|-------------------------------------|---|-----|------------------------|-----------------|
| SEt | Settings menu (continued) | | | |
| ACC | <input type="checkbox"/> Acceleration time Determines motor's voltage ramp up time, if SSC is set to OFF. Determines motor's torque ramp up time, if SSC is set to ON. | R/W | 1..60 s | 10 s |
| |  <p>Run command</p> | | | |
| DEC | <input type="checkbox"/> Deceleration time Determines motor's voltage ramp down time, if SSC is set to OFF. Determines motor's torque ramp down time, if SSC is set to ON. | R/W | FrEE , 1...60 s | Free |
| I to 60 FrEE | <input type="checkbox"/> Deceleration time <input type="checkbox"/> Freewheel deceleration % | | | |
| |  <p>Run</p> | | | |
| EDC | <input type="checkbox"/> End of deceleration Threshold for changing to freewheel stop mode at the end of deceleration. Soft deceleration will end when the estimated torque falls below the EDC value. Note: EDC is inactive when DLtA = DLt . In this case, EDC value is not used and is not relevant. | R/W | 0..10 | 0 |
| | <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Motor voltage</p>  <p>Time(s)</p> </div> <div style="text-align: center;"> <p>Motor voltage</p>  <p>Time(s)</p> </div> </div> | | | |
| LHP | <input type="checkbox"/> Motor thermal protection To select the class of motor thermal protection, see explanations and curves page 22. | R/W | | 10 |
| 10 20 30 | <input type="checkbox"/> IEC class 10 <input type="checkbox"/> IEC class 20 <input type="checkbox"/> IEC class 30 (heavy duty) | | | |
| | Note: To activate the Motor thermal protection, set LHP to ErUN or on , page 59 | | | |

Advanced adjustments menu (AdJ)
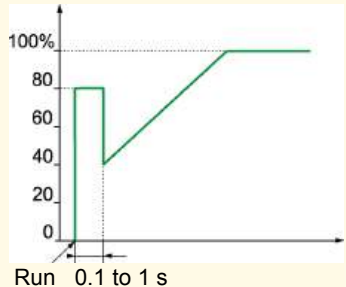
| Code | Name/Description | R/W | Adjustment range | Factory setting |
|----------------|--|-----|-----------------------------------|-----------------|
| AdJ (1) | Advanced adjustments menu | | | |
| Snb | <input type="checkbox"/> Number of starts Limiting the number of soft starts and soft stops during an adjustable period of time. This period is set with SLG . When the number of soft starts and soft stops is above the Snb value, during SLG period, the trip message is SnbF or tbs . Example 1: Snb = 6, SLG = 30 min and dEC = Free 6 starts are allowed in 30 min period. If you do 7 starts, you will have SnbF trip message. Example 2: Snb = 6, SLG = 30 min and dEC = 10 3 starts and 3 stops are allowed in 30 min period. If you do 4 starts, you will have SnbF trip message. | R/W | oFF , 1..10 | oFF |
| SLG | <input type="checkbox"/> Starts period See Snb above. | R/W | 1..60 min | 30 min |
| bSt | <input type="checkbox"/> Boost time Intended to start high friction loads that require high starting torque for a short time. A pulse of 80% uLn , without current limit, is initiated to break the load free. Pulse duration is adjustable, 0.1 – 1sec. After this pulse, the voltage is ramped down to the initial voltage setting, before ramping up again to full voltage according to start parameters settings. Voltage %  Note: bSt is inactive (=0) when dLtR = dLl . In this case, bSt value is not used and is not relevant. 0.1 s on keypad becomes 1 with Modbus (1/10th s value with Modbus). | R/W | 0.0 .. 1.0 by increment of 0.1 | 0 (no pulse) |

(1) Only available when **Advanced mode LRC** page **50** is set to **on**.

*: Write only when the soft starter is stopped

Advanced adjustments menu (AdJ)

| Code | Name/Description | R/W | Adjustment range | Factory setting | | | | | | | | | | | | | | | |
|---|---|------------------------------------|------------------|-----------------|---|--|--|----------------|--------|-------------|------------|---------------------------------|---------------------------------|------------|---------------------------------|---------------------------------|-------------|--------|------------------------------------|
| AdJ (1) | Advanced adjustments menu (continued) | | | | | | | | | | | | | | | | | | |
| SSC | <input type="checkbox"/> Start-stop control | R/W* | | On | | | | | | | | | | | | | | | |
| on | <input type="checkbox"/> On : Acceleration ACC and deceleration DEC are controlled by torque. When SSC=on the soft starter will set automatically the Start-stop profile control voltage, SPCV DEACTIVATED. This configuration is suitable for most of the applications, and especially pumps. However, other controls are available with SPCV (activated when SSC=off) | | | | | | | | | | | | | | | | | | |
| off | <input type="checkbox"/> Off | | | | | | | | | | | | | | | | | | |
| | <table border="1"> <thead> <tr> <th colspan="3">Parameters affected when SSC = off</th> </tr> <tr> <th>Parameter code</th> <th>Status</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>ACC</td> <td>Controlled by voltage variation</td> <td>Acceleration time, see page 52.</td> </tr> <tr> <td>DEC</td> <td>Controlled by voltage variation</td> <td>Deceleration time, see page 52.</td> </tr> <tr> <td>SPCV</td> <td>Active</td> <td>Start-stop profile control voltage</td> </tr> </tbody> </table> | | | | Parameters affected when SSC = off | | | Parameter code | Status | Description | ACC | Controlled by voltage variation | Acceleration time, see page 52. | DEC | Controlled by voltage variation | Deceleration time, see page 52. | SPCV | Active | Start-stop profile control voltage |
| Parameters affected when SSC = off | | | | | | | | | | | | | | | | | | | |
| Parameter code | Status | Description | | | | | | | | | | | | | | | | | |
| ACC | Controlled by voltage variation | Acceleration time, see page 52. | | | | | | | | | | | | | | | | | |
| DEC | Controlled by voltage variation | Deceleration time, see page 52. | | | | | | | | | | | | | | | | | |
| SPCV | Active | Start-stop profile control voltage | | | | | | | | | | | | | | | | | |
| | Note: SSC is set to off when dLtr = dLt . In this case, SSC value is not used and is not relevant. | | | | | | | | | | | | | | | | | | |
| SPCV | <input type="checkbox"/> Start-stop profile control voltage | R/W* | | 0 | | | | | | | | | | | | | | | |
| 0 | Acceleration and deceleration are controlled by voltage variation | | | | | | | | | | | | | | | | | | |
| 1 | Note: SPCV is forced to "profile 0" when dLtr = dLt . SPCV is inactive When SSC = on . In these cases, SPCV values are not used and are not relevant. | | | | | | | | | | | | | | | | | | |
| 2 | <input type="checkbox"/> Start-stop profile 0: open loop with simple voltage ramp-up. | | | | | | | | | | | | | | | | | | |
| 3 | <input type="checkbox"/> Start-stop profile 1 <input type="checkbox"/> Start-stop profile 2 <input type="checkbox"/> Start-stop profile 3 | | | | | | | | | | | | | | | | | | |
| | Profiles 1, 2 and 3, are controlling voltage ramp-up with reduction of the over-torque at the end of starting. Advice: evaluate behavior on the application from profile 0 up to profile 3. If the application is instable, come back to the previous profile. | | | | | | | | | | | | | | | | | | |
| | Torque | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | |
| | time | | | | | | | | | | | | | | | | | | |

(1) Only available when **Advanced mode LAC** page 50 is set to **on**.



*: Write only when the soft starter is stopped

Advanced settings menu (SEt2)

| Code | Name/Description | R/W | Adjustment range | Factory setting |
|-----------------|---|------|--|---|
| SEt2 (1) | Advanced settings menu | | | |
| | <p>SEt2 allows you to have a 2nd set for the 5 parameters below. These parameters have the same definition as SEt.</p> <p>They can be validated with 2 possibilities:</p> <ul style="list-style-type: none"> Remotely by communication. With logic input. | | | |
| U92 | <input type="checkbox"/> 2nd initial voltage Same as Initial voltage U90 page 51. | R/W | 10..50 % of full voltage ULn , by increment of 5 | 30 % |
| ILt2 | <input type="checkbox"/> 2nd current limit Same as Current limit ILt page 51. | R/W | 200..700 of IN2 with max 350 % ICL | 350 % |
| ACC2 | <input type="checkbox"/> 2nd acceleration time Same as acceleration time ACC page 52. | R/W | 1..60 s | 10 s |
| dEC2 | <input type="checkbox"/> 2nd deceleration time Same as deceleration time dEC page 52. | R/W | FREE , 1..60 s | FREE |
| IN2 | <input type="checkbox"/> 2nd motor rated Current Same as motor rated current IN page 50. | R/W* | 0.4 ICL up to ICL | According to the soft starter rating (see pages 11 to 22) |

(1) Only available when Advanced mode **LAC** page 50 is set to **on**.

Advanced protections menu (PrO)
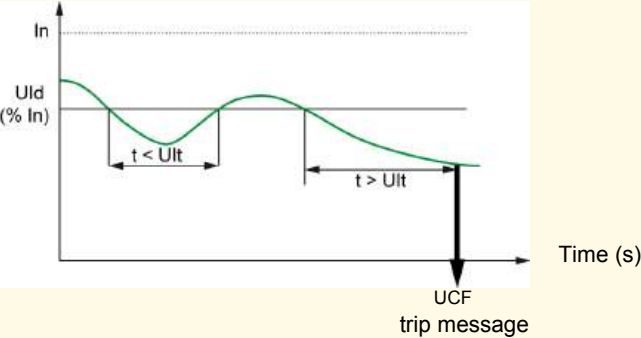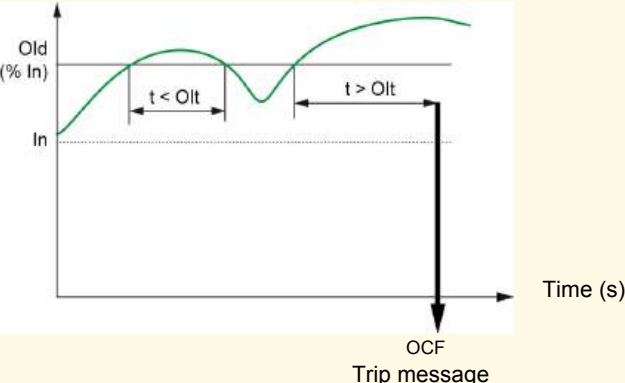
| Code | Name/Description | R/W | Adjustment range | Factory setting |
|----------------|--|-----|---|-----------------|
| PrO (1) | Advanced protections menu | | | |
| u i d | <input type="checkbox"/> Under current threshold Trips the soft starter when motor current drops below set level for a time longer than under current time delay (u i t). Active in running state. Note: Trip message is u C F . Current (A)  | R/W | Off, 20..90 (% i n) | oFF |
| u i t | <input type="checkbox"/> Under current time delay Adjusts the time delay linked with the parameter under current threshold u i d . | R/W | 1..40 s by increment of 1 s | 10 s |
| o i d | <input type="checkbox"/> Overcurrent threshold Trips the soft starter when motor current rises above a set level for a time longer than overcurrent time delay (o i t). Active in running state. Note: Trip message is o C F . Current (A)  | R/W | 100..300 (% i n) by increment of 5 | 200 % |

(1) Only available when **Advanced mode L R C** page **50** is set to **o n**.


Advanced protections menu (PrO)

| Code | Name/Description | R/W | Adjustment range | Factory setting |
|----------------|--|------|-----------------------------------|--------------------------------|
| PrO (1) | Advanced protections menu (continued) | | | |
| o i t | <input type="checkbox"/> Overcurrent time delay Adjusts the time delay linked with the parameter o i d . | R/W | 0.0 .. 5.0 by increment of 0.1 | 0.5 s |
| u b d | <input type="checkbox"/> Unbalance threshold Trips the soft starter in case of motor current unbalance, between 2 or 3 phases. This is depending also to the soft starter range. This is linked with the unbalance time delay u b t . Adjusts the motor current unbalance. Combined with unbalance delay u b t . Note: Trip message is PH b d . | R/W | Off, 10..100 (% of In) | 25 |
| u b t | <input type="checkbox"/> Unbalance time delay Adjusts the time of unbalance threshold u b d . | R/W | 1..60 s by increment of 1 | 10 s |
| Gr d d | <input type="checkbox"/> Ground leakage current threshold Only in the ATS22●●●S6 range and ATS22●●●S6U ranges Automatically set to o F F on ATS22●●●Q range Combined with Ground leakage current time delay (Gr d t). Note: Trip message is Gr d F . | R/W | Off, 10..100 % of In | 25 for S6 and S6U oFF for Q |
| Gr d t | <input type="checkbox"/> Ground leakage current time delay Adjusts time delay of ground leakage current threshold Gr d d . | R/W | 1..60 s | 5 s |
| PH r | <input type="checkbox"/> Phase sequence <input type="checkbox"/> 3 2 1: reverse (L3 - L2 - L1) <input type="checkbox"/> 1 2 3: Forward (L1 - L2 - L3) <input type="checkbox"/> Off: not monitoring If the line phases are not in the order configured, the soft starter trips and displays P i F . Note: When d L t A is set to d L t (the soft starter is connected Inside delta connection), PH r is forced to 1 2 3 . In this case, PH r value is not used and is not relevant. | R/W* | | oFF |

(1) Only available when **Advanced mode L A C** page 50 is set to **o n**.

*: Write only when the soft starter is stopped


Advanced protections menu (PrO)
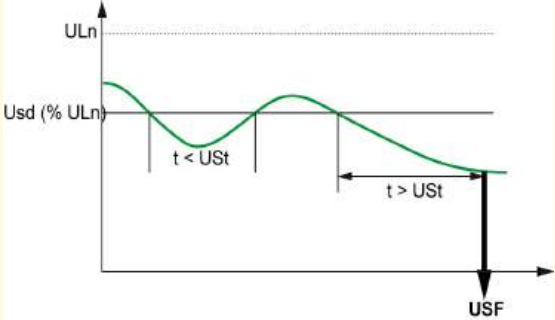
| Code | Name/Description | R/W | Adjustment range | Factory setting |
|-----------------------------|--|------|---------------------------|-----------------|
| PrO (1) | Advanced protections menu (continued) | | | |
| PHL on off | <input type="checkbox"/> Phase loss detection Manage the input (or line) phase loss controls. <input type="checkbox"/> on <input type="checkbox"/> off Note: Trip message is PHF . Note: The motor phase loss detection of the 3 phases is only active at the startup of the soft starter. It will not be detected if the loss occurred while the soft starter is already in running state. | R/W* | | On |
| uSd | <input type="checkbox"/> Under voltage threshold Trips the soft starter when the voltage drops below the set level for a time longer than under voltage time delay (uSt). Line voltage (V)  | R/W | 50..90 (% of uLn) | 70 % |
| uSt | <input type="checkbox"/> Under voltage time delay Adjusts the time of under voltage threshold uSd . | R/W | 1..10 | 5 s |

(1) Only available when **Advanced mode LRC** page **50** is set to **on**.

(2) Only available by Modbus.

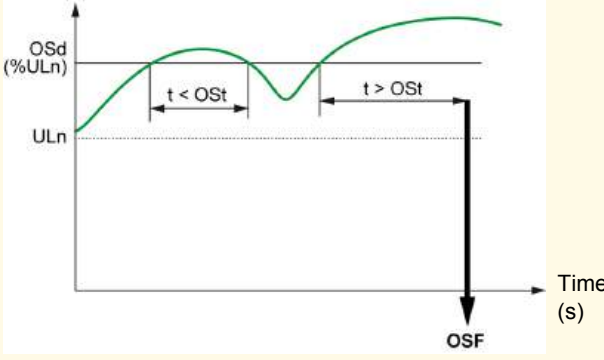

Advanced protections menu (PrO)

| Code | Name/Description | R/W | Adjustment range | Factory setting |
|--|---|------|--------------------------|-----------------|
| PrO (1) | Advanced protections menu (continued) | | | |
| o5d | <input type="checkbox"/> Over voltage threshold Trips the soft starter when mains voltage increases above the set level for a time longer than over voltage time delay (o5t). Line voltage (V)  | R/W* | 110..125 % of uLn | 120 % |
| o5t | <input type="checkbox"/> Over voltage time delay Trips the soft starter when mains voltage increases above the set level for a time longer than overvolt delay. Note: Trip message is o5F . | R/W | 1..10 | 2 s |
| PtC | <input type="checkbox"/> PTC probes motor monitoring The PTC probes on the motor must be connected to the correct analog input (see page 25). This protection is independent of the Motor thermal protection tHP . Both types of protection can be used simultaneously. <ul style="list-style-type: none"> <input type="checkbox"/> off (No PTC probes are not activated) <input type="checkbox"/> on (PTC probes activated. Wire the probes) Note: Trip message is o5F . | R/W | | oFF |
| tEH | <input type="checkbox"/> Overload protection tEH determines if and when the overload protection is active <ul style="list-style-type: none"> <input type="checkbox"/> off: the overload protection is disabled <input type="checkbox"/> Erun: the overload protection is enable only during the steady state (run) <input type="checkbox"/> On: the overload protection is always enable. Note: Trip message is oLF . tEH set to oFF resets the thermal state of the motor when the soft starter is stopped. | R/W* | | On |
| oFF Erun on | <h2>CAUTION</h2> <p>RISK OF DAMAGE TO THE SOFT STARTER AND THE MOTOR</p> <ul style="list-style-type: none"> • When tEH = oFF, it is recommended to use PtC probes to protect the motor against overheating. • When tEH = Erun, it is recommended to set tLS to the maximum start time of the installation, to protect the installation in case of motor stalling. <p>Failure to follow these instructions can result in equipment damage.</p> | | | |

(1) Only available when **Advanced mode LRC** page 50 is set to **on**.

*: Write only when the soft starter is stopped

Advanced IO menu (IO)

| Code | Name/Description | R/W | Adjustment range | Factory setting |
|---|--|------|------------------|-----------------|
| Advanced IO menu | | | | |
| L I 2 <i>S t a r t</i> <i>r u n</i> <i>2 n d</i> <i>E t F</i> <i>r S t</i> <i>F A n</i> <i>F I</i> <i>L I L</i> | <input type="checkbox"/> Logic input 2 <input type="checkbox"/> start: for a 3-wire control <input type="checkbox"/> run: for a 2-wire control <input type="checkbox"/> 2nd: 2nd set of parameters <input type="checkbox"/> EtF: external detected fault <input type="checkbox"/> rSt: remote reset <input type="checkbox"/> FAn: fan control <input type="checkbox"/> FI: trip inhibition: assigned after a continuous press of ENTER key during 2 s. <input type="checkbox"/> LIL: Forced local command (by control terminals) Note: the modification will be taken into account only at the next control power-on. | R/W* | | rUn |
|  DANGER | | | | |
| LOSS OF PERSONNEL AND EQUIPMENT PROTECTION <ul style="list-style-type: none"> Enabling Logic input to FI will disable the soft starter protection features, except PIF, PHF, SCF, CFF, trAP. It should not be enabled for typical applications of this equipment. It should be enabled only in extraordinary situations where a thorough risk analysis demonstrates that the presence of soft starter protection poses a greater risk than personnel injury or equipment damage. Failure to follow these instructions will result in death or serious injury. | | | | |
| L I 3 <i>2 n d</i> <i>E t F</i> <i>r S t</i> <i>F A n</i> <i>F I</i> <i>L I L</i> | <input type="checkbox"/> Logic input 3 <input type="checkbox"/> 2nd: 2nd set of parameters <input type="checkbox"/> EtF: external detected fault <input type="checkbox"/> rSt: remote reset <input type="checkbox"/> FAn: fan control <input type="checkbox"/> FI: trip inhibition: assigned after a continuous press of ENTER key during 2 s. <input type="checkbox"/> LIL: Forced local command (by control terminals) Note: the modification will be taken into account only at the next control power-on. | R/W* | | rSt |
|  DANGER | | | | |
| LOSS OF PERSONNEL AND EQUIPMENT PROTECTION <ul style="list-style-type: none"> Enabling Logic input to FI will disable the soft starter protection features, except PIF, PHF, SCF, CFF, trAP. It should not be enabled for typical applications of this equipment. It should be enabled only in extraordinary situations where a thorough risk analysis demonstrates that the presence of soft starter protection poses a greater risk than personnel injury or equipment damage. Failure to follow these instructions will result in death or serious injury. | | | | |

(1) Only available when **Advanced mode L A C** page 50 is set to **o n**.

*: Write only when the soft starter is stopped

Advanced IO menu (IO)

| Code | Name/Description | R/W | Adjustment range | Factory setting |
|--|---|------|------------------|-----------------|
| io (1) | Advanced IO menu (continued) | | | |
| r1 | <input type="checkbox"/> Relay 1 | R/W* | | nStP |
| StPd nStP StRt run rdY trIP ALr | <div style="text-align: center; background-color: black; color: white; padding: 5px;">⚠ DANGER</div> <p>UNINTENDED EQUIPMENT OPERATION</p> <p>It is mandatory that:</p> <ul style="list-style-type: none"> - One of the relay (R1 or R2) must be set to trIP. - Relay R1 or R2 set to trip must be wired in order to command a line contactor as shown on page 38 through 41. <p>Failure to follow these instructions will result in death or serious injury.</p> <ul style="list-style-type: none"> <input type="checkbox"/> stopped - Relay is energized at stop <input type="checkbox"/> not stopped - Relay is not energized at stop and is energized at all other times <input type="checkbox"/> starting - Relay is energized during the start process until the bypass contactor is closed <input type="checkbox"/> running - Relay is energized when the bypass contactor is closed <input type="checkbox"/> ready - Relay is energized when the soft starter is ready to be started (mains is connected, no trip and the maximum number of starts (Snb) is not reached) <input type="checkbox"/> trip - Relay is de-energized in case of trip <input type="checkbox"/> alarm - Relay is de-energized upon alarm, Overload alarm: thermal state of overload protection is above 110%. <p>Note: An alarm indicates the presence of non critical event.</p> | | | |
| r2 | <input type="checkbox"/> Relay 2 | R/W* | | trIP |
| | Same as r1 . | | | |
| FAn Auto on oFF HAnd | <input type="checkbox"/> Fan management | R/W | | AUto |
| | <ul style="list-style-type: none"> <input type="checkbox"/> auto: the soft starter manages automatically the fan. <input type="checkbox"/> on: always on <input type="checkbox"/> off: always oFF <input type="checkbox"/> Hand: manual Fan is controlled by a Logic input (LI2 or LI3) <div style="text-align: center; background-color: yellow; padding: 10px;">CAUTION</div> <p>RISK OF DAMAGE TO THE SOFT STARTER</p> <p>When FAn is set to oFF or HAnd, ensure that the soft starter mets the mounting recommendations described page 18.</p> <p>Failure to follow these instructions can result in equipment damage.</p> | | | |

(1) Only available when **Advanced mode LAC** page [50](#) is set to **on**.

*: Write only when the soft starter is stopped

Advanced communication menu (COP)

| Code | Name/Description | R/W | Adjustment range | Factory setting |
|---|--|------|---------------------|-----------------|
| COP Advanced communication menu | | | | |
| ADD OFF 1 to 247 | <input type="checkbox"/> Modbus address <input type="checkbox"/> off <input type="checkbox"/> Modbus address Note: the modification will be taken into account only at the next control power-on. | R/W* | 1..247 | oFF |
| EBR | <input type="checkbox"/> Modbus baudrate Note: the modification will be taken into account only at the next control power on. With the remote keypad, set 19.2 Kbps | R/W* | 4.8, 9.6, 19.2 Kbps | 19.2 Kbps |
| FOR Bo1 BE1 Bn1 Bn2 | <input type="checkbox"/> Modbus format <input type="checkbox"/> 8 bit, odd parity, 1 stop bit <input type="checkbox"/> 8 bit, even parity, 1 stop bit <input type="checkbox"/> 8 bit, no parity, 1 stop bit <input type="checkbox"/> 8 bit, no parity, 2 stop bit Note: the modification will be taken into account only at the next control power-on. With the remote keypad, set 8E1 | R/W* | | 8E1 |
| ETO | <input type="checkbox"/> Modbus time out Note: 0.1s on keypad becomes 1 with Modbus (1/10th s value with Modbus). Trip message is S L F . <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p>⚠ WARNING</p> <p>LOSS OF CONTROL</p> <p>Check that the selection of Modbus time out will not endanger personnel or equipment in any way.</p> <p>Failure to follow this instruction can result in death or serious injury or equipment damage.</p> </div> | R/W* | 0.1..60.0 s | 5.0 s |
| CTRL LCL dbs | <input type="checkbox"/> Command channel <input type="checkbox"/> local command: with the control terminals <input type="checkbox"/> remote command: Modbus Note: During soft start and soft stop, parameters values written by Modbus are not taken into account. LI1 must be activated (LI1 = 1) to allow the remote command. | R/W* | | LCL |

(1) Only available when **Advanced mode LRC** page 50 is set to **on**.

*: Write only when the soft starter is stopped.

Advanced monitoring menu (SUP)

| Code | Name/Description | R/W | Range |
|--------------------|---|-----|---------|
| SUP | Advanced monitoring menu | | |
| StPr | <input type="checkbox"/> Last starting time Starting time is the duration to start the motor. | R | 0-999 s |
| StCL | <input type="checkbox"/> Last start maximum current Displays last starting maximum current. | R | 0-999 A |
| Lft | <input type="checkbox"/> Last trip Displays last trip message. See trip codes page 75 . | R | - |
| dICL | <input type="checkbox"/> Trip current Displays motor current value upon last trip. | R | 0-999 A |
| runT | <input type="checkbox"/> Total run time Displays motor total run time. | R | hours |
| Stnb | <input type="checkbox"/> Total number of starts Displays total number of starts. | R | - |
| dEFt | <input type="checkbox"/> Total number of trips Displays total number of trips. | R | - |
| dEF1 | <input type="checkbox"/> Trip history 1 Displays the trip message occurred before Lft. | R | - |
| dEF2 (1) | <input type="checkbox"/> Trip history 2 Displays the trip message occurred before dEF1. | R | - |
| dEF3 (1) | <input type="checkbox"/> Trip history 3 Displays the trip message occurred before dEF2. | R | - |
| dEF4 (1) | <input type="checkbox"/> Trip history 4 Displays the trip message occurred before dEF3. | R | - |
| dEF5 (1) | <input type="checkbox"/> Trip history 5 Displays the trip message occurred before dEF4. | R | - |
| dEF6 (1) | <input type="checkbox"/> Trip history 6 Displays the trip message occurred before dEF5. | R | - |
| dEF7 (1) | <input type="checkbox"/> Trip history 7 Displays the trip message occurred before dEF6. | R | - |
| dEF8 (1) | <input type="checkbox"/> Trip history 8 Displays the trip message occurred before dEF7. | R | - |
| dEF9 (1) | <input type="checkbox"/> Trip history 9 Displays the trip message occurred before dEF8. | R | - |


(1) Only available when **Advanced mode LRC** page [50](#) is set to **on**.

Utility menu (Util)

| Code | Name/Description | R/W | Adjustment range | Factory setting |
|--------------------|--|------|------------------|-----------------|
| u t i L (1) | Utility menu | | | |
| t E S t | <input type="checkbox"/> Soft starter self test Result <i>Good</i> <i>bad</i> . Possible causes : - Improper internal voltage, - Checksum error, - Disconnected keyboard, - Disconnected heatsink thermal sensor, - Disconnected bypass relay (frame size C). If the detected fault persists, contact Schneider Electric product support. | R/W* | On oFF | |
| u d P | <input type="checkbox"/> Soft starter software version Two first digits: version Two last digits: sub version | R | 0000..9999 | |
| F C S | <input type="checkbox"/> Back to factory settings <div style="background-color: black; color: white; text-align: center; padding: 5px;">⚠ DANGER</div> <div style="background-color: yellow; padding: 5px;">UNINTENDED EQUIPMENT OPERATION Check that the modification of the current configuration is compatible with the wiring diagram used. Failure to follow these instructions will result in death or serious injury.</div> After press "Enter", <i>S u r E</i> is displayed. After press "Enter", parameters go back to factory settings. | R/W* | | |
| r P r | <input type="checkbox"/> Reset of trip history and counters After press "Enter", <i>S u r E</i> is displayed. After press "Enter", trip history and counters are reset (<i>r n t</i> , <i>d E F I</i> to <i>d E F 9</i> in the <i>S u P</i> menu). | R/W* | | |

*: Write only when the soft starter is stopped

 (1) Accessible, except motor in run state, using the key shortcut



Command channel

Command channel: local or remote command

A command channel gives the possibility to command the motor by the soft starter (start, stop...). it can also read or write parameters.


In local command mode, the Altistart 22 can be set from the display terminal:

- Use the 4 keys to enter into the menu.

In remote command, the Altistart 22 soft starter can be set from the remote keypad:

- The remote keypad can be used in a similar way than the embedded keypad, it means that the HMI on the remote keypad has the same behavior as the HMI on the product.

Note: Some command channels can also read or write parameters.

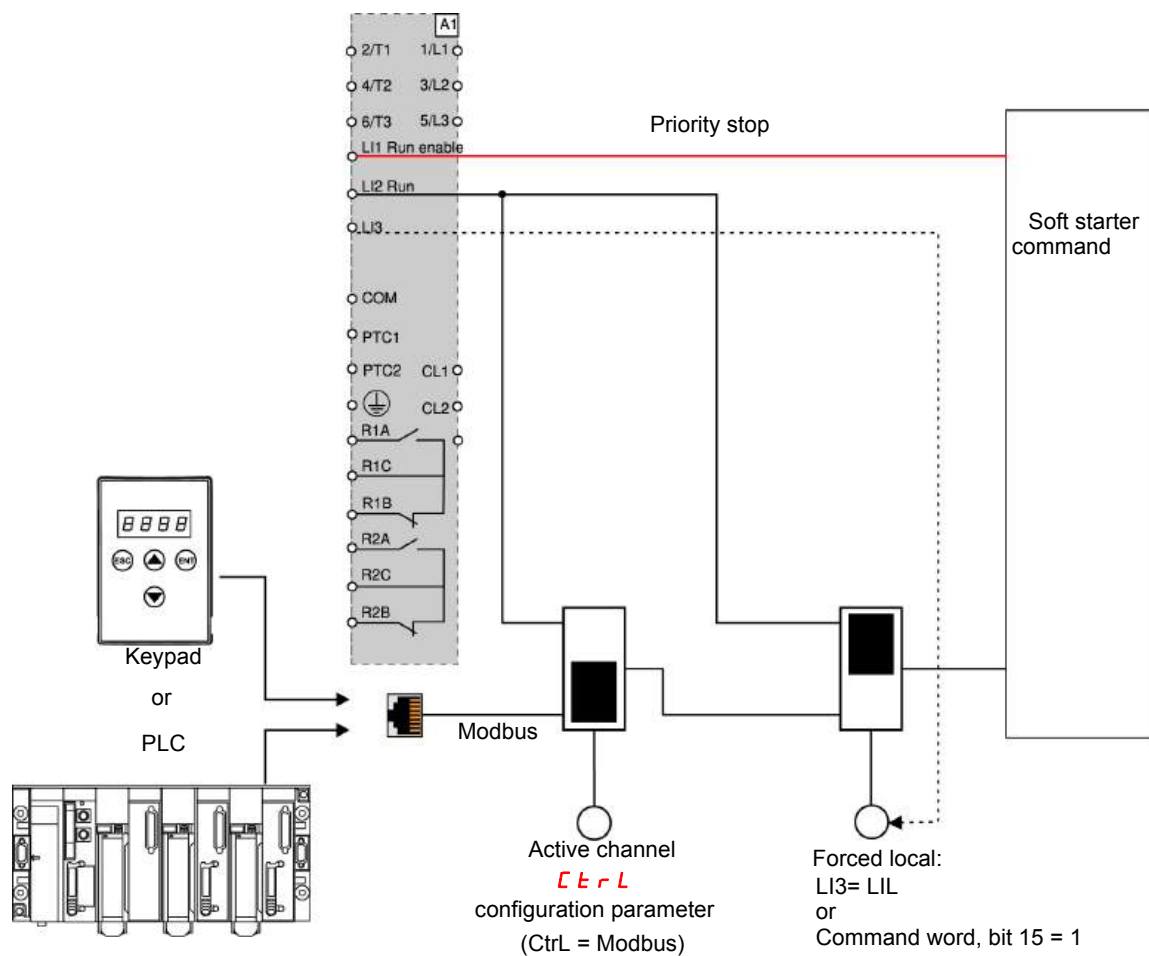

In this example, L13 is configured to forced local command (LIL).

If **Ctrl** = Modbus + forced local: it's forced local in first.

LOCAL mode: The soft starter is entirely controlled via the terminals. The parameters can be read and written via Modbus. The soft starter remains in LOCAL mode as long as the **Ctrl** = 0.

FORCED LOCAL mode: The soft starter is entirely controlled via the terminals. Write access to the parameters from the Modbus link is prohibited. Reading is possible.

Note: L11 must be activated (L11 = 1) to allow the remote command.

A switch can be used on L11 if a local stop by the terminal is needed. In this case, the stop will be in freewheel.

Command channel

Behavior on channel change

In the **COP** menu (Advanced communication), the active channel can be changed via **CTRL** parameter:

| Code | Name | Range | Default value |
|-------------|-----------------|---|---------------|
| CTRL | command channel | 0: local command 1: Remote command: Modbus | 0 |

CTRL parameter is a configuration parameter that can be modified when the motor is stopped.

In the **IO** menu (Advanced IO), a Logic input can be assigned to local command :

| Code | Name | Value |
|-----------------------------|-----------------------------------|-----------------------------------|
| L,2 or L,3 | Logic input 2 or logic input 3 | L,L : Forced Local command |

The local remote input is active at level 1.

When the input local remote is active, the active command channel is the local channel.

When the local force function is active from a Logic input, the parameters can only be written by the local HMI or the external keypad. If written by Modbus function 6 or 16, the exception 1 bad function is sent back.

When the local force function is active, Modbus command word and parameters can be written also by Modbus.

The Logic input assign to "Forced local command" has the priority on bit 15 from Modbus command word. If LI3 is assigned to LIL and LI3=1, even if bit 15=1 the "Forced local command" is active.

When CTRL = Modbus and LI force local command activated, then a Modbus request 6 or 16 sends back an exception code 1 illegal function.

When on Modbus, only LI1 stop is taken into account.

Command word

The control register write definition is changed as follows:

The Altistart 22 incorporates one control register intended for controlling the Altistart 22.

Address: The control register address is: 752.

In order to control the Altistart 22 using the control register:

- Use Function 16 or function 6
- Use Address_High (page) = 2
- Use Address_Low = 240 (0F0H)
- Write to one register only
- Set comm_control (**CTRL**) to 1 for Modbus

| Bit | Function | Comment |
|--------|-----------------------|--|
| bit 0 | RUN/STOP | Write "1" (On) to RUN Write "0" (oFF) to STOP, in configured stop (DEC parameter) |
| bit 1 | reserved | |
| bit 2 | reserved | |
| bit 3 | trip reset | Write "1" to reset |
| bit 4 | reserved | |
| bit 5 | reserved | |
| bit 6 | reserved | |
| bit 7 | reserved | |
| bit 8 | reserved | |
| bit 9 | reserved | |
| bit 10 | Freewheel stop | Write "1" to set freewheel deceleration, linked with bit 0 |
| bit 11 | 2nd set of parameters | Write "1" to enable second set of parameters |
| bit 12 | reserved | |
| bit 13 | reserved | |
| bit 14 | reserved | |
| bit 15 | Forced local command | Write "1" (On) forces local command |

Command channel

Status word

The Status register address is: 256

- Use Function 3 only
- Use Address_High (page) = 1
- Use Address_Low = 0 (00H)
- Read one register only

| Bit | Function | Comment |
|--------|----------------------|--|
| bit 0 | Ready | All the conditions that will permit the operation of a switching device by the remote host controller have been fulfilled. |
| bit 1 | On | The main circuit contacts are closed or the semiconductor switches of semiconductor switching device are in the conducting state (ACC, DEC and BYPASS). |
| bit 2 | Trip | A trip condition exists. |
| bit 3 | Warning | A warning condition exists. |
| bit 4 | Reserved | |
| bit 5 | LI3 | |
| bit 6 | LI2 | |
| bit 7 | LI1 | |
| bit 8 | (Motor current in %) | The motor current is expressed as a percentage of the motor rated current. Range is 0-200%. 6 bits code 200 % = 63 (decimal) = 111111 (binary) |
| bit 9 | | |
| bit 10 | | |
| bit 11 | | |
| bit 12 | | |
| bit 13 | | |
| bit 14 | Local control | The indication to a remote host controller that as a result of operator intervention, commands received will not be accepted or acted upon (forced local command). |
| bit 15 | Ramping | Accelerating or decelerating the motor. |

Modbus Function

This section describes the connection to the bus or network, signaling, diagnostics, and configuration of the communication-specific parameters via the 7-segment LED display. It also describes the communication services of the Modbus protocol.

Modbus Protocol

The transmission mode used is RTU mode. The frame contains no message header byte, nor end of message bytes. It is defined as follows:




The data is transmitted in binary code.

CRC16: cyclical redundancy check.

The end of the frame is detected on a silence greater than or equal to 3 characters.

Principle

The Modbus protocol is a master-slave protocol.

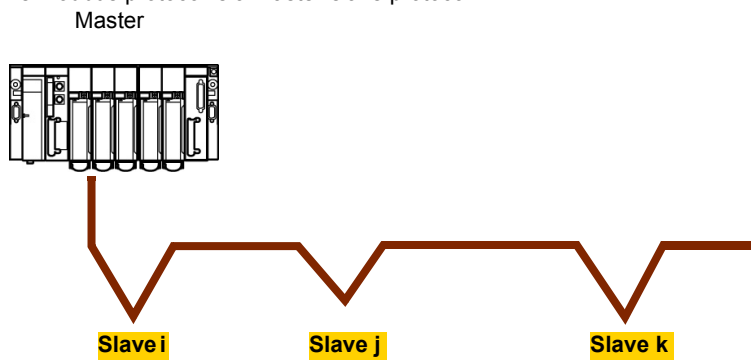

Only one device can transmit on the line at any time. The master manages the exchanges and only it can take the initiative. It interrogates each of the slaves in succession. No slave can send a message unless it is invited to do so. The master repeats the question when there is an incorrect exchange, and declares the interrogated slave absent if no response is received within a given time period. If a slave does not understand a message, it sends an exception response to the master. The master may or may not repeat the request.

Direct slave-to-slave communications are not possible.

For slave-to-slave communication, the application software must therefore be designed to interrogate a slave and send back data received to the other slave.

Two types of dialogue are possible between master and slaves:

- the master sends a request to a slave and waits for its response
- the master sends a request to all slaves without waiting for a response (broadcasting principle)

Addresses

- The soft starter Modbus address can be configured from 1 to 247.
- Address 0 coded in a request sent by the master is reserved for broadcasting. ATS22 take account of the request, but do not respond to it.

Supported Modbus functions

The Altistart 22 supports the following Modbus functions.

| Function name | Code | | Description | Remarks |
|---|------|-------|----------------------------|---------------------------|
| Read holding registers | 03 | 16#03 | Read N output words | Max PDU length : 63 words |
| Write one output word | 06 | 16#06 | Write one output word | |
| Write multiple registers | 16 | 16#10 | Write N output word | Max PDU length : 61 words |
| (Sub-function) Read device Identification | 43 | 16#2B | Read device identification | |

The service life of the EEPROM is limited to 500,000 write operations.

NOTICE

REDUCED SERVICE LIFE

In case of PLC program using Modbus protocol, verify that the program does not perform permanent writing. Each word write operation is saved in EEPROM except command word (752).

Failure to follow these instructions can result in equipment damage.

Modbus Function

The following paragraphs describes each supported function.

Read Holding registers

Request

| | | |
|-----------------------|---------|------------------|
| Function code | 1 Byte | 0x03 |
| Starting Address | 2 Bytes | 0x0000 to 0xFFFF |
| Quantity of Registers | 2 Bytes | 1 to 63 (0x 3F) |

Response

| | | |
|----------------|--------------|-------------|
| Function code | 1 Byte | 0x03 |
| Byte count | 1 Byte | 2 x N* |
| Register value | N* x 2 Bytes | |

*N: Quantity of Registers

Error

| | | |
|----------------|--------|--|
| Error code | 1 Byte | 0x83 |
| Exception code | 1 Byte | 01 or 02 or 03 or 04 (see details on page 72) |

Example

Note: Hi = high order byte, Lo = low order byte.

This function can be used to read all ATS22 words, both input words and output words.

Request

| | | | | |
|-----------|--------|------------------------------|----------------------------|------------------|
| Slave no. | 03 | No. of first word Hi Lo | Number of words Hi Lo | CRC16 Lo Hi |
| 1 byte | 1 byte | 2 bytes | 2 bytes | 2 bytes |

Response

| | | | | | | |
|-----------|--------|----------------------|-----------------------------|-------|----------------------------|------------------|
| Slave no. | 03 | Number of bytes read | First word value Hi Lo | ----- | Last word value Hi Lo | CRC16 Lo Hi |
| 1 byte | 1 byte | 1 byte | 2 bytes | | 2 bytes | 2 bytes |

Example: read 2 words 'ACC and DEC at Modbus address 19 and 20 to W3105 (16#0013 to 16#0014) in slave 2, using function 3, where:

- ACC - Acceleration = 10
- DEC - Deceleration = 0

| | | | | | | |
|----------|----|----|-------------|-------|-------|-------|
| Request | 02 | 03 | 0019 | 0002 | CRC16 | |
| Response | 02 | 03 | 04 | 000A | 0000 | CRC16 |
| | | | Value of: | W0019 | W020 | |
| | | | Parameters: | ACC | DEC | |

Modbus Function

Write one output word

Request

| | | |
|------------------|---------|------------------|
| Function code | 1 Byte | 0x06 |
| Register Address | 2 Bytes | 0x0000 to 0xFFFF |
| Register value | 2 Bytes | 0x0000 to 0xFFFF |

Response

| | | |
|------------------|---------|------------------|
| Function code | 1 Byte | 0x06 |
| Register Address | 2 Bytes | 0x0000 to 0xFFFF |
| Register value | 2 Bytes | 0x0000 to 0xFFFF |

Error

| | | |
|----------------|--------|--|
| Error code | 1 Byte | 0x86 |
| Exception code | 1 Byte | 01 or 02 or 03 or 04 (see details on page 72) |

Example

Request and response (the frame format is identical)

| | | | | |
|-----------|--------|-------------|---------------|---------|
| Slave no. | 06 | Word number | Value of word | CRC16 |
| | | Hi Lo | Hi Lo | Lo Hi |
| 1 byte | 1 byte | 2 bytes | 2 bytes | 2 bytes |

Example: write value 16#0008 in word W0022 (16#2329) in slave 2 Snb Number of starts 8.

| | | | | | |
|----------------------|----|----|------|------|-------|
| Request and response | 02 | 06 | 0016 | 0008 | CRC16 |
|----------------------|----|----|------|------|-------|

Modbus Function

Read Device Identification

| ID | Name / Description | Type |
|------|--------------------|--------------|
| 0x00 | VendorName | ASCII String |
| 0x01 | ProductCode | ASCII String |
| 0x02 | MajorMinorRevision | ASCII String |

Example

Default values to be detailed

Request

| | | | | | | |
|-----------|--------|-------------------|--------------------|-----------------|------------------|--|
| Slave no. | 2B | Type of MEI 0E | ReadDeviceId 01 | Object Id 00 | CRC16 Lo Hi | |
| 1 byte | 1 byte | 1 byte | 1 byte | 1 byte | 2 bytes | |

Response

| | | | | | | |
|-----------|--------|-----------------------------------|------------------------------|---|-------------------------|-------|
| Slave no. | 2B | Type of MEI 0E | ReadDeviceId 01 | Degree of conformity 02 | ----- | |
| 1 byte | 1 byte | 1 byte | 1 byte | 1 byte | | |
| ----- | | Number of additional frames 00 | | Next object Id 00 | Number of objects 03 | ----- |
| | | 1 byte | 1 byte | 1 byte | 1 byte | |
| ----- | | Id of object no. 1 00 | Length of object no. 1 12 | Value of object no. 1 "Schneider Electric" | | ----- |
| | | 1 byte | 1 byte | 18 bytes | | |
| ----- | | Id of object no. 2 01 | Length of object no. 2 0B | Value of object no. 2 "ATS22XXXXXX" | | ----- |
| | | 1 byte | 1 byte | 11 bytes | | |
| ----- | | Id of object no. 3 02 | Length of object no. 3 04 | Value of object no. 3 "0201" | | ----- |
| | | 1 byte | 1 byte | 4 bytes | | |
| ----- | | CRC16 Lo Hi | | | | |
| | | 1 byte | 1 byte | | | |

The total response size equals 49 bytes

The three objects contained in the response correspond to the following objects:

- Object no. 1: Manufacturer name (always "Schneider Electric", ie. 18 bytes).
- Object no. 2: Device reference (ASCII string; *for example*: "ATS22XXXXXX", ie. 11 bytes).
- Object no. 3: Device version, in "MMmm" format where "MM" represents the determinant and "mm" the subdeterminant (4-bytes ASCII string; *for example*: "0201" for version 2.1).

Note: The response to function 43 may be negative; in this case, the response located at the top of the next page is sent by the Altistart 22 rather than the response described above.

Modbus Function

Error management

Exception responses

An exception response is returned by a slave when it is unable to perform the request which is addressed to it.

Format of an exception response:

| | | | | |
|-----------|---------------|------------|---------|----|
| Slave no. | Response code | Error code | CRC16 | |
| | | | Lo | Hi |
| 1 byte | 1 byte | 1 byte | 2 bytes | |

Response code: request function code + 16#80.

Error code:

- 1 = The function requested is not recognized by the slave
- 2 = The bit or word addresses indicated in the request do not exist in the slave
- 3 = The bit or word values indicated in the request are not permissible in the slave
- 4 = The slave has started to execute the request but cannot continue to process it completely

CRC16 calculation

The CRC16 is calculated on all the message bytes by applying the following method:

Initialize the CRC (16-bit register) to 16#FFFF.

Enter the first to the last byte of the message:

```
CRC      XOR      <byte> → CRC
Enter    8 times
        Move the CRC one bit to the right
        If the output bit = 1, enter CRC XOR 16#A001 → CRC
End enter
End enter
```

The CRC obtained will be transmitted with the low order bytes sent first, followed by the high order ones (unlike the other data contained in Modbus frames).

XOR = exclusive OR.


Connection to RS485 bus

Standard schematic

The standard schematic corresponds to the Modbus specification published on the Modbus.org site in 2002 (Modbus_over_serial_line_V1.pdf, Nov 2002) and in particular to the schematic of the 2-wire multidrop serial bus.

The ATS22 follows this specification.

Schematic diagram:

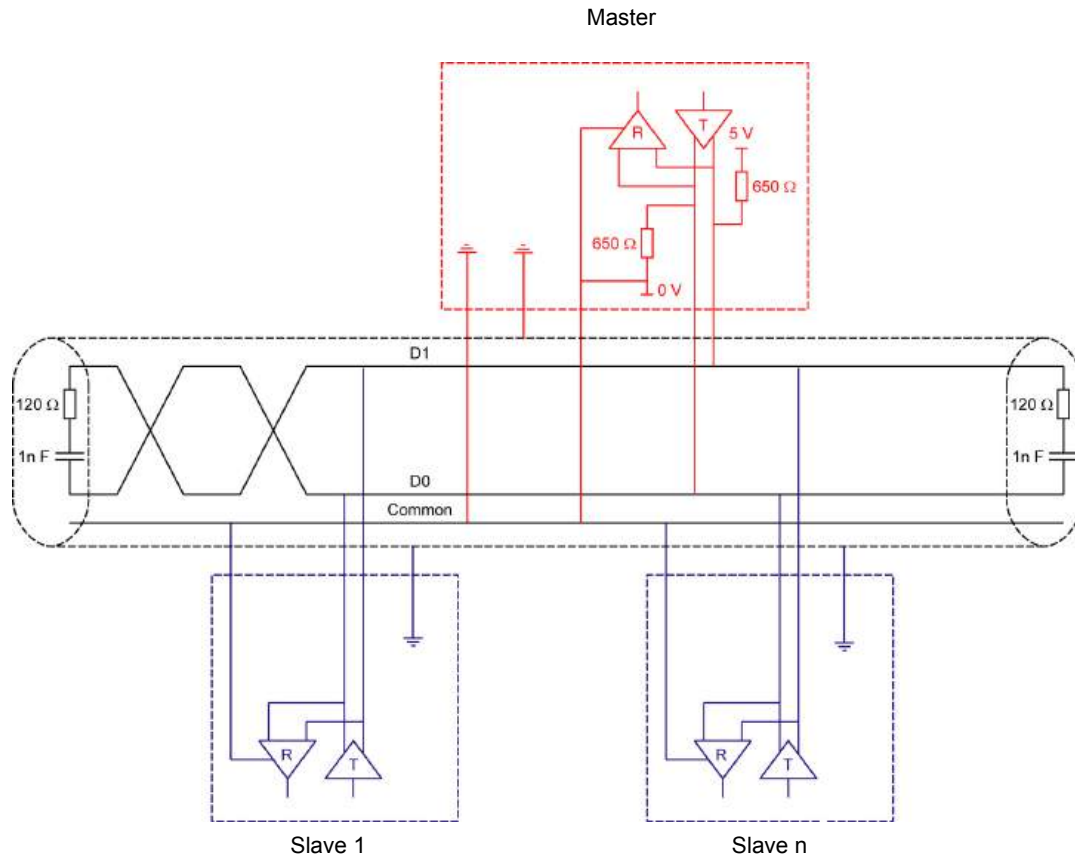

| | |
|---|--|
| Type of trunk cable | Shielded cable with 1 twisted pair and at least a 3 rd conductor |
| Maximum length of bus | 1000 m at 19200 bps with the Schneider Electric TSX CSA●●● cable |
| Maximum number of stations (without repeater) | 32 stations, ie. 31 slaves |
| Maximum length of tap links | <ul style="list-style-type: none"> • 20 m for one tap link • 40 m divided by the number of tap links on a multiple junction box |
| Bus polarisation | <ul style="list-style-type: none"> • One 450 to 650 Ω pulldown resistor at 5 V (650 Ω recommended) • One 450 to 650 Ω pulldown resistor at the Common (650 Ω recommended) This polarization is recommended for the master. |
| Line terminator | One 120 Ω 0.25 W resistor in series with a 1 nF 10 V capacitor |
| Common polarity | Yes (Common), connected to the protective ground at one or more points on the bus |

Maintenance

Servicing

It is advisable to perform the following actions regularly:

- Check the condition and tightness of connections.
- Ensure that the temperature around the unit remains at an acceptable level and that ventilation is effective (average service life of fans: 3 to 5 years depending on the operating conditions).
- Ensure proper fan operation.
- Remove any dust from the soft starter.
- Check physical damages to the soft starter.

Spare parts and repairs

Consult Schneider Electric products support.

Soft starter does not start, no trip code displayed

- No display:
 - check that the line supply is present on the control supply CL1/CL2,
 - check if a short circuit is not existing on the Modbus network cable (especially between RJ45 pin 7 and RJ45 pin3 or pin8. See pages [35](#) and [36](#)).
- Check that the code displayed does not correspond to the normal state of the soft starter (see page [46](#)).
- Check for the presence of the RUN/STOP commands (see page [37](#)).

Soft starter does not start, trip code displayed

- Trip code flashes on the display.
- Storing of the last 7 trips, visible with SoMove software workshop.
- The soft starter locks and the motor stop with to freewheel mode.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Read and understand the precautions in "Before you begin" chapter, before performing any procedure in this section.

Failure to follow these instructions will result in death or serious injury.

| Trip code displayed | Name | Remedy |
|---------------------|---|---|
| b P F | Bypass contactor detected fault | <ul style="list-style-type: none"> • Switch-off the soft starter and contact Schneider Electric services. |
| C F F | Invalid configuration on power-up | <ul style="list-style-type: none"> • Revert to the factory setting in the soft starter u E , L menu • Reconfigure the soft starter |
| E E F | External detected fault | <ul style="list-style-type: none"> • Clear the cause of the detected fault |
| G r d F | Ground leakage current detected fault | <ul style="list-style-type: none"> • Check the electrical insulation of the motor • Check the installation • Check the values of G r d d, G r d t parameters in P r o menu page 57 |
| i n F | Internal detected fault | <ul style="list-style-type: none"> • Disconnect and reconnect the control supply. If the detected fault persists, contact Schneider Electric product support |
| o C F | Motor overcurrent | <ul style="list-style-type: none"> • Check the values of o i d and o i t parameters in P r o menu page 56 |
| o H F | Over heat detected fault Low temperature detected fault | <ul style="list-style-type: none"> • Check the sizing of the soft starter in relation to the motor and the mechanical requirement • Check the operation of the fan (if the Altistart 22 used has one), ensuring that the air passage is not obstructed in any way and the heatsink is clean. Ensure that the mounting recommendations are observed • Wait for the Altistart 22 cooling before restarting, keeping the starter powered on |
| o L F | Overload motor | <ul style="list-style-type: none"> • Check the mechanism (wear, mechanical play, lubrication, blockages, etc.) • Check the sizing of the soft starter motor in relation to the mechanical requirement • Check the value of t H P parameter in S E t menu page 52 and i n parameter in c o n F menu page 50 • Wait for the motor to cool before restarting |
| o S F | Overvoltage | <ul style="list-style-type: none"> • Check u L n parameter in c o n F menu • Check the power supply circuit and voltage • Check o S d and o S t parameters in P r o menu |
| d t F | Motor Over Temperature • Motor thermal trip detected by the PTC probes | <ul style="list-style-type: none"> • Check the mechanism (wear, mechanical play, lubrication, blockages, etc.) • Check the sizing of the soft starter motor in relation to the mechanical requirement • Check the value of P t C setting in P r o menu page 59 • Wait for the motor to cool before restarting |

Diagnostics / Troubleshooting

| Trip code displayed | Name | Remedy |
|---------------------|---|--|
| PHbd | Phase unbalance | <ul style="list-style-type: none"> Check the line voltage. Check the values of ubd, ubt parameters in Pro menu page 57. |
| PHF | Loss of a line phase | <ul style="list-style-type: none"> Check the line voltage, the connection to the soft starter and any isolating devices located between the line and the soft starter (contactors, fuses, circuit breakers, etc.). Check the motor connection and any isolating devices located between the soft starter and the motor (contactors, circuit breakers, etc.). Check the motor state. |
| | Line frequency, out of tolerance This detected fault can be configured in Pro menu | <ul style="list-style-type: none"> Check the line frequency. Check the configuration of PHL. |
| PIF | Phase inversion Line phase inversion does not conform to the selection made by PHr in Pro menu | <ul style="list-style-type: none"> Invert two lines phases or set PHr = OFF. |
| ErrP | Trap code | <ul style="list-style-type: none"> Disconnect and reconnect the control supply. If the detected fault persists, contact Schneider Electric support. |
| SCF | Short circuit: <ul style="list-style-type: none"> short-circuit on soft starter output | <ul style="list-style-type: none"> Switch-off the soft starter. Check the motor connections and the motor insulation. If connections and insulation are OK, contact Schneider Electric services. |
| SLF | Modbus Time Out | <ul style="list-style-type: none"> Serial link detected fault. Check the RS485 connection. |
| SnbF | Too many starts | <ul style="list-style-type: none"> The number of soft starts has exceeded the maximum allowed by Snb in SLG period. See Snb page 53. |
| SSCr | Shorted thyristor or wrong connection | <ul style="list-style-type: none"> Switch-off the soft starter. Check the motor connections and the motor insulation. If connections and insulation are OK, contact Schneider Electric services. |
| SEF | Starting time detected fault <ul style="list-style-type: none"> Too long start time | <ul style="list-style-type: none"> Check the mechanism (wear, mechanical play, lubrication, blockages, etc.) Check that EL5 (Max start time) is bigger than ACC (Acceleration time). See SEt menu page 51. Check the sizing of the soft starter motor in relation to the mechanical requirement Check ILt value : if the value is too low, the motor may not reach acceleration and full speed. |
| tbS | Too many starts | <ul style="list-style-type: none"> Wait 5 minutes for frame size A. Wait 15 minutes for frame sizes B, C, D and E. <p>tbS appears after SnbF trip message, when trying to reset the soft starter before end of the timer.</p> |
| uCF | Motor underload (undercurrent) | <ul style="list-style-type: none"> Check the values of uid and uit parameters in Pro menu page 57. |
| uSF | Under voltage or no voltage | <ul style="list-style-type: none"> Check uin, uSd and uSt parameters in Pro menu Check line voltage. |

Remote keypad messages

| Display | Message | Description |
|-------------|----------|---|
| inib | | On initializing itself Microcontroller initializing. Communication configuration searching. |
| CoNE | flashing | Communication interruption It has 50 ms time out. This message is shown after 20 times retrying. |
| R-17 | flashing | Key alarm <ul style="list-style-type: none"> Key has been held consecutively more than 10 seconds. Membrane switch disconnected. Keypad waked up while a key is holding. |
| CLr | flashing | Confirm trip reset This is shown when : First time STOP key has been pressed while the soft starter has tripped in detected fault. |
| dEuE | flashing | Soft starter mismatch Soft starter type (brand) did not match with keypad type (brand). |
| roNE | flashing | ROM trip Keypad ROM detected fault. |
| rANE | flashing | RAM trip Keypad RAM detected fault. |
| CPuE | flashing | CPU trip Keypad CPU detected fault. |

Parameter Index and Modbus addresses

| Code | Page | Name | Unit | Modbus code and Adjustment Range (1) | Description | Modbus address | Factory setting | User setting |
|-------------|--------------------|--------------------------|------|---|--|----------------|-----------------|--------------|
| <i>ACC</i> | 52 | Acceleration time | s | <i>1 to 60</i> | - | 19 | 10 | |
| <i>ACC2</i> | 55 | 2nd acceleration time | s | <i>1 to 60</i> | - | 42 | 10 | |
| <i>Add</i> | 62 | Modbus address | - | 0 = <i>oFF</i> <i>1 to 247</i> | off Modbus address | 80 | oFF | |
| <i>bSt</i> | 53 | Boost time | s | <i>0.0? to ?1.0</i> | 1 with Modbus = 0.1s | 34 | 0 | |
| <i>Cod</i> | 50 | Setting lock | - | 0 = <i>nLoC</i> 1 = <i>LoC</i> | not locked locked | 4 | nLoc | |
| <i>CtL</i> | 62 | Command channel | - | 0 = <i>LCL</i> 1 = <i>dbS</i> | 0 – Local (LCL) 1 – Modbus (dbS) | 84 | LCL | |
| <i>dEC</i> | 52 | Deceleration time | s | 0 = <i>FrEE</i> <i>1 to 60</i> | freewheel deceleration - | 20 | FrEE | |
| <i>dEC2</i> | 55 | 2nd deceleration time | s | 0 = <i>FrEE</i> <i>1 to 60</i> | freewheel deceleration - | 43 | FrEE | |
| <i>dEF1</i> | 63 | Trip history 1 | - | 01 = <i>uCF</i> 02 = <i>oCF</i> 03 = <i>PHbd</i> 04 = <i>GrdF</i> | 01 = Motor underload (undercurrent) 02 = Motor overcurrent 03 = Phase unbalance 04 = Ground leakage current detected | 282 | - | |
| <i>dEF2</i> | 63 | Trip history 2 | - | 05 = <i>oLF</i> 06 = <i>oTF</i> 07 = <i>oHF</i> 08 = <i>PiF</i> 09 = <i>PHF</i> | 05 = Overload motor 06 = Motor Over Temperature 07 = Over heat detected fault 08 = Phase inversion 09 = Loss of a line phase | 283 | - | |
| <i>dEF3</i> | 63 | Trip history 3 | - | 10 = <i>uSF</i> 11 = <i>oSF</i> 12 = <i>StF</i> 13 = <i>SnbF</i> 14 = <i>SSCr</i> | 10 = Under voltage or no voltage 11 = Over Voltage 12 = Starting time detected fault 13 = Too Many Starts 14 = Shorted thyristor or wrong connection | 284 | - | |
| <i>dEF4</i> | 63 | Trip history 4 | - | 15 = <i>Etf</i> 16 = <i>Inf</i> 17 = <i>SLF</i> 18 = <i>trAP</i> 19 = <i>SCF</i> | 15 = External detected fault 16 = Internal detected fault 17 = Modbus Time Out 18 = Trap code 19 = Short-circuit | 285 | - | |
| <i>dEF5</i> | 63 | Trip history 5 | - | 20 = <i>bPF</i> 21 = <i>CFf</i> | 20 = Bypass contactor detected fault 21 = Invalid configuration on power-up | 286 | - | |
| <i>dEF6</i> | 63 | Trip history 6 | - | | | 287 | - | |
| <i>dEF7</i> | 63 | Trip history 7 | - | | | 288 | - | |
| <i>dEF8</i> | 63 | Trip history 8 | - | | | 289 | - | |
| <i>dEF9</i> | 63 | Trip history 9 | - | | | 290 | - | |
| <i>dEFt</i> | 63 | Total number of trips | - | - | - | 278 | - | |
| <i>dICL</i> | 63 | Trip current | A | <i>0 to 999</i> | - | 280 | - | |
| <i>dLtA</i> | 50 | Connection type | - | 0 = <i>LInE</i> 1 = <i>dLt</i> | in line connection inside delta connection | 1 | <i>LInE</i> | |
| <i>EdC</i> | 52 | End of deceleration | - | <i>0 to 10</i> | - | 21 | 0 | |
| <i>FAn</i> | 61 | Fan management | - | 0 = <i>Auto</i> 1 = <i>on</i> 2 = <i>oFF</i> 3 = <i>HAnd</i> | auto on off manual | 76 | <i>Auto</i> | |
| <i>FCS</i> | 64 | Back to factory settings | - | <i>1</i> | = 1 to perform FCS | 130 | - | |

(1) Modbus code = Soft starter message

example : *oFF* on the soft starter will be equivalent to "0" with Modbus protocol (remote command)

* : parameter visible only with Modbus

Parameter Index and Modbus addresses

| Code | Page | Name | Unit | Modbus code and Adjustment Range (1) | Description | Modbus address | Factory setting | User setting |
|----------------|-----------|-----------------------------------|-----------------|---|---|----------------|--|--------------|
| <i>F o r</i> | <u>62</u> | Modbus format | - | 0 = <i>B o 1</i> 1 = <i>B E 1</i> 2 = <i>B n 1</i> 3 = <i>B n 2</i> | 8 bit, odd parity, 1 stop bit 8 bit, even parity, 1 stop bit 8 bit, no parity, 1 stop bit 8 bit, no parity, 2 stop bit | 82 | <i>B E 1</i> | |
| Freq* | | Frequency | Hz | - | - | 265 | - | |
| <i>G r d d</i> | <u>57</u> | Ground leakage current threshold | % of <i>i n</i> | <i>10</i> to <i>100</i> <i>10 1</i> = <i>o F F</i> | - Off | 54 | 25 for S6 and S6U OFF for Q | |
| <i>G r d t</i> | <u>57</u> | Ground leakage current time delay | s | <i>1</i> to <i>60</i> | - | 55 | 5 | |
| <i>i c L</i> | <u>50</u> | Soft starter rated current | A | - | - | 0 | Read from the power card's serial EEPROM | |
| IG* | | Integral gain | % | 0 to 100% | This parameter is reserved for expert mode. Active when <i>5 5 C</i> = <i>o n</i> | 38 | 20 | |
| <i>i L t</i> | <u>51</u> | Current limit | % of <i>i n</i> | 200 to 700% max. value: 350% of <i>i c L</i> | - | 17 | 350 | |
| <i>i L t 2</i> | <u>55</u> | 2nd current limit | % of <i>i n</i> | 200 to 700% max. value: 350% of <i>i c L</i> | - | 41 | 350 | |
| <i>i n</i> | <u>50</u> | Motor rated current | A | 0.4 <i>i c L</i> to <i>i c L</i> | - | 3 | According to the soft starter rating | |
| <i>i n 2</i> | <u>55</u> | 2nd motor rated Current | A | 0.4 <i>i c L</i> to <i>i c L</i> | - | 44 | According to the soft starter rating | |
| <i>i t H</i> | <u>59</u> | Overload protection | - | 0 = <i>o F F</i> 1 = <i>r u n</i> 2 = <i>o n</i> | off run on | 63 | On | |
| <i>L R C</i> | <u>50</u> | Advanced mode | - | 0 = <i>o F F</i> 1 = <i>o n</i> | off on | 5 | oFF | |
| <i>L C r 1</i> | <u>47</u> | LCr1 | | Phase 1 Current, Amp | | 257 | | |
| <i>L C r 2</i> | <u>47</u> | LCr2 | | Phase 2 Current, Amp | | 258 | | |
| <i>L C r 3</i> | <u>47</u> | LCr3 | | Phase 3 Current, Amp | | 259 | | |
| LED* | | LEDS Status | | d4: COMM LED (0=OFF,1=ON) d6: Ready LED (0=OFF,1=ON) d7: Run LED (0=OFF,1=ON). Flashing during soft start / soft stop. d8: Trip LED (0=OFF,1=ON) Note: other bits are reserved. | | 269 | | |
| <i>L F t</i> | <u>63</u> | Last trip | - | same as dEF1 to dEF9 | | 279 | - | |

(1) Modbus code = Soft starter message

example : *o F F* on the soft starter will be equivalent to "0" with Modbus protocol (remote command)

* : parameter visible only with Modbus

Parameter Index and Modbus addresses

| Code | Page | Name | Unit | Modbus code and Adjustment Range (1) | Description | Modbus address | Factory setting | User setting |
|-------|------|-----------------------------|-------------------|---|--|----------------|-----------------|--------------|
| LI* | | Logical inputs | | d0: Input 1. 0 – open, 1 – closed. d1: Input 2. d2: Input 3. d3...d15: Reserved | | 261 | | |
| L12 | 60 | Logic input 2 | - | 0 = <i>St r t</i> 1 = <i>r u n</i> 2 = <i>2 n d</i> 3 = <i>E t F</i> 4 = <i>r S t</i> 5 = <i>F A n</i> 6 = <i>F i</i> 7 = <i>L i L</i> | start:for a 3-wire control run:for a 2-wire control 2nd set of parameters external detected fault remote reset fan control trip inhibition forced local command | 72 | rUn | |
| L13 | 60 | Logic input 3 | - | 2 = <i>2 n d</i> 3 = <i>E t F</i> 4 = <i>r S t</i> 5 = <i>F A n</i> 6 = <i>F i</i> 7 = <i>L i L</i> | 2nd set of parameters external detected fault remote reset fan control trip inhibition forced local command | 73 | rSt | |
| Lo | 47 | Logic Output relays status | | d0: Relay 1. 0 – not energized, 1 - energized d1: Relay 2 d2...d15: reserved | | 262 | | |
| o i t | 57 | Overcurrent time delay | s | 0 to 50 s | 5 with Modbus = 0.5s 50 with Modbus = 5.0s | 51 | 0.5 | |
| o i d | 56 | Overcurrent threshold | % of <i>i n</i> | 100 to 300, by increment of 5 | - | 50 | 200 | |
| o S d | 59 | Over voltage threshold | % of <i>u L n</i> | 110 to 125 | - | 60 | 120 | |
| o S t | 58 | Under voltage time delay | s | <i>1</i> to <i>10</i> | - | 61 | 2 | |
| PG* | | Proportional gain | % | 0 to 100% | This parameter is reserved for expert mode. Active when <i>S S C</i> = <i>o n</i> | 37 | 60 | |
| PHL | 58 | Phase loss detection | - | 0 = <i>o F F</i> 1 = <i>o n</i> | off on | 57 | On | |
| PHr | 57 | Phase sequence | - | 0 = <i>1 2 3</i> 1 = <i>3 2 1</i> 2 = <i>o F F</i> | 123 321 off | 56 | oFF | |
| PtC | 59 | PTC probes motor monitoring | - | 0 = <i>o F F</i> 1 = <i>o n</i> | off on | 62 | oFF | |

(1) Modbus code = Soft starter message

example : *o F F* on the soft starter will be equivalent to "0" with Modbus protocol (remote command)

* : parameter visible only with Modbus

Parameter Index and Modbus addresses

| Code | Page | Name | Unit | Modbus code and Adjustment Range (1) | Description | Modbus address | Factory setting | User setting |
|--------------|--------------------|------------------------------------|-------|--|---|----------------|-----------------|--------------|
| <i>r 1</i> | 61 | Relay 1 | - | 0 = <i>StPd</i> 1 = <i>nStP</i> 2 = <i>StPt</i> 3 = <i>run</i> 4 = <i>rdY</i> 5 = <i>trIP</i> 6 = <i>ALr</i> | stopped not stopped starting running ready trip alarm | 74 | nStP | |
| <i>r 2</i> | 61 | Relay 2 | - | as <i>r 1</i> | as <i>r 1</i> | 75 | trIP | |
| <i>rnt</i> | 63 | Total run time | hours | - | - | 273 | - | |
| <i>rPr</i> | 64 | Reset of trip history and counters | - | - | - | NA | - | |
| <i>S iCL</i> | 63 | Last start maximum current | A | <i>0 to 999</i> | - | 276 | - | |
| <i>SLG</i> | 53 | Starts period | min | <i>1 to 60</i> | - | 33 | 30 | |
| <i>Snb</i> | 53 | Number of starts | - | <i>1 to 10</i> <i>11 = oFF</i> | Number of starts off | 32 | oFF | |
| <i>SPCu</i> | 54 | Start-stop profile control voltage | - | <i>0</i> <i>1</i> <i>2</i> <i>3</i> | 0 1 2 3 | 36 | 0 | |
| <i>SSC</i> | 54 | Start-stop control | - | 0 = <i>oFF</i> 1 = <i>oN</i> | off on | 35 | On | |
| <i>Stnb</i> | 63 | Total number of starts | - | - | - | 274 | - | |
| <i>StPr</i> | 63 | Last starting time | s | <i>0 to 999</i> | - | 275 | - | |
| <i>t 90</i> | 51 | Initial voltage | % | 10 to 50% of full voltage, by increment of 5 | - | 16 | 30% | |
| <i>t 92</i> | 55 | 2nd initial voltage | % | 10 to 50% of full voltage <i>uLn</i> , by increment of 5 | - | 40 | 30% | |

(1) Modbus code = Soft starter message

example : *oFF* on the soft starter will be equivalent to "0" with Modbus protocol (remote command)

* : parameter visible only with Modbus

Parameter Index and Modbus addresses

| Code | Page | Name | Unit | Modbus code and Adjustment Range (1) | Description | Modbus address | Factory setting | User setting |
|-------------|--------------------|-------------------------------|-------------------|---|--|----------------|---------------------------------------|--------------|
| <i>tbr</i> | 62 | Modbus baudrate | Kbps | 0 = <i>4.8</i> 1 = <i>9.6</i> 2 = <i>19.2</i> | - | 81 | 19.2 | |
| <i>tEst</i> | 64 | Soft starter self test | - | on off | on off | NA | - | |
| <i>tHP</i> | 52 | Motor thermal protection | - | 1 = <i>10</i> 2 = <i>20</i> 3 = <i>30</i> | class 10 class 20 class 30 (heavy duty) | 22 | 10 | |
| <i>tLS</i> | 51 | Max start time | s | <i>1</i> to <i>250</i> | - | 18 | 15 | |
| <i>tto</i> | 62 | Modbus time out | s | 1 = <i>0.1</i> to 600 = <i>60.0</i> | 1 with Modbus = 0.1s 600 with Modbus = 60.0s | 83 | 5.0 | |
| <i>ubd</i> | 57 | Unbalance threshold | % of <i>in</i> | 101 = <i>oFF</i> 10 to 100% | - | 52 | 25 | |
| <i>ubt</i> | 57 | Unbalance time delay | s | <i>1</i> to <i>60</i> | - | 53 | 10 | |
| <i>udP</i> | 64 | Soft starter software version | - | <i>0000</i> to <i>9999</i> | - | 317 | | |
| <i>uid</i> | 56 | Under current threshold | % of <i>in</i> | 0 = <i>oFF</i> 20 to 90% of <i>in</i> | - | 48 | oFF | |
| <i>uLn</i> | 50 | Line voltage | V | Q range: 200 to 440 S6-S6U ranges: 200 to 600 | - | 2 | Q range: 400 S6-S6U ranges: 480 | |
| <i>uit</i> | 56 | Under current time delay | s | <i>1</i> to <i>40</i> | - | 49 | 10 | |
| <i>uSd</i> | 58 | Under voltage threshold | % of <i>in</i> | 50 to 90% of <i>uLn</i> | - | 58 | 70 | |
| <i>uSt</i> | 58 | Under voltage time delay | s | <i>1</i> to <i>10</i> | - | 59 | 5 | |
| Voltage* | | Voltage | V | Line voltage, volts | | 260 | | |


(1) Modbus code = Soft starter message

example : *oFF* on the soft starter will be equivalent to "0" with Modbus protocol (remote command)

* : parameter visible only with Modbus

Annex 1: UL508 schematics

ATS22...Q or ATS22...S6: 230 V, 2-wire control, freewheel stop

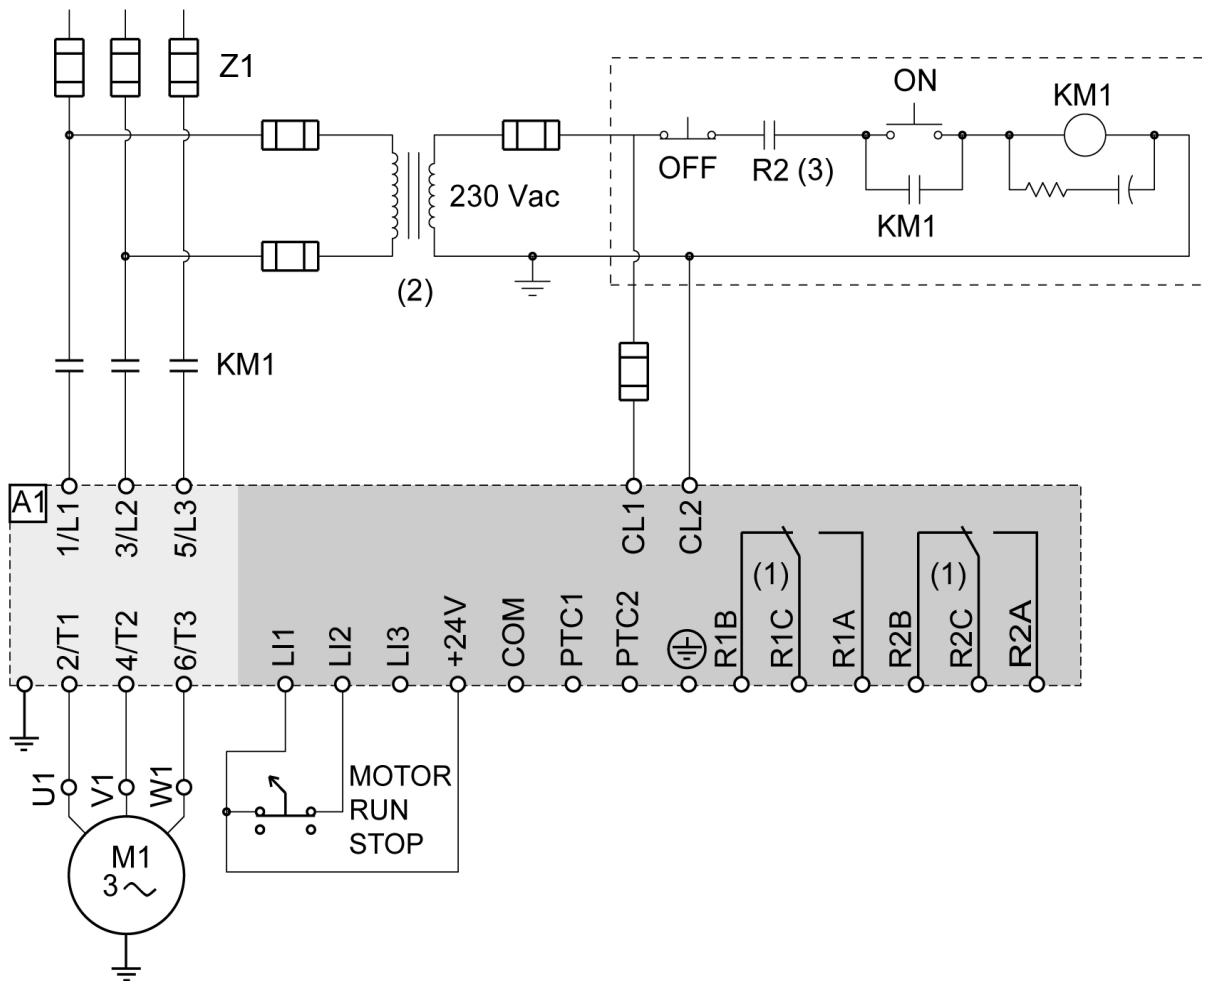

- (1) Check the operating limits of the contact, for example when connecting to high rating contactors. See “Electrical characteristics” page [35](#).
 (2) Insert a voltage transformer if the power voltage is higher than the Altistart 22 acceptable value. Characteristics: min 100 VA page [13](#).
 (3) Detected fault trip relay


2-wire control setting

In the menu Advanced I/O , set the following parameters:

| Parameter | Value | Description |
|--------------|----------------|--------------------------------------|
| <i>L i 2</i> | <i>r u n</i> | Logic Input 2 is set to Run |
| <i>r 2</i> | <i>t r L P</i> | Trip relay is de-energized upon trip |

Annex 1: UL508 schematics

ATS22...S6U: 110V, 2-wire control, freewheel stop

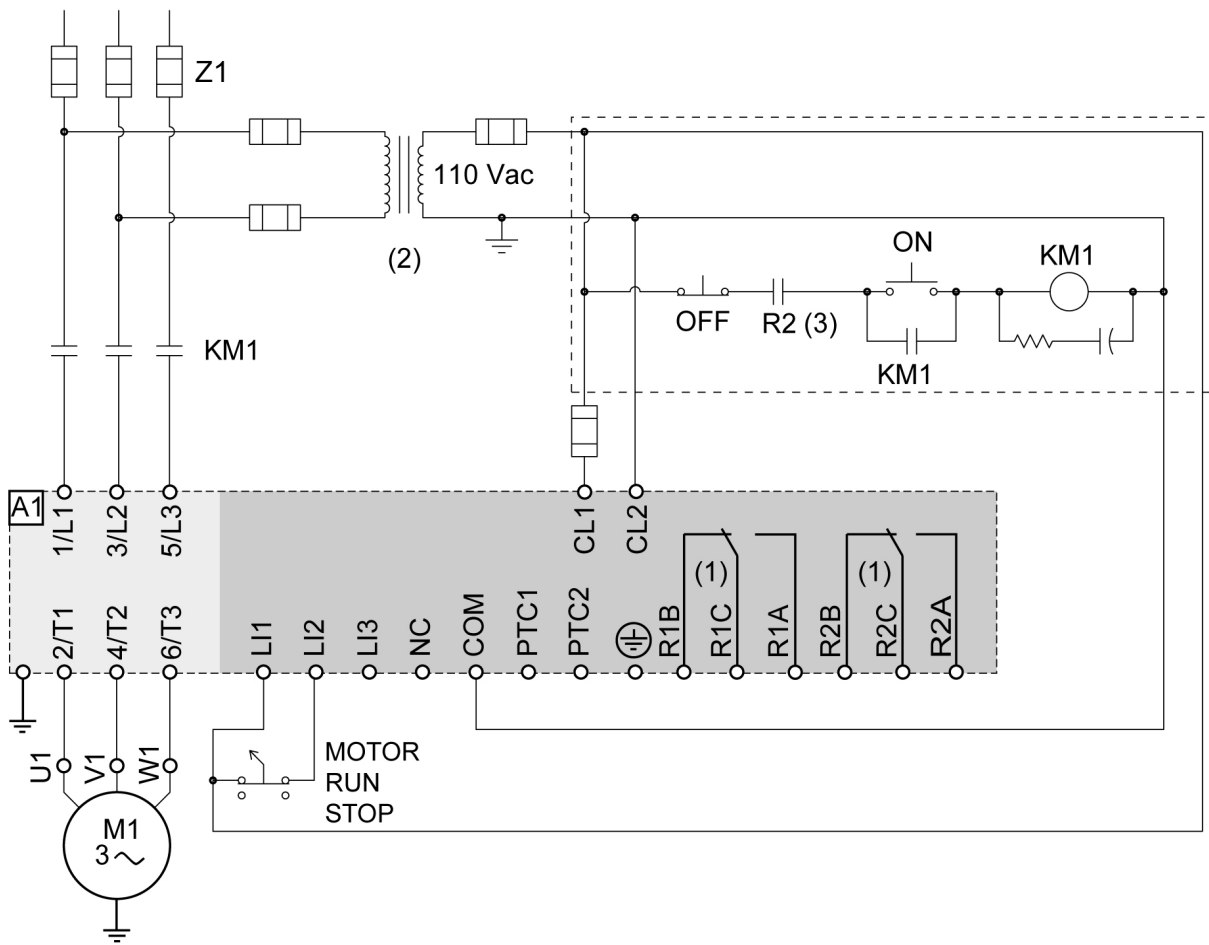

(1) Check the operating limits of the contact, for example when connecting to high rating contactors. See “Electrical characteristics” page [36](#).

(2) Insert a voltage transformer if the power voltage is higher than the Altistart 22 acceptable value. Characteristics: min 100 VA page [13](#).

(3) Detected fault trip relay

2-wire control setting

In the menu Advanced I/O **io**, set the following parameters:

| Parameter | Value | Description |
|-------------|-------------|-------------------------------------|
| L i2 | run | Logic Input 2 is set to Run |
| r2 | trLP | Trip relay is denegerized upon trip |

